

[Manuals.plus](#) /

> [Ayybboo](#) /

> Ayybboo 8206B Digital Kids Watch - User Manual

Ayybboo 8206B

Ayybboo 8206B Digital Kids Watch - User Manual

Model: 8206B | Brand: Ayybboo

1. PRODUCT OVERVIEW

The Ayybboo 8206B Digital Kids Watch is designed for children aged 4-14, offering a blend of functionality, durability, and child-friendly design. It features a vibrant 7-color LED backlight, making time reading easy in various lighting conditions. This watch includes essential functions such as an alarm, stopwatch, date and day of the week display, and 12/24-hour time format options. Its 30M water resistance makes it suitable for daily activities like hand washing and playing in the rain. The adjustable TPU strap ensures comfort, while the robust stainless steel case back and high-quality plastic glass contribute to its longevity.

2. KEY FEATURES

- **7-Color LED Backlight:** Provides clear visibility in the dark with multiple color options.
- **Multi-functional:** Includes alarm, stopwatch, date, and day of the week display.
- **12/24-Hour Mode:** Easily switch between standard and military time formats.
- **30M Water Resistance:** Suitable for splashes, rain, and hand washing. **Do not press buttons underwater.**
- **Durable Construction:** Features a soft, adjustable TPU strap, robust ABS case, and scratch-resistant acrylic glass.

3. COMPONENTS AND BUTTON FUNCTIONS

Familiarize yourself with the watch's buttons and their respective functions:

FEATURE SET



Image: Watch diagram illustrating the location and function of each button and display segment.

- **LIGHT Button (Top Left):** Activates the 7-color LED backlight. Press to cycle through colors or turn off.
- **MODE Button (Bottom Left):** Cycles through different display modes: Time, Stopwatch, Alarm Setting, Time/Date Setting.
- **START Button (Top Right):** Used to start/stop the stopwatch, adjust values during setting, or view the date.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, confirm settings, or switch between 12/24-hour format.

4. SETUP INSTRUCTIONS

4.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times until the seconds begin to flash.
2. Press the **RESET** button to select the item you wish to set (seconds, hour, minute, month, date, day of week). The selected item will flash.
3. Use the **START** button to adjust the flashing value. Hold **START** to change values faster.
4. After setting all desired values, press the **MODE** button once to return to the normal time display.

4.2 Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter the alarm setting mode. The hour digits will flash.
2. Press the **START** button to adjust the hour.
3. Press the **RESET** button to move to the minute setting. The minute digits will flash.
4. Press the **START** button to adjust the minutes.
5. Press the **MODE** button once to exit the alarm setting mode.
6. To turn the alarm ON/OFF, press and hold the **RESET** button while in the alarm display mode (press **MODE** twice). The alarm icon will appear/disappear.

4.3 Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. Press the **MODE** button to return to the normal time display.

5. OPERATING INSTRUCTIONS

5.1 Activating the LED Backlight

Press the **LIGHT** button (top left) to illuminate the display. Each press may cycle through different colors or turn the light off, depending on the model's specific light sequence.

LUMINOUS DISPLAY

A variety of color LED lights



Image: The watch display with its normal view and examples of the 7-color LED backlight in action.

5.2 Switching 12/24-Hour Format

While in the normal time display, press the **RESET** button to toggle between 12-hour (with 'AM'/'PM' indicator) and 24-hour (military time) formats.

6. WATER RESISTANCE GUIDELINES

This watch is rated for 30 meters (3ATM) water resistance. This means it is suitable for:

- Daily splashes
- Rain exposure
- Hand washing

Important Precautions:

- **DO NOT press any buttons while the watch is submerged in water.** This can compromise the water seal.
- Not suitable for swimming, diving, showering with hot water, or any activities involving high-pressure water.
- Avoid exposing the watch to extreme temperatures (hot or cold) as this can affect the water resistance seals.



Image: Visual representation of the watch's 30M water resistance, suitable for everyday water exposure.

7. MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** The watch uses a non-standard battery. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.
- **Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can damage the case, strap, or internal components.

8. TROUBLESHOOTING

- **Display is blank:** The battery may be depleted. Consider replacing the battery.
- **Time is incorrect:** Re-set the time following the instructions in Section 4.1. Ensure the 12/24-hour format is set correctly.
- **Alarm does not sound:** Check if the alarm is activated (alarm icon visible). Ensure the alarm time is set

correctly.

- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a soft reset (removing and reinserting the battery) might be necessary, but this should be done by a professional to preserve water resistance.

9. SPECIFICATIONS

Feature	Detail
Model Number	8206B
Display Type	Digital
Movement Type	Japanese Automatic (Digital Module)
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Dial Window Material	Plastic (Acrylic)
Band Material	Silicone (TPU)
Water Resistance Depth	30 Meters (3ATM)
Case Diameter	3.2 Centimeters (1.26 inches)
Case Thickness	1.2 Centimeters
Band Width	1.4 Centimeters (0.55 inches)
Band Length	22.5 Centimeters (8.86 inches)
Item Weight	21 Grams
Power Source	Battery Powered (1 non-standard battery required)
Special Features	Easy to Read, Luminous (LED), Alarm



Image: Detailed dimensions and material breakdown of the Ayybboo 8206B watch.

10. WARRANTY AND SUPPORT

This product comes with an extended warranty. For specific details regarding the warranty period and coverage, please refer to the documentation provided at the time of purchase or contact Ayybboo customer support. Spare parts availability information is currently not available. For any technical assistance or support inquiries, please contact the seller or manufacturer directly.