

7191

Desktop Dishwasher User Manual

Model: 7191

INTRODUCTION

Thank you for choosing the Desktop Dishwasher. This compact and efficient appliance is designed to simplify your dishwashing routine in small living spaces such as apartments, dormitories, and RVs. It features advanced cleaning technology, multiple wash modes, and safety features to ensure sparkling clean dishes with ease.

Please read this manual thoroughly before operating the dishwasher to ensure safe and optimal performance. Keep this manual for future reference.

PRODUCT OVERVIEW



The Desktop Dishwasher is a compact unit featuring a large panoramic view window on top, allowing you to monitor the washing process. It has a sleek, modern design suitable for countertop placement.

Key Features:

 
- **Compact Design:** Space-saving desktop unit ideal for small living spaces.
- **Door Safety Lock:** Prevents accidental opening during operation and protects from hot water burns.
- **Versatile Washing:** 5 distinct washing modes for various dish types.
- **Automatic Slag Discharge:** Eliminates manual cleaning of food particles.
- **Panoramic View Window:** Allows easy monitoring of washing progress.

SETUP

Unpacking:

Carefully remove the dishwasher from its packaging. Ensure all packing materials are removed from inside and outside the unit. The package includes the Dishwasher unit and a User Manual.

Placement:

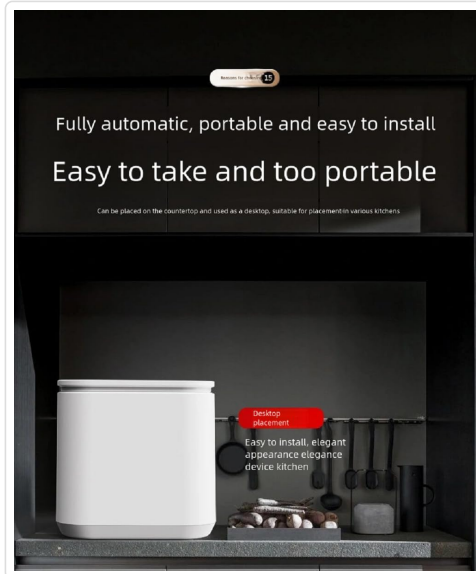

Place the dishwasher on a stable, level countertop or surface. Ensure there is adequate space around the unit for ventilation and hose connections. The compact dimensions of approximately 16"D x 17"W x 15.7"H make it suitable for various kitchen layouts.

Water Connection:

- Connect the inlet hose (approximately 1.5 feet long) to a suitable water supply.
- Ensure the inlet minimum pressure is at least 10 Pascal.
- Connect the outlet hose (approximately 60 inches long) to a drain or sink.

Power Connection:

Plug the dishwasher into a standard 220 Volt, 50 Hz power outlet. The unit has an energy consumption of 1.2 Kilowatts.

OPERATING INSTRUCTIONS

Loading Dishes:

 


The dishwasher features an adjustable double-layer dish rack designed to accommodate dishes for a family of 3-5 people, with a capacity of 6 liters. Load dishes, bowls, and utensils securely, ensuring they do not obstruct the spray arms.

Adding Detergent:

Add the recommended amount of dishwasher detergent to the dispenser. Refer to the detergent manufacturer's instructions for proper dosage.

Selecting a Wash Cycle:

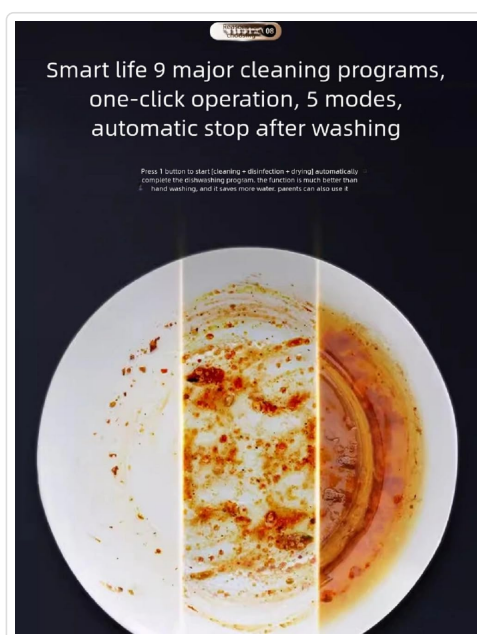

The dishwasher offers 5 distinct washing modes to suit various cleaning needs. These include:

- **Heavy:** For heavily soiled dishes.
- **Economy:** For lightly soiled dishes and energy saving.

- **Delicate:** For fragile items.
- **Normal:** Standard daily wash.
- **Rapid:** Quick wash for lightly soiled items.

Select the desired cycle using the electronic controls. The unit features a one-click operation to start the cleaning, disinfection, and drying program automatically.

Advanced Cleaning Technology:

72 high temperature bus cleaning
More crystal clear and translucent than hand washing, the oil removal effect is more outstanding

 
The high-temperature hot water has excellent degreasing stains, the tableware is brighter and can reduce the use of detergents. It saves consumables and is environmentally friendly and healthy

- Effectively remove staphylococcus aureus
- Effectively remove escherichia coli
- No alkaline residue
- No surface, active agent residue

72 degrees high temperature cleaning
After cleaning, the tableware is crystal clear and translucent, and the oil removal effect is more outstanding.

Hand wash in cold water
Residual oil and dirt will be left, and the more you wash it, the more "old" will be

This dishwasher utilizes 72-degree high temperature cleaning for effective degreasing and sterilization, removing common bacteria like staphylococcus aureus and escherichia coli. It ensures dishes are crystal clear and free from alkaline or active agent residue.

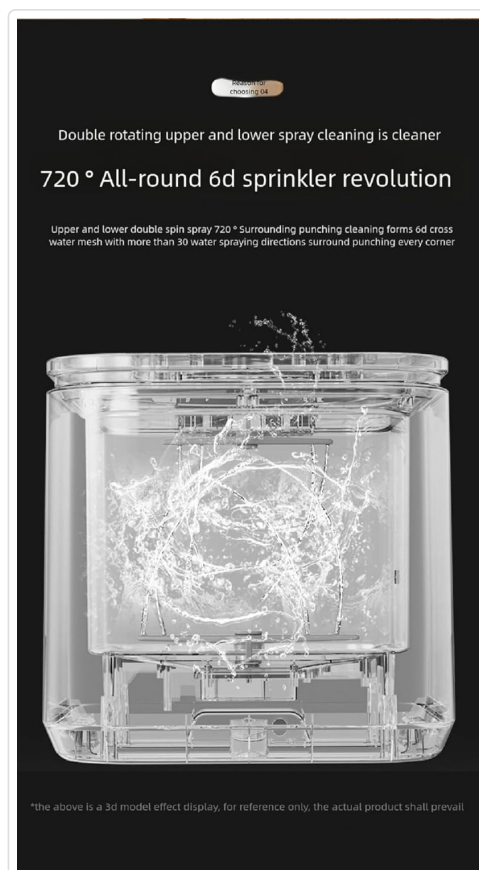

The unit features a 720-degree all-round 6D sprinkler revolution with double rotating upper and lower spray arms. This system provides more than 30 water spraying directions, ensuring comprehensive cleaning of every corner of your dishes.

Safety Features:



The dishwasher is equipped with a door security lock design that immediately powers off the unit if the door is opened during operation. This prevents accidental burns from hot water and steam, ensuring safety, especially around children.

Drying and Storage:



After the wash cycle, the dishwasher utilizes a circulating fresh air system for 72 hours of new air drying storage. This built-in antibacterial storage function ensures dishes are dry and fresh for an extended period, ready for use anytime without odor.

MAINTENANCE

Automatic Slag Discharge System:

Reasons for choosing

Automatic slag removal system

Say goodbye to manual slag

Using the principle of the pressure of the water pump, the residue is discharged through pressurization, the professional slag removal system design can discharge the residue of less than 1cm in diameter, and will not repeatedly contaminate the tableware inside the machine, making the tableware cleaner. No need to clean up the residue after washing, making it more comfortable to use.



The separation of slag and water is converted into clean water, re-washing is more energy-saving and water-saving

Kitchen residues cannot be discharged and need to be cleaned manually

The dishwasher features an automatic slag removal system. Residue is discharged through pressurization, with particles less than 1 cm in diameter. This system prevents residue from contaminating the tableware, making cleaning more convenient and eliminating the need for manual residue removal.

General Cleaning:

- Wipe the exterior of the dishwasher with a soft, damp cloth.
- Periodically check and clean the spray arms and filters to ensure optimal performance.
- Use a dishwasher cleaner as recommended by the manufacturer to prevent mineral buildup.

TROUBLESHOOTING

If you encounter any issues with your Desktop Dishwasher, please refer to the following common troubleshooting tips:

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the door is fully closed and latched. Check your home's circuit breaker.
- **Dishes not clean:** Verify that dishes are loaded correctly and not blocking spray arms. Ensure sufficient detergent is used and the correct wash cycle is selected. Check water pressure.
- **Water not draining:** Check the drain hose for kinks or blockages. Ensure the automatic slag discharge system is functioning correctly.
- **Unusual noises:** Ensure dishes are not rattling against each other or the spray arms.

For persistent issues or problems not listed here, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Generic
Model Number	7191
Product Dimensions	16"D x 17"W x 15.7"H
Item Weight	15.5 Pounds
Capacity	6 Liters
Voltage	220 Volts
Operating Frequency	50 Hz
Energy Consumption	1.2 Kilowatts
Annual Energy Consumption	200 Kilowatt Hours
Water Consumption	0.5 Gallons per Hour
Noise Level	55 dB
Number of Settings/Modes	5 (Heavy, Economy, Delicate, Normal, Rapid)
Material	High temperature resistant PC material, Glass, Metal
Finish Type	Stainless Steel
Color	White
Installation Type	Countertop
Inlet Hose Length	1.5 Feet
Outlet Hose Length	60 Inches
Manufacturer	Rarlon 123
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer, Rarlon 123, directly. Protection plans may also be available for extended coverage.