

## ROBOTIME RBT-1-WG403-1

# ROBOTIME Mud Kitchen Instruction Manual

Model: RBT-1-WG403-1

## 1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ROBOTIME Mud Kitchen. Designed for children aged 3 and above, this versatile outdoor play kitchen encourages imaginative play, sensory exploration, and skill development. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.

## 2. SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise children during play with the mud kitchen.
- **Age Recommendation:** Suitable for children aged 3 years and older. Small parts may pose a choking hazard for younger children.
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before allowing children to play.
- **Placement:** Place the mud kitchen on a flat, stable surface away from hazards such as steep drops, open flames, or bodies of water.
- **Material Safety:** The product is constructed from solid wood. Regularly inspect for splinters, loose parts, or damage. Discontinue use if damaged.
- **Water Use:** Use clean water in the faucet system. Do not allow children to drink water from the play faucet.

## 3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Wooden frame components
- Removable sink basin
- Working faucet with water tank
- 2 Stove tops
- Oven door and interior shelf

- 2 Wheels and axle
- Side handrails
- Cooking tools (spatula, ladle, etc.)
- Planting pots and watering can
- Assembly hardware (screws, bolts, nuts)
- Instruction manual

## 4. SETUP AND ASSEMBLY

Follow these steps carefully for proper assembly. A Phillips head screwdriver and possibly a wrench may be required (not included).

### 4.1 Unpacking and Part Identification


Carefully remove all components from the packaging. Lay them out and compare them against the package contents list to ensure everything is present.



**Figure 4.1:** Fully assembled ROBOTIME Mud Kitchen. This image shows the complete structure with sink, faucet, stove, oven, storage, and wheels.

## 4.2 Assembling the Base Frame

Begin by connecting the main vertical supports to the horizontal base pieces. Ensure all screws are tightened securely but do not overtighten.

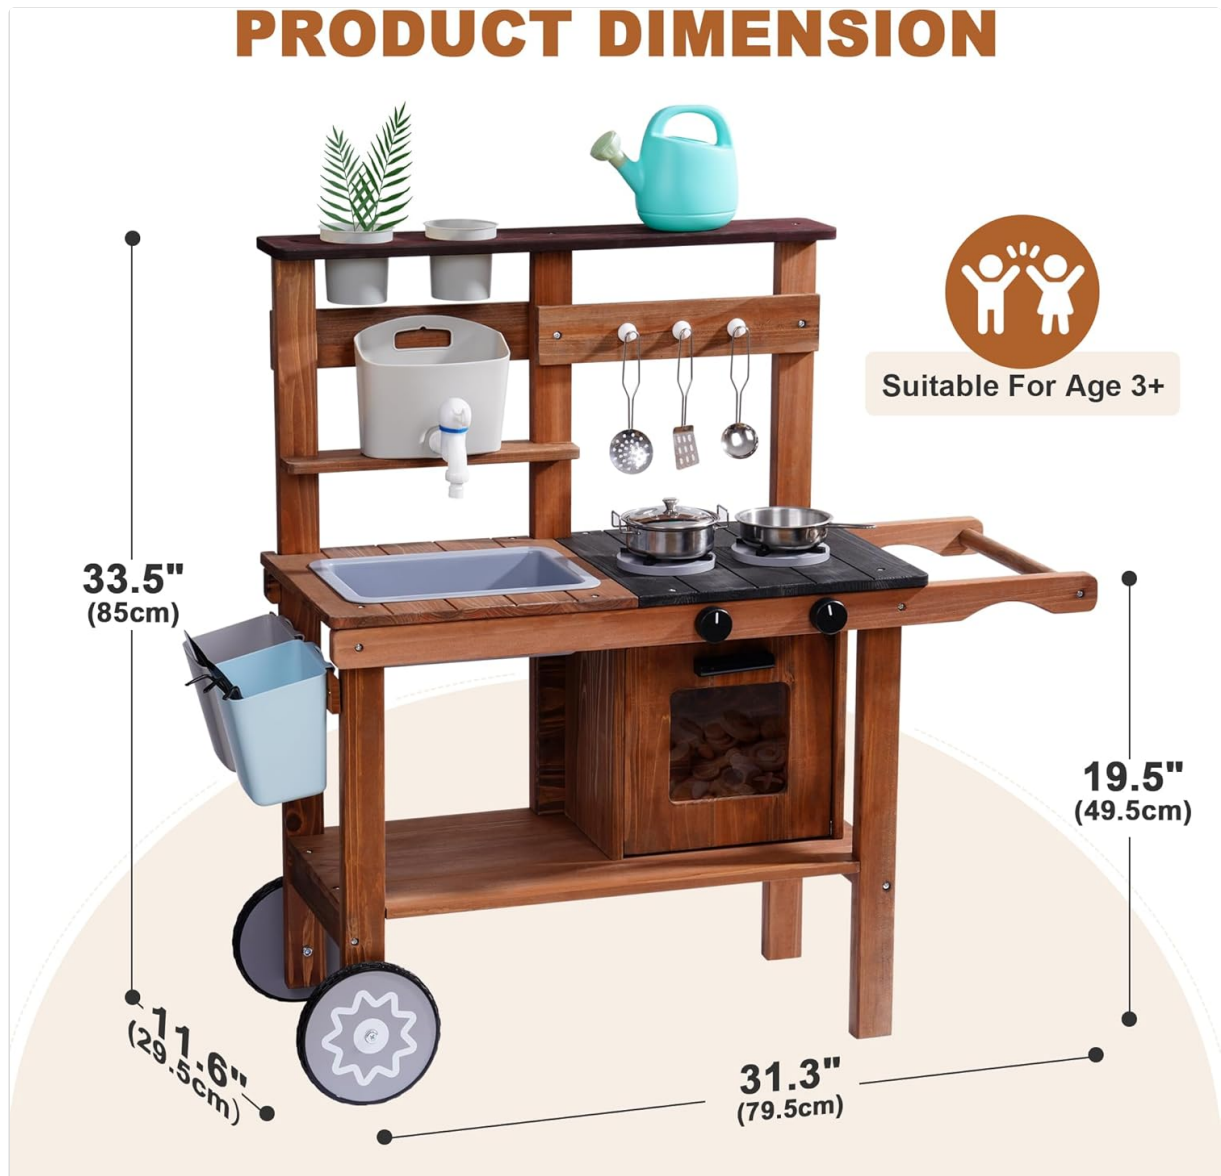 

**Figure 4.2:** Product dimensions. The mud kitchen measures approximately 31.3 inches (79.5 cm) in length, 11.6 inches (29.5 cm) in depth, and 33.5 inches (85 cm) in height. This provides a visual guide for space requirements.

## 4.3 Attaching the Wheels and Handle

Attach the two wheels to one side of the base frame using the provided axle and fasteners. Secure the side handrails to the opposite side for easy mobility.

# SIMULATED COOKING EXPERIENCE



**Figure 4.3:** Effortless and smooth movement. This image highlights the two rolling wheels and the easy-to-grip handlebar, demonstrating the kitchen's portability.

## 4.4 Installing the Sink, Faucet, and Stoves

Place the removable sink basin into its designated cutout. Attach the faucet to the water tank and position it on the shelf above the sink. Secure the two stove tops onto the main countertop.



# REALISTIC OUTDOOR PLAY KITCHEN SET

 


**Figure 4.4:** Realistic outdoor play kitchen set features. This image details the stove top, rotatable knob with click sound, water box and faucet, and the oven baking area, showing interactive elements.


## 4.5 Completing the Structure

 Install the oven door and any remaining shelves or hooks. Hang the cooking tools on the designated hooks. Place the planting pots and watering can on the top shelf.

# SOLID WOOD CONSTRUCTION

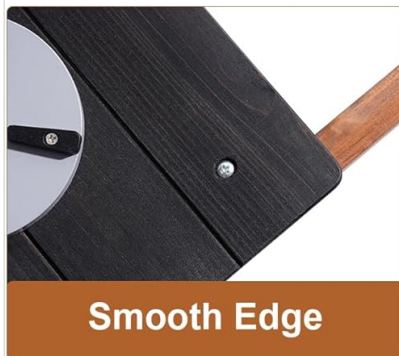

Smooth Edge

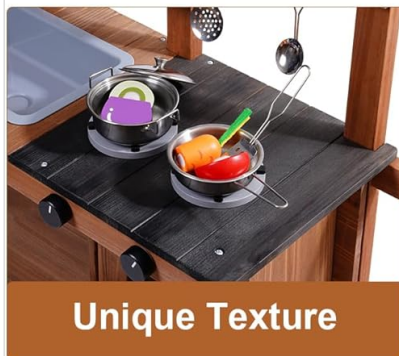

Unique Texture



Stable Legs



**Figure 4.5:** Solid wood construction details. This image showcases the smooth edges, unique wood texture, and stable legs, emphasizing the quality and durability of the materials.

## 5. OPERATING INSTRUCTIONS

### 5.1 Using the Faucet and Sink

Fill the water tank located above the sink with clean water. Turn the faucet handle to activate the water flow into the removable sink basin. After play, empty the sink and water tank to prevent stagnant water.

### 5.2 Stove and Oven Play

The stove knobs can be rotated to produce a satisfying 'click' sound, simulating real cooking. The oven door opens to allow for pretend baking and storage of play food items.

### 5.3 Mobility

To move the mud kitchen, lift the side with the handrails and roll it on its two wheels. Ensure the path is clear and stable before moving.

## 6. MAINTENANCE

- **Cleaning:** Wipe down all wooden surfaces with a damp cloth and mild soap as needed. Rinse the sink basin and water tank thoroughly after each use.
- **Drying:** Allow all components, especially wooden parts, to air dry completely after cleaning or water play to prevent mold or warping.
- **Storage:** While designed for outdoor use, storing the mud kitchen in a sheltered area during prolonged periods of harsh weather (heavy rain, direct sun, extreme cold) will extend its lifespan.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Inspect the wood for any signs of damage, splinters, or wear.

## 7. TROUBLESHOOTING

- **Water not flowing from faucet:**
  - Ensure the water tank is filled.
  - Check if the faucet handle is fully turned to the "on" position.
  - Inspect the faucet for any blockages.
- **Wobbly structure:**
  - Verify that all assembly screws are securely tightened.
  - Ensure the mud kitchen is placed on a flat, even surface.
- **Difficulty moving:**
  - Check if the wheels are clear of debris.
  - Ensure the ground surface is suitable for rolling.

## 8. SPECIFICATIONS

Feature	Detail
Brand	ROBOTIME
Model	RBT-1-WG403-1 (Mud Kitchen)
Material	Wood
Assembled Dimensions (L x D x H)	Approx. 31.3" (79.5 cm) x 11.6" (29.5 cm) x 33.5" (85 cm)
Item Weight	7.44 Kilograms
Age Range	Kid (3+ years)
UPC	730688421582

## 9. WARRANTY AND SUPPORT

ROBOTIME products are manufactured to high-quality standards. For any questions, concerns, or assistance with your Mud Kitchen, please contact ROBOTIME customer service. Please retain your proof of purchase for warranty claims.

For further assistance, please visit our official website or contact our support team directly.

