

45208-4

Travel Bag Set Anti Breakage - User Manual

Model: 45208-4

INTRODUCTION

This user manual provides essential information for the proper use, care, and maintenance of your Generic Travel Bag Set, Model 45208-4. This 4-piece set is designed for durability and convenience during your travels, featuring robust polypropylene construction and practical design elements.

The set includes four sizes: Large 28", Medium 24", Small 20" (Cabin), and Small 18".

KEY FEATURES

- **Durable Polypropylene Material:** Constructed from strong and durable PP material, offering impact and scratch resistance for extreme travel conditions.
- **Lightweight and Strong:** Polypropylene is lighter than aluminum and polycarbonate, making the bags easy to carry while maintaining high strength and break resistance.
- **Integrated TSA Locking System:** Each bag includes a built-in TSA-compatible locking system to secure contents and prevent unauthorized access.
- **Organized Interior:** The interior features pockets and straps designed to hold clothes and supplies securely and organized during transit.
- **Spinner Wheels:** Equipped with multi-directional spinner wheels for effortless pulling and movement across various surfaces.
- **Comfortable Handles:** Strong side and top handles provide comfortable lifting and carrying options. Adjustable straps may be present on some models for shoulder use.
- **Solid Sides:** Ensures structural integrity and protection for contents.



Image: The complete set of four travel bags, showcasing their design and varying sizes.

SETUP AND INITIAL USE

- 1. Unpacking:** Carefully remove all bags from their packaging. Inspect each bag for any signs of damage from shipping.
- 2. Telescopic Handle:** Extend the telescopic handle by pressing the button on the handle grip and pulling upwards until it locks into place. Ensure it extends smoothly.
- 3. Setting the TSA Lock:**
 - The initial combination is usually 0-0-0.
 - With the lock set to 0-0-0, push the reset button (a small, recessed button, often requiring a pen tip to press) until you hear a click.
 - Set your desired 3-digit combination by turning the dials.
 - Push the tab or lever (where the zipper pulls insert) in the direction of the arrow until you hear a click. Your new combination is now set.
 - Test your new combination to ensure it works before scrambling the dials.
- 4. Interior Straps and Pockets:** Familiarize yourself with the interior organization. Utilize the elastic cross-straps to secure packed items and the zippered pockets for smaller essentials.

OPERATING INSTRUCTIONS

- **Packing:** Distribute weight evenly within the suitcase to maintain balance and ease of movement. Use the internal compression straps to secure contents and prevent shifting.
- **Closing and Locking:** Ensure zippers are fully closed before inserting the zipper pulls into the TSA lock. Scramble the dials after locking to secure your belongings.
- **Maneuvering:** Utilize the 360-degree spinner wheels for smooth gliding in any direction. For rougher surfaces, tilt the bag and pull it on two wheels.
- **Lifting:** Use the top and side grab handles when lifting the luggage into overhead bins, onto luggage racks, or into vehicles.
- **Nesting:** The smaller bags can be nested inside the larger ones for compact storage when not in use.

CARE AND MAINTENANCE

- **Cleaning Exterior:** Wipe the polypropylene exterior with a damp cloth and mild soap. Avoid abrasive cleaners or solvents that could damage the finish.
- **Cleaning Interior:** Spot clean the interior lining with a damp cloth and mild detergent. Allow to air dry completely before closing.
- **Wheel Maintenance:** Periodically check wheels for debris (hair, lint) and remove them to ensure smooth operation. A small amount of silicone spray can be applied to the wheel axles if they become stiff.
- **Handle Care:** Ensure the telescopic handle retracts and extends smoothly. Do not force it if it gets stuck. Keep the handle mechanism free of dirt.
- **Storage:** Store the luggage in a cool, dry place away from direct sunlight when not in use. Nesting the bags can save storage space.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Telescopic handle stuck or difficult to extend/retract.	Debris in the mechanism, bent handle tubes, or excessive force.	Check for visible obstructions and remove them. Ensure the release button is fully pressed. Avoid forcing the handle. If bent, professional repair may be needed.
Wheels not rolling smoothly.	Hair, lint, or dirt caught in the wheel axles.	Turn the bag upside down and carefully remove any debris from around the wheels. A small amount of silicone lubricant can be applied to the axle.

Problem	Possible Cause	Solution
TSA lock not opening with correct combination.	Combination accidentally changed, or dials not perfectly aligned.	Ensure each number is precisely aligned with the indicator line. Try the original 0-0-0 combination. If still locked, refer to the lock's specific reset instructions (often involves pressing a reset button with a pen).
Zipper pulls not inserting into the lock.	Lock mechanism not aligned, or zipper pulls are misaligned.	Ensure the lock is in the unlocked position (usually by setting to the correct combination and pressing the release). Align both zipper pulls correctly before attempting to insert them.

SPECIFICATIONS

Attribute	Detail
Product Name	Travel Bag Set Anti Breakage
Model Number	45208-4
Brand	Generic
Material	Polypropylene (PP)
Set Pieces	4 (Large 28", Medium 24", Small 20" Cabin, Small 18")
Lock Type	Built-in TSA Type Locking System
Wheels	Spinner Wheels (360-degree)
Product Dimensions	75 x 45 x 30 cm; 1 kg
ASIN	B0F5QPDGMS

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the retailer's policy where the product was purchased or contact the Generic brand's customer service directly. Keep your purchase receipt as proof of purchase.

For general inquiries or assistance, please visit the official Generic website or contact their customer support channels.

