

[manuals.plus](#) /› [Fisher & Paykel](#) /› [Fisher & Paykel 836574 Humidity Control Lid User Manual](#)

Fisher & Paykel 836574

Fisher & Paykel 836574 Humidity Control Lid User Manual

Brand: Fisher & Paykel

1. INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your Fisher & Paykel 836574 Humidity Control Lid. This component is designed as a replacement part for compatible Fisher & Paykel refrigerator crisper bins, helping to maintain optimal humidity levels for fresh produce storage.

2. SETUP AND INSTALLATION

The Fisher & Paykel 836574 Humidity Control Lid is designed for easy replacement. Before installation, ensure that the lid is compatible with your specific refrigerator model and crisper bin. Refer to your refrigerator's original user manual for compatibility details if needed.

Installation Steps:

- 1. Remove Old Lid:** Carefully lift and remove the existing lid from the crisper bin.
- 2. Clean Bin (Optional):** If desired, clean the crisper bin before installing the new lid.
- 3. Position New Lid:** Align the new Fisher & Paykel 836574 Humidity Control Lid over the crisper bin. Ensure that any tabs or grooves on the lid align correctly with the bin's edges.
- 4. Secure Lid:** Gently lower the lid into place until it sits securely on the crisper bin. It should fit snugly to create an effective seal.



Figure 1: Angled view of the Fisher & Paykel 836574 Humidity Control Lid, showing its transparent design and structural details.



Figure 2: Top-down view of the Fisher & Paykel 836574 Humidity Control Lid, highlighting the humidity control vents and overall shape.

3. OPERATING INSTRUCTIONS

The humidity control lid features an adjustable vent designed to regulate the moisture level within the crisper bin,

extending the freshness of various produce types.

Adjusting Humidity:

- High Humidity Setting:** For leafy greens (e.g., lettuce, spinach, herbs), slide the control to the 'High Humidity' or 'Closed' position. This minimizes air circulation, trapping moisture inside the bin to prevent wilting.
- Low Humidity Setting:** For fruits and vegetables that release ethylene gas or prefer drier conditions (e.g., apples, pears, citrus, peppers), slide the control to the 'Low Humidity' or 'Open' position. This allows more air circulation, reducing moisture and preventing spoilage.

Experiment with settings to find the ideal environment for your specific produce. Avoid overcrowding the crisper bin to allow for proper air circulation and humidity control.

4. MAINTENANCE AND CARE

Regular cleaning of your humidity control lid will ensure optimal performance and hygiene.

Cleaning Instructions:

- Remove Lid:** Carefully lift the lid from the crisper bin.
- Hand Wash:** Wash the lid by hand using warm water and a mild dish soap. Avoid abrasive cleaners or scouring pads, as these can scratch the surface.
- Rinse Thoroughly:** Rinse the lid completely under running water to remove all soap residue.
- Dry:** Dry the lid thoroughly with a soft cloth or allow it to air dry completely before returning it to the refrigerator.

Note: Do not wash the lid in a dishwasher unless specifically indicated in your refrigerator's original manual, as high temperatures can cause warping or damage.

5. TROUBLESHOOTING

If you encounter issues with your humidity control lid, consider the following common solutions:

- Lid Does Not Fit Properly:**
 - Ensure the lid is correctly aligned with the crisper bin.
 - Verify that the lid model number (836574) matches the required part for your refrigerator model.
- Humidity Control Not Effective:**
 - Check that the humidity control slider is set to the appropriate position for the produce stored.
 - Ensure the crisper bin is not overfilled, which can impede air circulation.
 - Clean the lid and its vents to ensure no debris is obstructing the airflow.

If problems persist, contact Fisher & Paykel customer support for further assistance.

6. SPECIFICATIONS

Specification	Detail
Part Number	836574
Item Model Number	836574

Specification	Detail
Item Weight	8 ounces
Product Dimensions	26.73 x 15.94 x 1.65 inches
Included Components	LID HUMIDITY CTRL 790B
Manufacturer	Fisher & Paykel

7. WARRANTY AND SUPPORT

This Fisher & Paykel 836574 Humidity Control Lid is covered by the manufacturer's standard warranty. For specific warranty terms and conditions, please refer to the documentation provided with your original refrigerator appliance or visit the official Fisher & Paykel website.

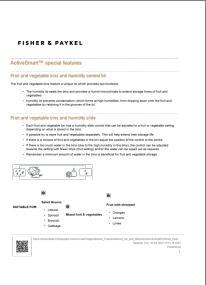
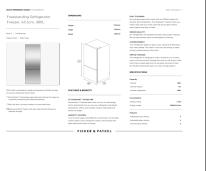
For technical support, replacement parts, or warranty claims, please contact Fisher & Paykel customer service directly. Have your refrigerator model and serial number, along with the part number (836574), ready when contacting support.

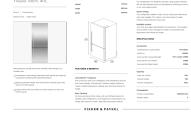
Fisher & Paykel Official Website: www.fisherpaykel.com

© 2025 Fisher & Paykel. All rights reserved.

This manual is for informational purposes only.

Related Documents - 836574

	<p><u>Fisher & Paykel ActiveSmart™ Refrigerator Special Features Guide</u></p> <p>Detailed overview of Fisher & Paykel ActiveSmart™ refrigerator features, including fruit and vegetable bins, humidity control, storage drawers, bottle holders, and manual ice systems for optimal food preservation and convenience.</p>
	<p><u>Fisher & Paykel Freestanding French Door Refrigerator Freezer 90cm 569L Ice & Water Quick Reference</u></p> <p>Quick reference guide for the Fisher & Paykel Freestanding French Door Refrigerator Freezer (90cm, 569L) with Ice & Water. Features ActiveSmart™ Foodcare, slimline water dispenser, and humidity control. Includes specifications and dimensions.</p>
	<p><u>Fisher & Paykel RF402BRPX6 Freestanding Refrigerator Freezer: Quick Reference Guide</u></p> <p>Detailed quick reference guide for the Fisher & Paykel RF402BRPX6 Freestanding Refrigerator Freezer. Features include ActiveSmart™ Foodcare, humidity control, energy efficiency, and spacious storage. Specifications, dimensions, and warranty information provided.</p>

	<p><u>Fisher & Paykel 36" Integrated French Door Refrigerator Freezer with Ice - Quick Reference Guide</u></p> <p>Quick reference guide for the Fisher & Paykel 36-inch Integrated French Door Refrigerator Freezer (RS36A80J1 N, SKU 25822). This document details features like ActiveSmart™ Foodcare, EZKleen stainless steel, and humidity control, alongside dimensions, specifications, and warranty information for seamless kitchen integration.</p>
	<p><u>Fisher & Paykel RF442BRXFD5 Refrigerator Freezer: Quick Reference Guide & Specs</u></p> <p>Explore the Fisher & Paykel RF442BRXFD5 freestanding refrigerator freezer. This guide covers dimensions, ActiveSmart™ Foodcare, EZKleen, energy efficiency, capacity, and specifications for the 68cm, 413L model.</p>
	<p><u>Fisher & Paykel RS36A7201N 36" Integrated French Door Refrigerator Freezer Quick Reference Guide</u></p> <p>Quick reference guide for the Fisher & Paykel RS36A7201N 36-inch Integrated French Door Refrigerator Freezer with Ice & Water. Features ActiveSmart™ Foodcare, spacious storage, and easy installation.</p>