

Paramount DVD

Paramount Locked DVD Instruction Manual

Model: DVD (ASIN: B0F5RHXGNN)

1. INTRODUCTION

This manual provides essential information for the proper use and care of your **Locked DVD**. The movie features a suspenseful thriller where a petty thief finds himself trapped inside a high-tech SUV, controlled remotely by its vengeful owner. This DVD is presented in widescreen format with English 5.1 Dolby Digital audio and English SDH subtitles. The film has a runtime of 2 hours and 5 minutes.



Image 1.1: Front cover of the Locked DVD.



Image 1.2: Promotional artwork for the movie Locked.



Image 1.3: Actor Bill Skarsgård, a key cast member in Locked.

2. SETUP

To begin watching your Locked DVD, follow these steps:

1. **Connect your DVD player:** Ensure your DVD player is properly connected to your television or display device using appropriate cables (e.g., HDMI, composite, component). Refer to your DVD player's manual for specific connection instructions.
2. **Power on devices:** Turn on your television and your DVD player.
3. **Select input:** Use your television remote to select the correct input source (e.g., HDMI 1, Video 1) that corresponds to your DVD player's connection.
4. **Insert the DVD:** Open the DVD tray or slot on your DVD player. Carefully place the **Locked DVD** with the label side facing up into the tray or slot. Close the tray or allow the player to draw the disc in.
5. **Wait for loading:** The DVD player will typically display a loading screen or the movie's main menu automatically.

3. OPERATING INSTRUCTIONS

Once the DVD has loaded, use your DVD player's remote control to navigate the disc's features.

- **Main Menu:** The DVD will usually start with a main menu. Use the arrow keys on your remote to highlight options like "Play Movie," "Scene Selection," "Audio Options," or "Subtitles." Press the "Enter" or "OK" button to select.
- **Play Movie:** Select "Play Movie" to start the film from the beginning.

- **Playback Controls:**
 - **Play/Pause:** Press to start or temporarily stop playback.
 - **Stop:** Press to end playback and return to the main menu or stop the disc.
 - **Fast Forward/Rewind:** Use these buttons to quickly advance or reverse through the movie.
 - **Skip:** Use chapter skip buttons (often double arrows) to jump to the next or previous chapter.
- **Audio Options:** From the main menu or during playback (using the "Audio" button on your remote), you can select the audio track. This DVD features English 5.1 Dolby Digital audio.
- **Subtitles:** From the main menu or during playback (using the "Subtitle" button on your remote), you can enable or disable subtitles. This DVD includes English SDH (Subtitles for the Deaf and Hard of Hearing).

4. CARE AND MAINTENANCE

Proper care of your DVD will ensure its longevity and optimal playback quality.

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe the playback surface with a soft, lint-free cloth (e.g., microfiber cloth). Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** Store the DVD in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the disc case.
- **Scratches:** Minor scratches may not affect playback, but deep scratches can cause skipping or playback errors. Handle discs with care to prevent damage.

5. TROUBLESHOOTING

If you encounter issues while playing your Locked DVD, try the following solutions:

Problem	Possible Solution
Disc does not play or load.	<ul style="list-style-type: none">• Ensure the disc is inserted correctly (label side up).• Check if the DVD player is powered on and connected to the correct TV input.• Clean the disc surface with a soft, lint-free cloth.• Try playing another DVD to confirm the player is functioning correctly.
Video or audio skipping/freezing.	<ul style="list-style-type: none">• Clean the disc surface for smudges or dust.• Inspect the disc for deep scratches. If severely scratched, replacement may be necessary.• Ensure the DVD player is on a stable surface to prevent vibrations.
No audio.	<ul style="list-style-type: none">• Check the volume level on your TV and DVD player.• Verify that audio cables are securely connected.• Ensure the correct audio track is selected in the DVD menu.

Problem	Possible Solution
No video.	<ul style="list-style-type: none">• Confirm the TV is set to the correct input source.• Check video cables for secure connection.• Try playing another DVD to isolate if the issue is with the disc or the player/TV.

6. SPECIFICATIONS

Feature	Detail
Title	Locked
Format	DVD
Studio	Paramount
Director	David Yarrowesky
Actors	Anthony Hopkins, Ashley Cartwright, Bill Skarsgård, Michael Eklund, Navid Charkhi
MPAA Rating	R (Restricted)
Run Time	2 hours and 5 minutes (125 minutes)
Release Date	August 26, 2025
Language	English
Audio	English 5.1 Dolby Digital
Subtitles	English SDH
Number of Discs	1
ASIN	B0F5RHXGNN
Product Dimensions	1 x 1 x 1 inches; 2.4 ounces

7. WARRANTY AND SUPPORT

As a media product, the **Locked DVD** typically does not come with an extended manufacturer's warranty beyond ensuring the disc is free from manufacturing defects upon purchase.

- **Defective Discs:** If you receive a defective disc (e.g., unplayable due to manufacturing error), please contact the retailer from whom you purchased the DVD for a replacement or refund within their specified return period.
- **Technical Support:** For issues related to DVD player compatibility or general playback problems not resolved by the troubleshooting steps, please refer to your DVD player's instruction manual or contact its manufacturer for technical assistance.
- **Content Inquiries:** For questions regarding the movie content itself, please refer to official movie databases or fan communities.

