

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [ROBUD](#) /
- > [ROBUD WRP24 Wooden Baby Push Walker Instruction Manual](#)

ROBUD WRP24

ROBUD WRP24 Wooden Baby Push Walker Instruction Manual

Model: WRP24 | Brand: ROBUD

1. INTRODUCTION

Thank you for choosing the ROBUD WRP24 Wooden Baby Push Walker. This multi-functional learning toy is designed to support your child's early development, aiding in walking skills, fine motor development, and imaginative play. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.



Image 1.1: The ROBUD WRP24 Wooden Baby Push Walker in use by a baby.

2. SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise your child when they are using the push walker.
- **Age Recommendation:** Suitable for children aged 10 months and over.

- **Assembly:** Ensure all parts are correctly assembled and securely fastened before use. Regularly check for loose parts.
- **Surface Use:** Use on flat, level surfaces. Avoid stairs, uneven terrain, or areas near hazards.
- **Material Safety:** Made from wood with smooth, rounded edges. Ensure no splinters or sharp points are present.
- **Small Parts:** Contains small parts that could be a choking hazard for young children. Keep these out of reach during assembly and ensure they are securely attached during play.
- **Decelerator:** The walker includes a decelerator to control wheel speed. Adjust it appropriately for your child's walking ability.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Main Walker Body (with integrated activity panel)
- Handlebar Assembly
- Wheels (4)
- Assembly Hardware (screws, nuts, etc.)
- Wooden Play Accessories (e.g., cooking utensils, food pieces, shape blocks)
- Instruction Manual (this document)

Note: "Busy Board" is listed as a component. This refers to the integrated activity panel on the walker.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your ROBUD WRP24 Wooden Baby Push Walker:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list.
2. **Attach Handlebar:** Align the handlebar assembly with the designated slots on the main walker body. Secure it using the provided screws and tools. Ensure it is firmly attached and does not wobble.
3. **Check Wheels:** The wheels are typically pre-assembled. Verify they rotate freely and are securely attached. Ensure the decelerator mechanism is functional (see Section 5.2).
4. **Inspect All Connections:** After assembly, double-check all screws and connections to ensure they are tight and secure.

HEIGHT ADJUSTABLE

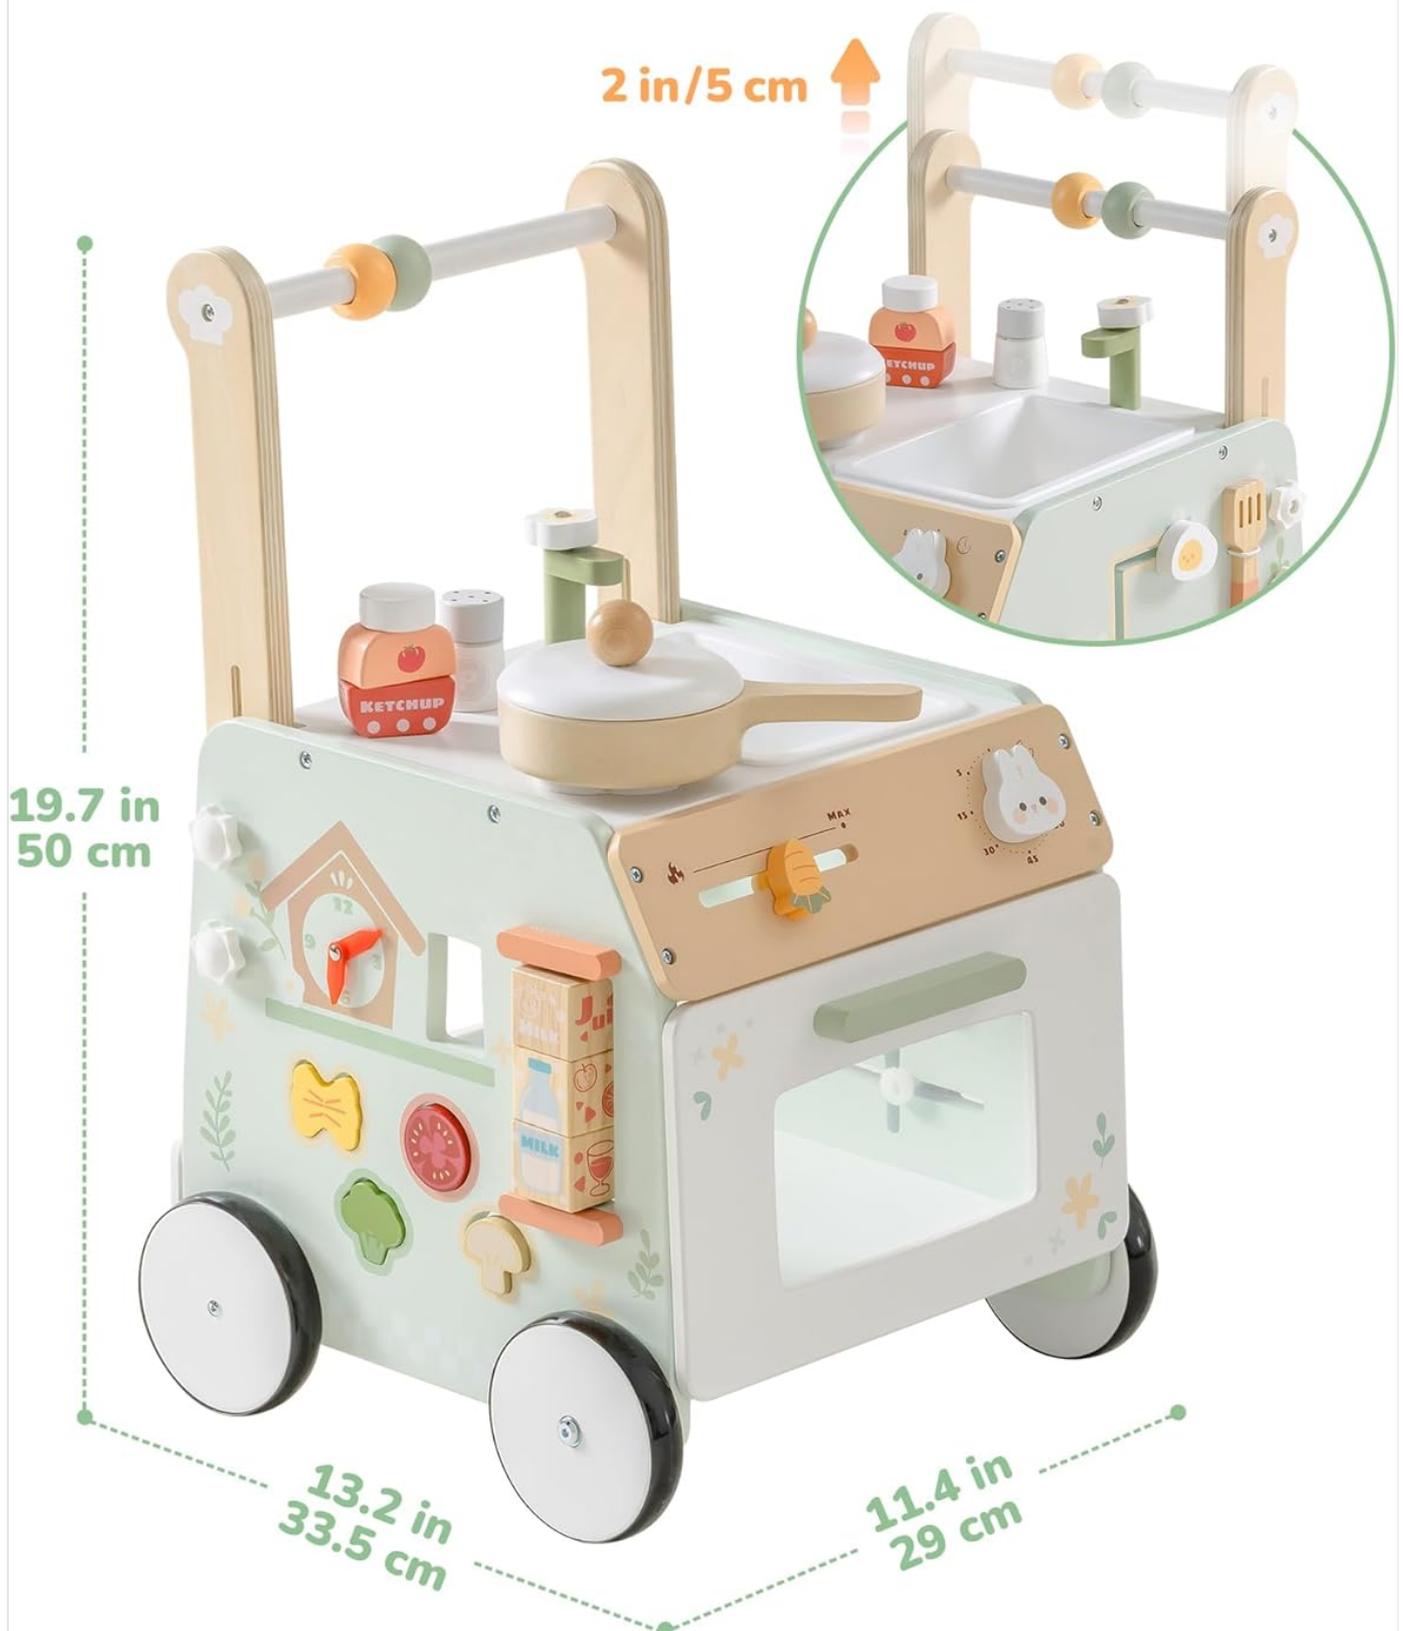


Image 4.1: Product dimensions and height adjustment mechanism.

5. OPERATING INSTRUCTIONS

5.1. Adjustable Height

The walker's handlebar height can be adjusted to accommodate your child's growth. Locate the adjustment mechanism

on the handlebar supports. Loosen the fasteners, adjust the handlebar to the desired height (typically 2 inches / 5 cm adjustment range), and securely tighten the fasteners. Ensure both sides are adjusted to the same height for stability.

5.2. Speed Adjustment (Decelerator)

The ROBUD WRP24 features a decelerator to control the speed of the wheels, providing a safer experience for new walkers. Locate the speed adjustment knobs on the rear wheels. Turn the knobs to increase or decrease resistance. For beginners, a higher resistance setting is recommended to prevent the walker from moving too quickly. Test the resistance before your child uses it.



Image 5.1: Detail of the speed adjustment knob.

5.3. Integrated Activity Panel

The walker includes a multi-activity panel designed for sensory play and skill development:

- **Shape Matching:** Engage with various shaped blocks and corresponding slots.
- **Salad Sliders:** Move the small wooden pieces along the tracks.
- **Pretend Cooking Area:** Features a stove, sink with tap, oven, and turn knobs for imaginative role-playing.
- **Clock:** A movable clock face for learning time concepts.



Image 5.2: Various activities on the integrated panel.

CHEF ROLE PLAYING GAME



 Stove



 Turn Knob



 Water Tank And Tap



 Oven Baking

Image 5.3: Details of the chef role-playing game features.

5.4. Storage Space

The walker includes a convenient storage area, typically located beneath the activity panel, for keeping play accessories or other small toys. This helps maintain tidiness and ensures all pieces are readily available for play.

STORAGE SPACE



Image 5.4: Internal storage compartment.

6. MAINTENANCE

- **Cleaning:** Wipe the walker with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Dry thoroughly immediately after cleaning.
- **Inspection:** Regularly inspect all parts for wear and tear, loose screws, or damage. Tighten any loose fasteners.
- **Storage:** Store in a dry place away from direct sunlight and extreme temperatures to prevent wood warping or

damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Walker moves too fast/slow.	Decelerator setting is incorrect.	Adjust the speed adjustment knobs on the rear wheels (refer to Section 5.2).
Handlebar feels wobbly.	Handlebar screws are loose.	Tighten the screws securing the handlebar to the main body.
Oven door does not stay closed.	Weak magnet or misalignment.	Check if the magnet is properly seated. If possible, gently adjust the door's alignment or reinforce the magnet.
Wheels are stiff or not turning smoothly.	Debris in wheel mechanism or overtightened decelerator.	Check for and remove any debris. Loosen the decelerator setting slightly.
Missing or damaged parts upon arrival.	Manufacturing defect or shipping damage.	Contact ROBUD customer support immediately for assistance.

8. SPECIFICATIONS

Model	WRP24
Brand	ROBUD
Product Dimensions	13.2 x 11.4 x 19.7 inches (L x W x H)
Item Weight	12.29 pounds
Recommended Age	10 months and over (Note: Manufacturer specifications sometimes list 3 years and up, but product features indicate suitability from 10 months for walking assistance.)
Material	Wood

9. WARRANTY AND SUPPORT

ROBUD products are manufactured with quality and care. For any questions, concerns, or warranty claims, please contact ROBUD customer support through the retailer where the product was purchased or visit the official ROBUD website for contact information. Please retain your proof of purchase for warranty purposes.