

[Manuals.plus](#) /

› [Dinosoo](#) /

› Dinosoo Wireless Controller for Xbox Series X|S, Xbox One & Windows Steam Games Instruction Manual

Dinosoo B0F5VJF7CK

Dinosoo Wireless Controller Instruction Manual

Model: B0F5VJF7CK

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Dinosoo Wireless Controller. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The Dinosoo Wireless Controller is designed for use with Xbox One, Xbox Series X|S, and Windows PC, offering a versatile gaming experience with features like dual vibration, a six-axis gyroscope, TURBO function, and programmable buttons.

PRODUCT OVERVIEW

Familiarize yourself with the components and layout of your Dinosoo Wireless Controller.



Image: Front and back view of the Dinosoo Wireless Controller with key buttons and ports labeled, including USB-C, Pairing Key, PR/PL buttons, SET button, HOME button, View button, Menu button, Left Joystick, Direction-Pad, A/B/X/Y buttons, Right Joystick, and TURBO button.

Key Features:

- **Hall Effect Joysticks:** Designed for high sensitivity and precision, reducing drift and input delay.
- **Dual Vibration Motors:** Embedded in the side grips and triggers for immersive haptic feedback.
- **Six-Axis Gyroscope:** Detects movement for enhanced control in compatible games.
- **TURBO Function:** Allows for rapid, repeated input of a button.
- **Programmable Buttons (PL/PR):** Advanced game buttons for custom macro assignments.
- **3.5mm Audio Jack:** For connecting headphones or headsets.
- **Multi-Platform Compatibility:** Supports Xbox One, Xbox Series X|S, Android, iOS, and Windows 11/10/8/7 via Bluetooth, Wi-Fi, or wired connection.

SETUP

Important: Initial PC Upgrade Required for Xbox Connectivity

Before connecting the controller to an Xbox console, an essential firmware upgrade must be performed using a Windows PC. Failure to complete this upgrade will prevent the controller from connecting to Xbox consoles.

Due to the low factory version, it needs to be upgraded in order to connect to the Xbox or it will be blocked from connecting by the Xbox!!!!

Luckily the upgrade process only takes 2-3 minutes.

Upgrade program download URL: we.tl/t-QpFRxal2Mc
See video tutorial for details case-sensitive

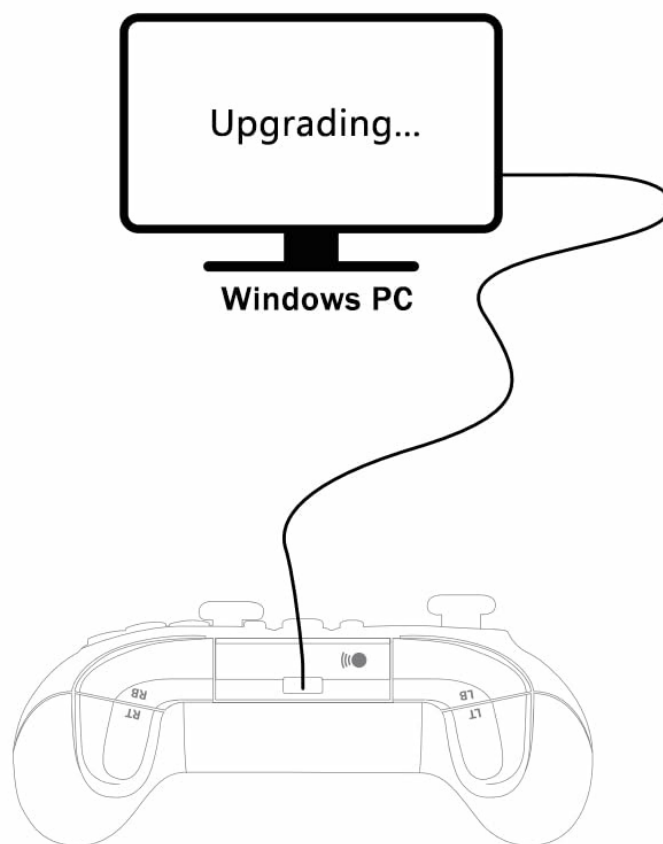


Image: Illustration of the controller connected via USB to a Windows PC, indicating an upgrade process is underway. Text highlights the necessity of the upgrade for Xbox connectivity and provides a download link.

1. **Download Upgrade Program:** On a Windows PC, open your web browser and navigate to the following URL: we.tl/t-QpFRxal2Mc. Download the upgrade program.
2. **Connect Controller:** Connect your Dinosoo Wireless Controller to the Windows PC using a USB-C cable.
3. **Run Upgrade:** Execute the downloaded upgrade program and follow the on-screen instructions. The upgrade process typically takes 2-3 minutes.
4. **Verify Completion:** Once the upgrade is complete, disconnect the controller from the PC.

After the upgrade, the controller is ready for connection to your desired platform.

Connecting to Xbox Consoles (Xbox One, Xbox Series X|S)

1. Ensure the controller has been upgraded via PC as described above.
2. Turn on your Xbox console.
3. Press and hold the **HOME** button on the controller to power it on.
4. Press the **Pairing Key** (located on the top edge of the controller, near the USB-C port) for 3 seconds until the HOME button light flashes rapidly.
5. On your Xbox console, press the pairing button (usually located on the front or side of the console).
6. The HOME button light on the controller will become solid when successfully paired.

Connecting to Windows PC (Bluetooth)

1. Ensure your Windows PC has Bluetooth enabled.
2. Press and hold the **HOME** button on the controller to power it on.
3. Press the **Pairing Key** for 3 seconds until the HOME button light flashes rapidly.
4. On your PC, go to "Settings" > "Devices" > "Bluetooth & other devices".
5. Click "Add Bluetooth or other device" and select "Bluetooth".
6. Select "Dinosoo Controller" from the list of available devices.
7. The HOME button light on the controller will become solid when successfully paired.

Connecting to Windows PC (Wired)

- Connect the controller to your Windows PC using a USB-C cable. The controller will be automatically recognized.

Connecting to Android/iOS Devices

1. Ensure Bluetooth is enabled on your Android or iOS device.
2. Press and hold the **HOME** button on the controller to power it on.
3. Press the **Pairing Key** for 3 seconds until the HOME button light flashes rapidly.
4. On your device, go to Bluetooth settings and select "Dinosoo Controller" from the list of available devices.
5. The HOME button light on the controller will become solid when successfully paired.

OPERATING INSTRUCTIONS

TURBO Function

The TURBO function allows a button to be pressed repeatedly as long as it is held down, which can be useful in certain games.

TURBO FUNCTION

Help you win the game easily



Image: The Dinosoo Wireless Controller with a visual effect emanating from the TURBO button, indicating its function.

1. **Activate TURBO:** Press and hold the **TURBO** button, then press the desired action button (e.g., A, B, X, Y, LB, RB, LT, RT). The TURBO function is now assigned to that button.
2. **Deactivate TURBO:** To remove the TURBO function from a button, press and hold the **TURBO** button again, then press the same action button.

Programmable Buttons (Macro Function)

The PL (left paddle) and PR (right paddle) buttons on the back of the controller can be programmed to perform a sequence of actions (macros).

1. **Enter Programming Mode:** Press and hold the **SET** button (located on the back of the controller) for 3 seconds. The indicator light will flash.
2. **Assign Macro:** While in programming mode, press either the **PL** or **PR** button, then input the sequence of buttons you wish to program.
3. **Exit Programming Mode:** Press the **SET** button again to save the macro and exit programming mode. The

indicator light will stop flashing.

4. **Clear Macro:** To clear a programmed macro, press and hold the **SET** button for 3 seconds, then press the **PL** or **PR** button you wish to clear. Press **SET** again to confirm.

Dual Vibration

The controller features dual vibration motors in the grips and pulse triggers to provide realistic feedback during gameplay. Vibration intensity is typically controlled by the game itself.



Image: The Dinosoo Wireless Controller with blue wave effects emanating from the grips, illustrating the dual vibration feature.

3.5mm Audio Jack

Connect any standard 3.5mm headset or headphones to the audio jack located at the bottom of the controller for in-game audio and chat functionality.

3.5mm Headphone Jack

Enjoy the immersive sound!



Image: The Dinosoo Wireless Controller with a 3.5mm audio cable plugged into the bottom port, with a close-up inset of the audio jack.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the ports or internal components.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** If the controller uses removable batteries (not specified if included or type), ensure they are inserted correctly. Remove batteries if the controller will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

- **Controller not connecting to Xbox:**

Solution: Ensure the controller has undergone the mandatory PC firmware upgrade as detailed in the "Setup"

section. This is a critical step for Xbox compatibility.

• **Controller not pairing via Bluetooth:**

Solution: Ensure the controller is in pairing mode (HOME button flashing rapidly). Check that Bluetooth is enabled on your device and that the controller is within range. Try restarting both the controller and the device.

• **Input lag or unresponsiveness:**

Solution: Ensure the controller is fully charged or has fresh batteries. Reduce interference by moving closer to the console/PC or by removing other wireless devices. For PC, try a wired connection to rule out wireless issues.

• **Vibration not working:**

Solution: Check in-game settings to ensure vibration feedback is enabled. Some games allow you to adjust vibration intensity.

• **Audio jack not working:**

Solution: Ensure the headset is fully plugged into the 3.5mm jack. Test the headset with another device to confirm it is functional. Check audio settings on your console/PC to ensure output is directed to the controller.

SPECIFICATIONS

Brand	Dinosoo
Model	B0F5VJF7CK
Connectivity	Bluetooth, Wired (USB-C)
Compatibility	Xbox One, Xbox Series X S, Windows 11/10/8/7, Android, iOS
Special Features	Hall Effect Joysticks, Dual Vibration, Six-Axis Gyroscope, TURBO Function, Programmable Buttons (PL/PR), 3.5mm Audio Jack
Dimensions	6.81 x 4.76 x 2.83 inches
Weight	10.5 ounces

SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Dinosoo customer service through the retailer where the product was purchased. When contacting support, please provide your product model (B0F5VJF7CK) and a detailed description of the issue.

You can typically find contact information on the retailer's website or within your purchase history.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question