



[Manuals.plus](#) /

> [Midea](#) /

> Midea MDWPF1301F Dishwasher User Manual

Midea MDWPF1301F

Midea MDWPF1301F Dishwasher User Manual

Model: MDWPF1301F

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Midea MDWPF1301F freestanding dishwasher. Please read this manual thoroughly before using the appliance and retain it for future reference. Your dishwasher features a 13 place setting capacity, 7 wash programs, LED display, Power Wash, Wi-Fi connectivity via the Midea SmartHome App, and a self-cleaning function.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only. Do not allow children to operate the dishwasher. Ensure the appliance is properly grounded. Do not touch the heating element during or immediately after use. Always disconnect the appliance from the power supply before cleaning or performing maintenance. Use only detergents and rinse aids specifically designed for automatic dishwashers.

WHAT'S IN THE BOX

Upon unpacking your Midea MDWPF1301F dishwasher, verify that all components are present:

- Cutlery Basket
- Drain Hose
- Inlet Hose
- Salt Refill Funnel
- User Manual (this document)

SETUP & INSTALLATION

Proper installation is crucial for the performance and safety of your dishwasher. It is recommended to have the appliance installed by a qualified technician.

Placement

The dishwasher should be placed on a level surface near a water supply, drain, and electrical outlet. Ensure adequate space for opening the door and loading dishes. The product dimensions are 59.8D x 60W x 84.5H Centimeters.



Image: Side view of the Midea MDWPF1301F dishwasher, illustrating its dimensions (845mm height, 598mm depth, 600mm width).

Water Connection

Connect the inlet hose to a cold water supply. Ensure the drain hose is properly connected to a suitable drain system, preventing kinks or blockages.

Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 240 Volts. Do not use extension cords or adapters.

ANYTIME, ANYWHERE CONTROL WITH SMARTHOME MOBILE APP



PROGRAMME &
FUNCTION SELECTION



TIMELY SELF-CLEANING
NOTIFICATION



FILTER CLEANING
REMINDER



POWER
ON/OFF



Image: Front view of the Midea MDWPF1301F freestanding dishwasher in silver finish, showing the control panel and door.

OPERATING INSTRUCTIONS

Your Midea dishwasher is equipped with a user-friendly digital control panel and can also be controlled via the Midea SmartHome App.

Control Panel

The sleek control panel features LED indicators and touch buttons for selecting wash modes and monitoring progress. Real-time updates are displayed for ease of use.

Wash Programs

The dishwasher offers 7 versatile wash programs tailored to different cleaning needs:

7 Intelligent Programs for Perfect Cleaning



**INTENSE
WASH**



**ECO
WASH**



**GLASS
CARE**



RINSE



NORMAL



SOAK



**MACHINE
CARE+**

Image: A visual representation of the seven intelligent wash programs available on the Midea dishwasher, including Intense Wash, ECO Wash, Glass Care, Rinse, Normal, Soak, and Machine Care+.

- **Intensive Wash:** Designed for heavily soiled cookware, this mode provides thorough cleaning for burnt or greasy items. It runs for approximately 170 minutes and uses about 17.5 liters of water.
- **ECO Wash:** Ideal for normally soiled dishes, this program optimizes water and energy consumption. It runs for approximately 225 minutes and consumes about 11 liters of water.
- **Glass Care Program:** A gentle cycle specifically designed to protect fragile glassware from etching or breakage, ensuring sparkling results.
- **Rapid Wash Program:** For lightly soiled dishes or smaller loads requiring a quick clean, this cycle completes in approximately 30 minutes.
- **90 min:** A standard wash program lasting 90 minutes.
- **Soak:** Pre-soaks dishes to loosen stubborn food residues before a main wash cycle.
- **Self Cleaning Function (Machine Care+):** This program helps maintain the dishwasher's hygiene by flushing out food residues and buildup.

Wi-Fi Enabled with Midea SmartHome App

Operate your dishwasher remotely using the Midea SmartHome App. You can load, start, pause, or monitor the wash cycle

from your smartphone. The app also provides timely self-cleaning notifications and filter cleaning reminders.

ULTRA HYGIENE WASH FOR INDIAN UTENSILS

World's NO.1

RINSE AID & SALT REFILL INDICATOR

POWER-OFF MEMORY

24 hours
24 HR DELAY TIMER

Image: A person using a smartphone with the Midea SmartHome App interface, demonstrating remote control capabilities for the dishwasher, including program selection, self-cleaning notifications, filter cleaning reminders, and power on/off.

Additional Features

- **Extra-Drying Function:** Provides enhanced drying for ultra hygiene.
- **Half Load:** Allows for washing smaller loads efficiently, saving water and energy.
- **Childproof Lock:** Prevents accidental operation by children.
- **Power-Off Memory:** Resumes the cycle from where it left off after a power interruption.
- **24 HR Delay Timer:** Allows you to set the dishwasher to start at a later time.
- **Rinse Aid & Salt Refill Indicator:** Alerts you when rinse aid or dishwasher salt levels are low.

HIGH TEMP DISH WASH TACKLES OILY, MASALA RESIDUES

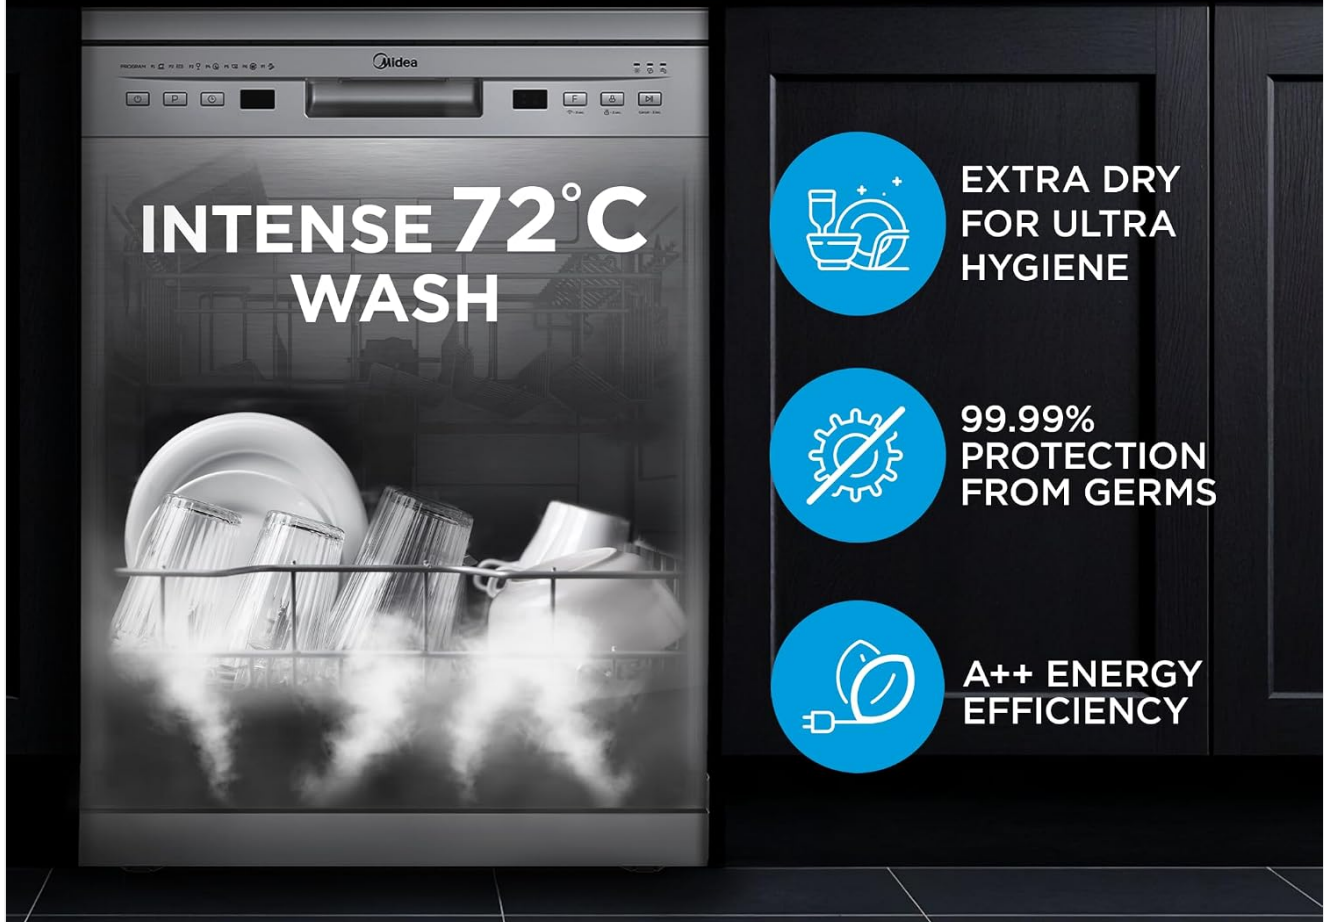


Image: The Midea dishwasher performing an intense 72°C wash, highlighting features such as extra dry for ultra hygiene, 99.99% protection from germs, and A++ energy efficiency.

LOADING THE DISHWASHER

The Midea MDWPF1301F dishwasher has a 13 place setting capacity and features adjustable racks for flexible loading.

- **13 Place Setting Capacity:** Accommodates a wide variety of utensils, including plates, glasses, pans, and cutlery, suitable for medium to large households.
- **Adjustable Racks System:** Allows for flexible arrangement to fit tall plates, large pans, and awkwardly shaped items comfortably.
- **Cutlery Basket:** Use the provided cutlery basket for forks, spoons, and knives, ensuring they are separated for effective cleaning.

FROM KADHAI TO CUTLERIES - FITS ALL



13 PLACE
SETTING



HALF LOAD
OPTION



ADJUSTABLE
RACKS SYSTEM



Image: A woman loading dishes into the Midea dishwasher, showcasing its 13 place setting capacity, half load option, and adjustable racks system.

MAINTENANCE & CARE

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

- **Self Cleaning Function:** Utilize the dedicated self-clean mode (Machine Care+) to flush out food residues and buildup from the dishwasher's interior.
- **Filter Cleaning:** Periodically clean the dishwasher filters to prevent blockages and ensure efficient washing. The Midea SmartHome App can provide reminders for this.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Interior Cleaning:** Check for and remove any large food particles from the bottom of the dishwasher after each cycle.
- **Salt and Rinse Aid:** Ensure the dishwasher salt and rinse aid dispensers are refilled when indicated by the respective indicators.

TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common troubleshooting steps. For more complex problems, contact customer support.

- **Dishwasher Not Starting:** Check if the power cord is securely plugged in, the door is fully closed, and the water supply is turned on. Ensure a wash program has been selected and the start button pressed.
- **Dishes Not Clean:** Verify that dishes are loaded correctly, not blocking spray arms. Check detergent dispenser, ensure sufficient rinse aid, and clean filters. Select an appropriate wash program for the soil level.
- **Water Not Draining:** Inspect the drain hose for kinks or blockages. Clean the filters.
- **Error Codes:** If an error code appears on the display (e.g., E4 for heating element malfunction), consult the full user manual or contact customer service for specific guidance.
- **Unusual Noises:** Ensure dishes are not rattling against each other or the spray arms. Check for foreign objects in the pump area.

SPECIFICATIONS

Brand	Midea
Model Number	MDWPF1301F(SS)-WG
Place Settings	13
Wash Programs	7 (Intensive, ECO, Glass, Rapid, 90 min, Soak, Self Cleaning)
Connectivity	Wi-Fi (Midea SmartHome App)
Special Features	Adjustable Basket, Childproof Lock, Extra-Drying Function, Half Load, Smart, Power-Off Memory, 24 HR Delay Timer, Rinse Aid & Salt Refill Indicator
Product Dimensions (D x W x H)	59.8D x 60W x 84.5H Centimeters
Item Weight	44.2 Kilograms
Voltage	240 Volts
Annual Energy Consumption	262 Kilowatt Hours Per Year
Color	Silver
Country of Origin	China

WARRANTY & SUPPORT

Warranty Information

Your Midea MDWPF1301F dishwasher comes with a 2-year comprehensive product warranty and a 5-year motor warranty. Please retain your purchase receipt for warranty claims.

Customer Support

For installation assistance, technical support, or service requests, please contact Midea customer care. You can also refer to the Midea India Private Limited contact information:

Midea India Private Limited

Unit No. 517-522, Fifth Floor, Park Centra, BPTP, Sector 30,

Gurugram, Haryana 122001, India

For further information, visit the official [Midea Store on Amazon](#).