

kavey KL-75W-X

Kavey 6.5 Cubic Feet Fireproof Waterproof Fingerprint Safe Box Instruction Manual

Model: KL-75W-X | Brand: Kavey

INTRODUCTION

This manual provides detailed instructions for the safe and proper use of your Kavey 6.5 Cubic Feet Fireproof Waterproof Fingerprint Safe Box. Please read this manual thoroughly before installation and operation to ensure optimal performance and security.

Your browser does not support the video tag.


Video 1: 3D Tour Video of Double-Door Safe. This video provides a comprehensive 3D view of the safe, highlighting its design, features, and internal layout.

WHAT'S INCLUDED

Upon unpacking, please verify that all the following components are present:

- 1 x Kavey 6.5 Cub Safe Box
- 4 x Emergency Keys
- 6 x Expansion Screws
- 1 x USB Type-C Cable (for external power)
- 4 x Non-slip Foot Pads
- 1 x User Manual

 PRODUCT SIZE

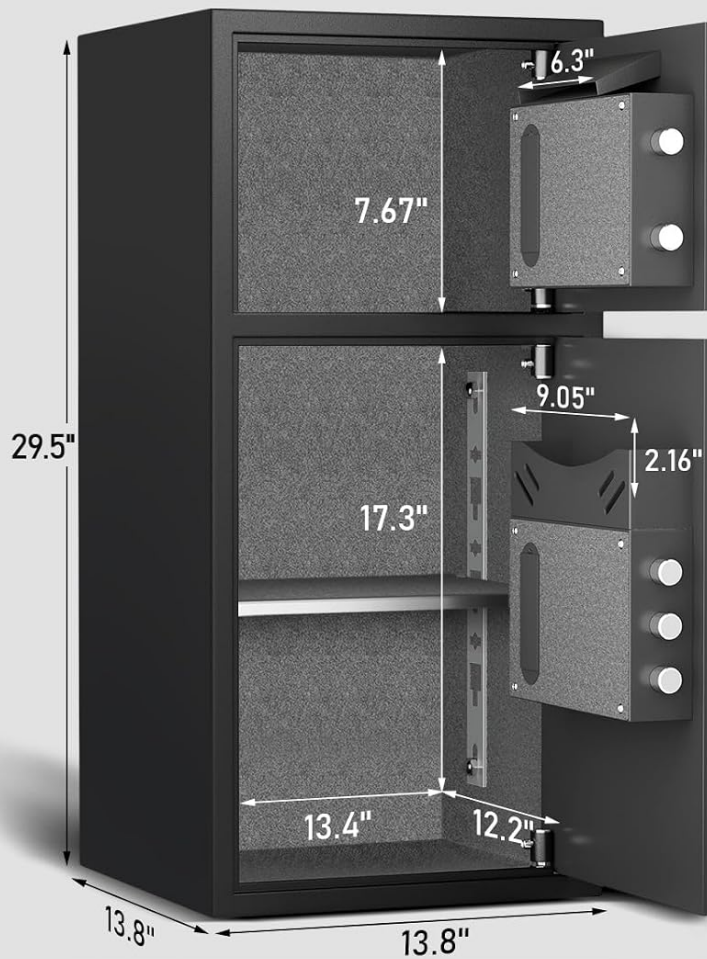

What's included



Foot Mats ×4



Emergency Keys ×4



 
Expansion Screws ×6



USB Type-c Cable ×2



User Manual ×1

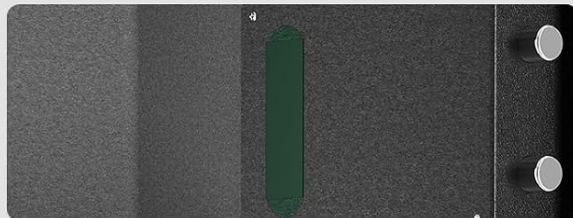

Built-in Battery Box



Passcode Reset Button

Figure 1: Included Components and Product Dimensions. The image displays the safe's external dimensions (13.8"D x 13.8"W x 29.5"H) and internal compartment sizes, along with a visual list of all items included in the package.

SPECIFICATIONS

Feature	Detail
Brand	kavey
Model Number	KL-75W-X
Product Dimensions (D x W x H)	13.8"D x 13.8"W x 29.5"H
Capacity	6.5 Cubic Feet
Lock Type	Fingerprint password lock

Feature	Detail
Material	Low carbon alloy steel
Special Feature	Double door safe, Deposit slot, Backlit keypad, Dual alarm system, Mute function, Internal LED lights, Adjustable/Removable shelf
Item Weight	39.6 Pounds
Water Resistance Level	Waterproof

SETUP

1. Unpacking and Initial Inspection

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Ensure all included components are present as listed in the "What's Included" section.

Your browser does not support the video tag.

Video 2: Drop Test of Double-Door Safe. This video demonstrates the durability and robust construction of the safe during a drop test, showcasing its ability to withstand impact and protect contents.

2. Battery Installation

The electronic lock requires 4 AA alkaline batteries (not included). Locate the battery compartment on the inside of the safe door. Open the compartment, insert the batteries according to the polarity markings, and close the cover.

Your browser does not support the video tag.

Video 3: Operation Video of Double-Door Fingerprint Panel Safe. This video demonstrates various operational aspects, including battery installation and initial setup of the fingerprint and password.

3. Mounting the Safe

For enhanced security, it is recommended to mount the safe to a wall or floor. The safe features 4 pre-drilled holes on the back and 2 on the bottom. Use the provided expansion screws to secure the safe in your desired location.



Figure 2: Mounting options for the Kavey safe. The image illustrates the safe's pre-drilled holes on the back and bottom, suitable for securing it to a wall or floor using expansion screws.

1. First Time Opening (Using Emergency Key)

For the initial opening, use one of the emergency keys. Insert the key into the keyhole, turn it counter-clockwise to its limit, then rotate the knob clockwise to open the door. This allows access to the battery compartment and setting button.

4 WAYS TO UNLOCK WITH EASE

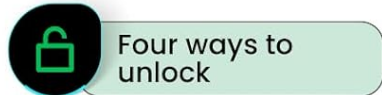


Figure 3: Four Ways to Unlock the Safe. This image visually explains the different access methods for the Kavey safe, including emergency key, fingerprint, and digital keypad.

2. Setting Up Fingerprint

1. With the door open, locate and short press the "Setting Button" inside the safe door.
2. Place your finger on the fingerprint collector.
3. When you hear a short beep, remove your finger.
4. Repeat this process four times for successful registration.

3. Setting Up Password

1. With the door open, locate and short press the "Setting Button" inside the safe door.
2. Input your desired user code (3-8 digits) on the keypad.
3. Press "#" to confirm your password.

4. Alarm Function

The safe is equipped with a dual alarm system:

- **Incorrect Entry Alarm:** If three consecutive incorrect passwords or five incorrect fingerprint inputs are entered, the alarm will sound for 20 seconds.
- **Vibration Alarm:** If the safe experiences violent vibrations, the alarm will activate. To turn on the vibration alarm mode, press and hold "4" until you hear two beeps.

The alarm sound reaches up to 70 decibels. To deactivate the alarm, remove the batteries.

DUAL ALARM SYSTEM MUTE FUNCTION

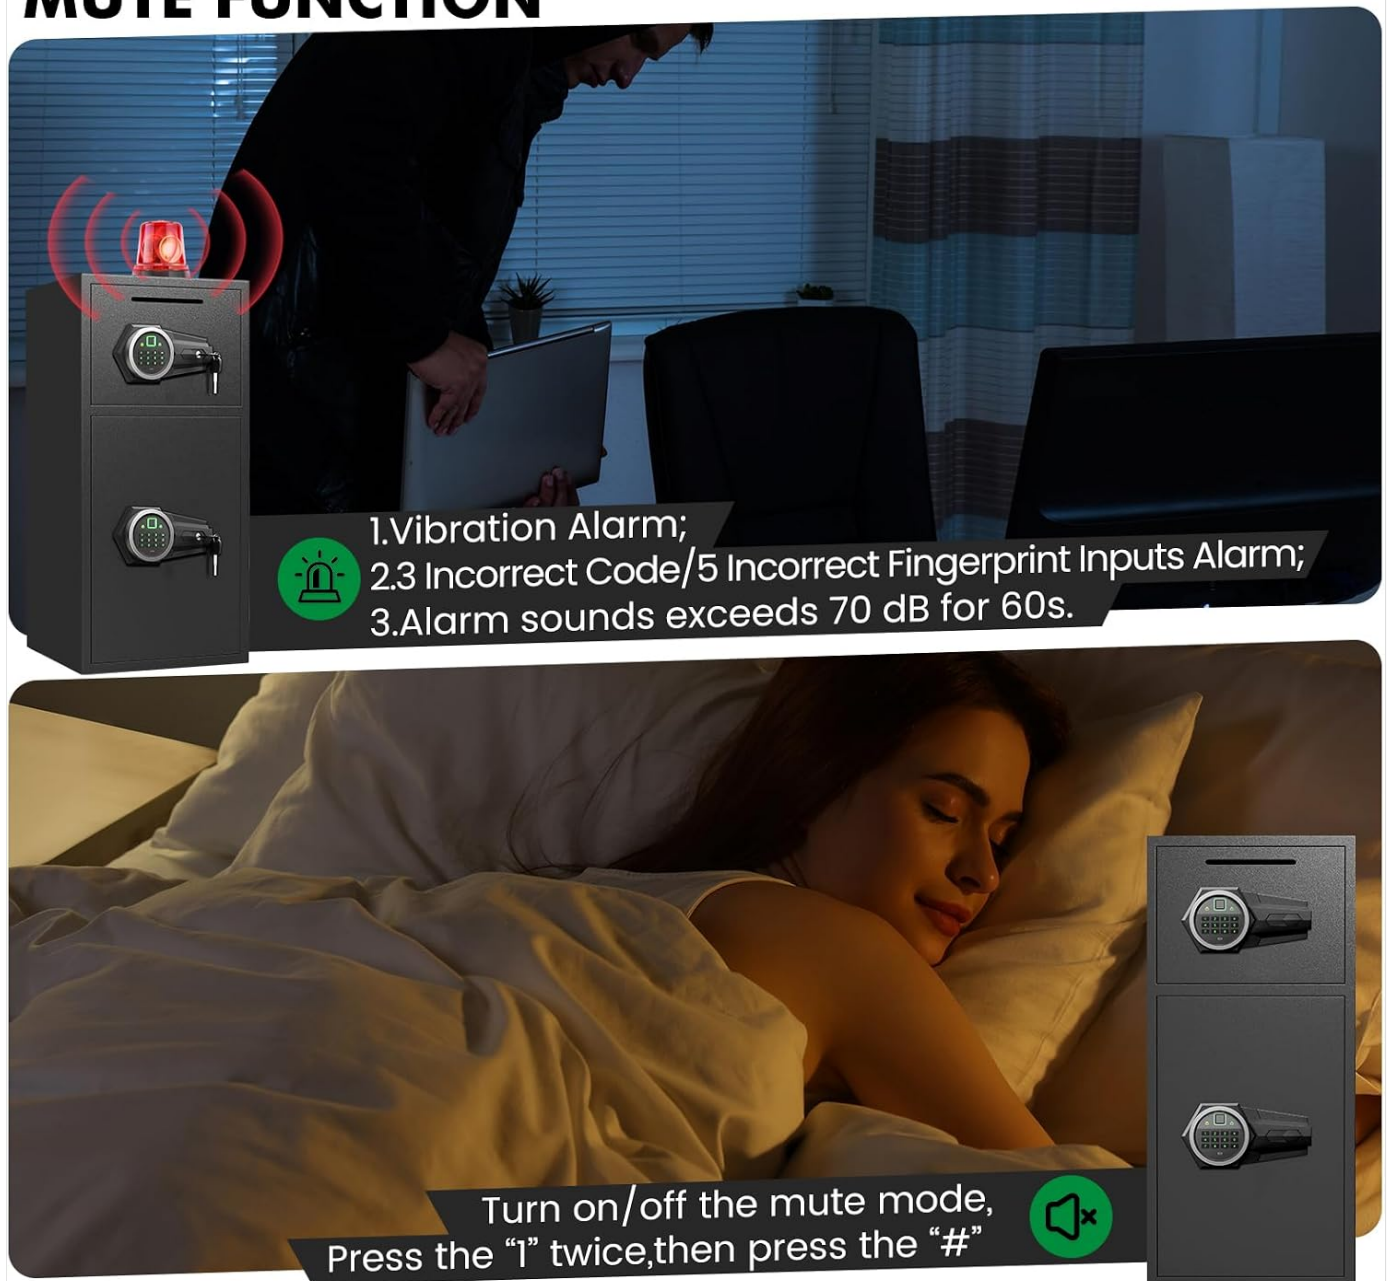


Figure 4: Dual Alarm System and Mute Function. This image details the conditions for alarm activation and provides instructions for enabling or disabling the mute function by pressing "1" twice, then "#".

5. Opening the Door

You can open the safe using one of the following methods:

- **Emergency Key:** Insert the emergency key, turn it counter-clockwise, then rotate the knob clockwise.
- **Fingerprint:** Place your registered finger on the fingerprint collector, then rotate the knob clockwise.
- **Password:** Enter your 3-8 digit password, press "#", then rotate the knob clockwise.
- **External Power + Fingerprint/Password:** If batteries are depleted, connect the USB Type-C cable to an external power source and the safe's port. Then use your fingerprint or password to open.

6. Using the Deposit Slot

The top compartment features a convenient front deposit slot, allowing you to deposit money, documents, or other small items without fully opening the safe door.

2-IN-1 QUICK ACCESS DROP SLOT

You can drop stuff in without opening the safe.



Drop Slot



Drop Slot




Figure 5: Quick Access Drop Slot. This image illustrates the functionality of the drop slot, allowing for secure deposits without needing to unlock and open the main safe door.

7. Adjustable and Removable Shelf

The interior of the safe includes an adjustable and removable shelf, allowing for versatile organization of your valuables. You can easily reposition or remove the shelf to accommodate items of different sizes.

ADJUSTABLE AND REMOVABLE SHELF

 For versatile interior organization

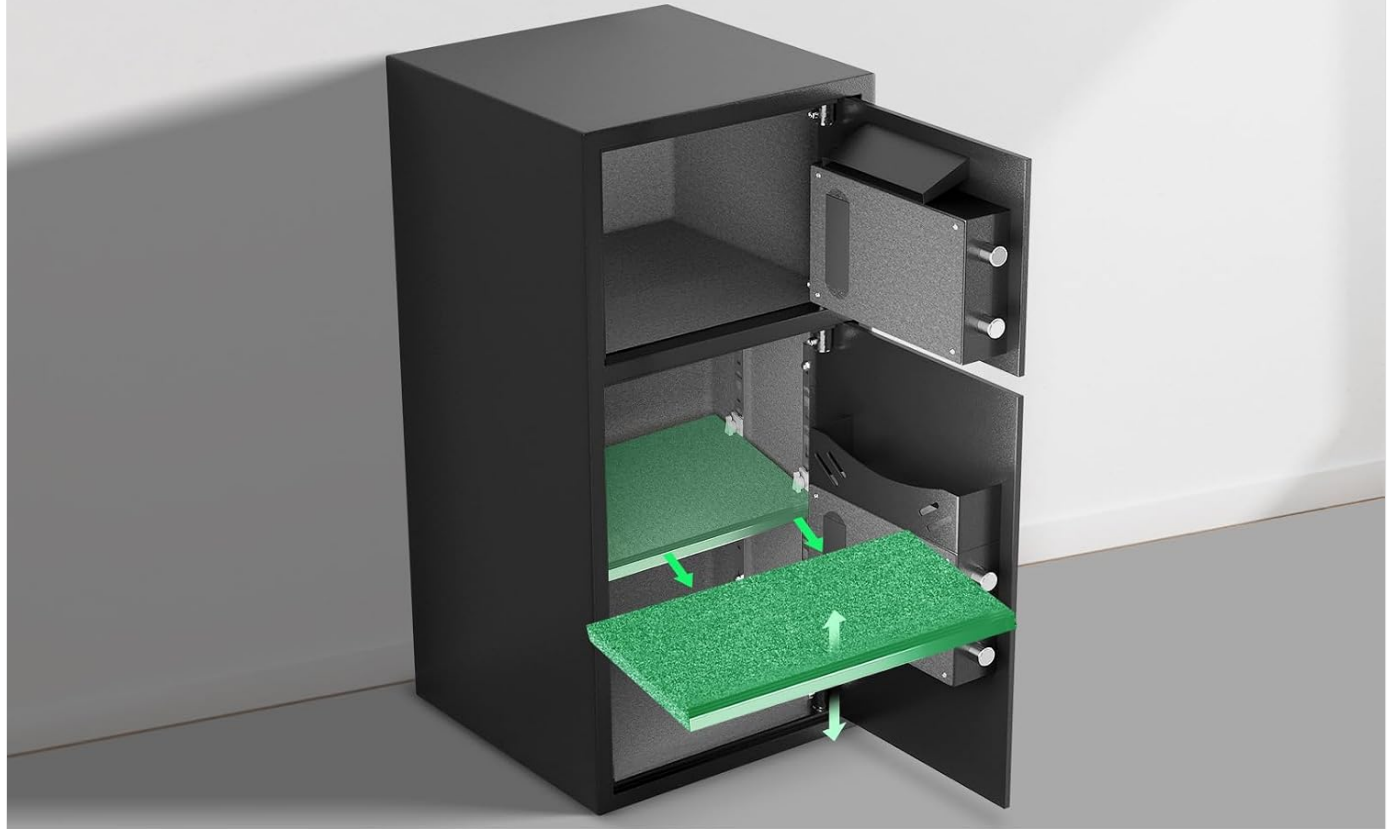

With Shelf



Without Shelf

Figure 6: Adjustable and Removable Shelf. This image highlights the interior flexibility of the safe, showing how the shelf can be moved or taken out to optimize storage space for different items.

MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears to ensure continuous operation of the electronic lock.
- **Key Storage:** Always store emergency keys in a secure location outside the safe.
- **Interior Care:** The safe's interior is lined with flannel to protect valuables. Avoid placing sharp objects directly against the lining to prevent damage.

TROUBLESHOOTING

Problem	Possible Solution
Safe does not open with fingerprint/password.	Check battery level. If batteries are low, use the external USB Type-C cable for power or the emergency key. Ensure correct fingerprint placement or password entry.
Alarm sounds unexpectedly.	This indicates incorrect entries or vibration. Deactivate by removing batteries. Re-enter correct credentials. Check if vibration alarm is enabled and if the safe was disturbed.
Cannot set fingerprint/password.	Ensure the safe door is open and the setting button is pressed correctly. Follow the steps precisely, ensuring proper finger placement for fingerprint registration.
Emergency key does not work.	Ensure the key is fully inserted and turned counter-clockwise to its limit before rotating the knob clockwise. Do not force the key.

WARRANTY AND SUPPORT

Kavey offers a lifetime warranty for this product. For any issues or inquiries, please contact our customer service team. We provide 24-hour online customer service, 90-day unconditional returns, and lifetime key matching service.

To find the seller on Amazon for support:

1. Log in to your Amazon buyer's account.
2. Find your order for the Kavey safe.
3. Click "Get help" to contact customer service.



Figure 7: Kavey Brand Logo. The logo represents the brand's commitment to security and protecting valuables.

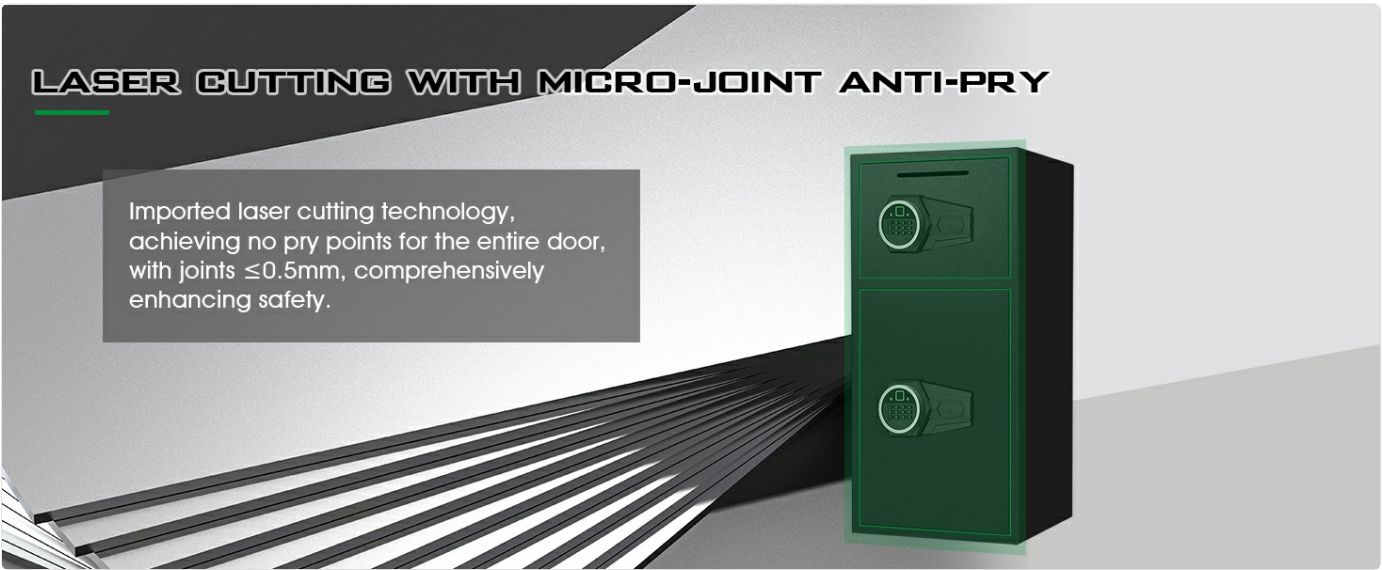 


Figure 8: Kavey Safe in a Home Environment. This image showcases the large safe box integrated into a modern home setting, highlighting its discreet yet secure presence.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question