



Manuals.plus /

› Fanvace /

› Fanvace K11 MP3 Player User Manual

## Fanvace K11

# Fanvace K11 MP3 Player User Manual

Model: K11 | Brand: Fanvace

## 1. INTRODUCTION

Welcome to the user manual for your new Fanvace K11 MP3 Player. This device is a versatile portable media player running on Android 13, offering a seamless user experience with its 4-inch touchscreen, 96GB of storage (32GB ROM + 64GB Micro SD card), and robust connectivity options including Bluetooth and Wi-Fi. It is designed for both local music and video playback, as well as streaming from popular online music services.



The Fanvace K11 MP3 Player, showcasing its intuitive Android 13 interface with pre-installed applications.

## 2. WHAT'S IN THE BOX

Upon unboxing your Fanvace K11 MP3 Player, please ensure all the following items are present:

- 1 x Fanvace K11 MP3 Player
- 1 x 64GB Micro SD Card (pre-installed or separate)

- 1 x USB C Cable
- 1 x Wired Earphones
- 1 x Screen Protector
- 1 x Protective Case
- 1 x User Manual (this document)



All components included in the Fanvace K11 MP3 Player package.

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge your MP3 player. Connect the provided USB-C cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging progress.

### 3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the screen lights up and the Fanvace logo appears.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.

### 3.3 Initial Setup Wizard

The first time you power on the device, you will be guided through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and setting up your Google account (optional, but recommended for Play Store access).

## 4. OPERATING INSTRUCTIONS


## 4.1 Basic Navigation

The Fanvace K11 features a responsive 4-inch HD touchscreen. Navigate by tapping icons, swiping left/right for different screens, and swiping down from the top for notifications and quick settings. The physical home button below the screen can be used for navigation.

## 4.2 Music Playback

The device supports various music formats including MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA. You can enjoy music both online via streaming apps and offline from stored files.

- **Streaming Music:** Pre-installed apps like Spotify, Omnia, Deezer, and Amazon Music allow you to stream music directly over Wi-Fi. Log in with your respective accounts.
- **Local Music:** Transfer music files from your computer to the device's internal storage or the 64GB Micro SD card. Use the pre-installed music player app to browse and play your local library.
- **Bluetooth Audio:** Connect Bluetooth headphones or speakers for wireless audio. Go to *Settings > Connected devices > Pair new device* to connect.

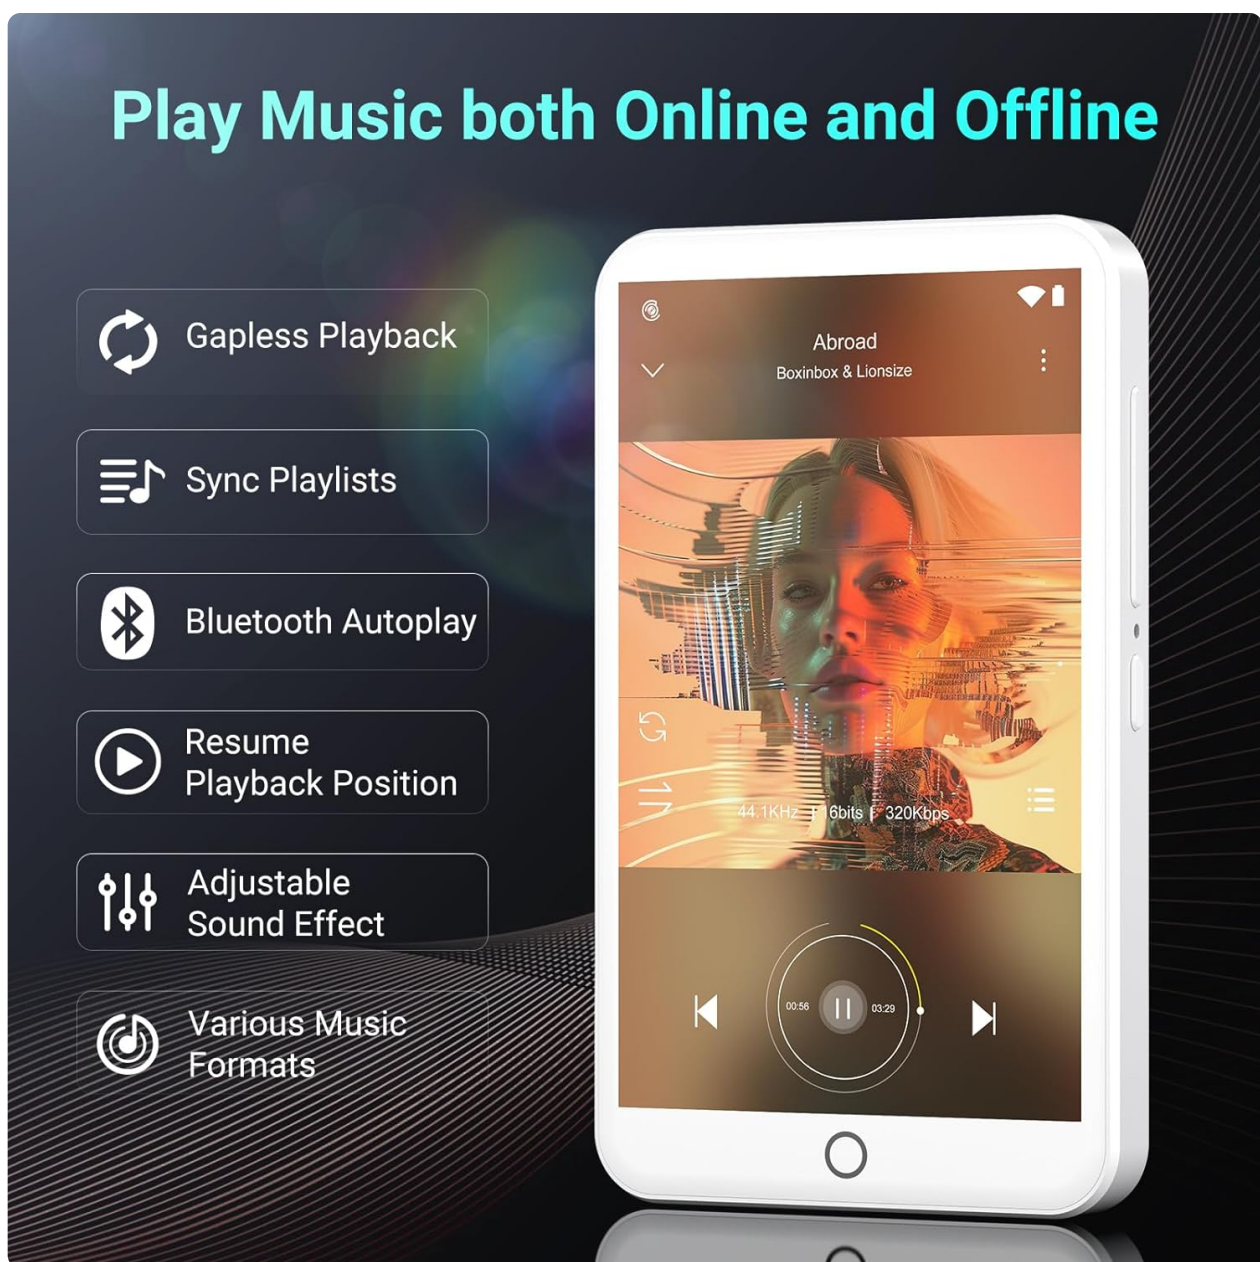

The Fanvace K11 supports both online and offline music playback with various features.

## 4.3 Video Playback

The 4-inch HD touchscreen provides an excellent visual experience for videos. The player supports video formats such as RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS, and more, allowing direct playback without conversion.



Enjoy high-definition video playback on the Fanvace K11's vibrant 4-inch screen.

#### 4.4 Wi-Fi and App Installation

The Wi-Fi functionality allows you to connect to wireless networks, download applications from the Google Play Store, browse the internet, and access online content.

- **Connecting to Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* select your desired network, and enter the password.
- **Downloading Apps:** Use the pre-installed Google Play Store app to download and install additional applications, games, and utilities to customize your device.

# Android 13 OS: Smart & Adaptive

Enjoy 30% faster app response & lag-free music control.



The Android 13 OS provides a smart and adaptive experience for the Fanvace K11.

## 4.5 Other Functions

- **FM Radio:** Connect wired earphones (which act as an antenna) to use the built-in FM radio.
- **Voice Recorder:** Use the Voice Recorder app to capture audio.
- **E-book:** Read e-books using compatible apps.
- **Parental Controls:** The device supports parental control features to manage usage and content access.

## 5. MAINTENANCE

### 5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the player. Avoid using abrasive cleaners or solvents that may damage the surface.

## 5.2 Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device regularly and avoid completely draining the battery frequently.

# Built-in 2000mAh Battery

Low-power solution ensures continuous enjoyment of music and movies

- 60Hrs Standby
- 20Hrs Music
- 6Hrs Video
- 3-4Hrs Charged

The Fanvace K11 features a long-lasting 2000mAh battery for extended use.

## 5.3 Software Updates

Periodically check for system updates in *Settings* to ensure your device has the latest features and security patches.

## 5.4 Storage Management

Regularly manage your storage by deleting unnecessary files and apps. The device comes with 32GB ROM and a 64GB Micro SD card, expandable up to 512GB.

## 96GB Ultimate Storage

Hold 20,000+ songs: 32GB ROM ensures smooth scrolling through massive libraries.

ROM

32GB

SD Card

64GB

Up to

512GB



The Fanvace K11 offers 96GB of ultimate storage, expandable up to 512GB.

## 6. TROUBLESHOOTING

If you encounter issues with your Fanvace K11 MP3 Player, please refer to the following common solutions:

Problem	Possible Solution
Device does not power on	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, press and hold the power button for 10-15 seconds for a forced restart.
Cannot connect to Wi-Fi	Check if Wi-Fi is enabled in settings. Ensure the password is correct. Restart the device and your Wi-Fi router.
Bluetooth pairing issues	Ensure Bluetooth is enabled on both devices. Place devices close to each other. Try unpairing and re-pairing the device.
Apps crashing or freezing	Close background apps. Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear cache). Restart the device.
Short battery life	Reduce screen brightness. Close unused apps running in the background. Disable Wi-Fi/Bluetooth when not in use.

If the problem persists, please refer to the Warranty and Support section for further assistance.

## 7. SPECIFICATIONS

Detailed technical specifications for the Fanvace K11 MP3 Player:

Feature	Specification
Model Name	96GB MP3 Player with Bluetooth (K11)
Operating System	Android 13
Processor	MTK 8-core processor
RAM	3GB
Internal Storage (ROM)	32GB
Included SD Card	64GB Micro SD Card
Expandable Storage	Up to 512GB (Micro SD)
Screen Size	4 Inches
Connectivity	Bluetooth, Wi-Fi
Battery	2000mAh Lithium Battery
Music Playback Time	Up to 20 hours
Video Playback Time	Up to 6 hours
Supported Audio Formats	MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, etc.
Supported Video Formats	RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS, etc.
Special Features	Built-In Speaker, Video Playback, Voice Recorder, Touch Screen, FM Radio, Parental Controls, E-book, Calculators, Chrome
Dimensions	5.79 x 5.71 x 0.75 inches (Package)
Item Weight	7.4 ounces
Manufacturer	Fanvace
Country of Origin	China

## 8. WARRANTY AND SUPPORT

Fanvace is committed to providing excellent customer service. If you encounter any issues or have questions regarding your MP3 player, please contact our after-sales service.

- **Customer Service:** We offer 12 hours of customer service support.
- **Detailed User Guide:** For more in-depth user guidance not covered in this manual, please contact our after-sales service for a detailed user guide.

Please retain your proof of purchase for warranty claims.