

SVAN SL6203AIDV

Svan SL6203AIDV 6 kg Front-Load Washing Machine User Manual

Model: SL6203AIDV

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient operation of your Svan SL6203AIDV 6 kg front-load washing machine. Please read it thoroughly before installation, use, or maintenance. Keep this manual for future reference.

1.1 General Safety Warnings

- Ensure the washing machine is properly installed and grounded by a qualified technician.
- Do not allow children to play with or operate the appliance.
- Never force the door open during operation. Wait until the cycle is complete and the door unlocks.
- Unplug the appliance from the power supply before any cleaning or maintenance.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Keep pets away from the appliance.

2. PRODUCT OVERVIEW

The Svan SL6203AIDV is a 6 kg capacity front-load washing machine designed for efficient and gentle laundry care. It features an Inverter motor, 11 wash programs, and a user-friendly LED display.

2.1 Main Components

- **Control Panel:** Located at the top front, featuring a program selector knob, LED display, and function buttons.
- **Detergent Dispenser:** Compartments for pre-wash, main wash detergent, and fabric softener.
- **Drum:** Stainless steel drum with a diamond surface for gentle washing.
- **Door:** Large transparent XXL door for easy loading and unloading.
- **Filter:** Located at the bottom front for easy access and cleaning.

2.2 Appliance View



Figure 1: Front view of the Svan SL6203AIDV washing machine. This image shows the white exterior, the large black transparent door, and the control panel at the top.

2.3 Control Panel



Figure 2: Detailed view of the Svan SL6203AIDV control panel. It features a central program selector knob, an LED display showing cycle time, and touch buttons for speed, temperature, rinse options, and start/pause.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials. The package includes the washing machine and this instruction manual. Inspect the appliance for any damage during transit. Report any damage immediately to your retailer.

3.2 Removing Transport Bolts

Before using the washing machine, it is crucial to remove the transport bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent excessive vibration and damage during operation. Keep the bolts for future transport if needed.

3.3 Leveling the Appliance

Place the washing machine on a firm, level floor. Adjust the adjustable feet at the bottom of the appliance until it is perfectly level and stable. Proper leveling minimizes vibration and noise during spin cycles.

3.4 Water and Drain Connections

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining. The drain hose should be at an appropriate height (between 60 cm and 100 cm from the floor).

3.5 Electrical Connection

Connect the power cord to a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance (220-240V, 50Hz). Do not use extension cords or adapters.

3.6 First Use

Before washing clothes, run an empty wash cycle (e.g., a quick wash program) without detergent or laundry to clean the drum and internal components.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. Close the door firmly.

4.2 Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

4.3 Program Selection

Turn the program selector knob on the control panel to choose one of the 11 available wash programs. The LED display will show the default time and temperature for the selected program. Available programs include:

- Cotton
- Eco 40-60

- Synthetics
- Delicates
- Wool
- Quick 15'
- Quick 30'
- Rinse & Spin
- Spin Only
- Drum Clean
- Mixed

4.4 Function Buttons

After selecting a program, you can customize it using the function buttons:

- **Speed:** Adjusts the spin speed (e.g., 800, 1000, 1200 rpm).
- **Temperature:** Changes the wash temperature (e.g., cold, 30°C, 40°C, 60°C, 90°C).
- **Rinse+:** Adds an extra rinse cycle.
- **Delay Start:** Sets a delayed start time for the wash cycle.
- **Start/Pause:** Initiates or pauses the selected wash program.
- **Stop&Go:** Allows you to pause a cycle, add or remove items, and then resume.

4.5 Starting a Wash Cycle

Press the 'Start/Pause' button to begin the selected program. The machine will start filling with water, and the display will show the remaining time.

4.6 Ending a Cycle

Once the program is complete, the machine will signal with an audible alert, and the door will unlock. Open the door and remove your laundry promptly.

5. MAINTENANCE

5.1 Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

5.3 Cleaning the Drum

Use the dedicated 'Drum Clean' program periodically to remove any residue or odors from the drum. Run this cycle without laundry and with a suitable drum cleaning agent if necessary.

5.4 Cleaning the Pump Filter

The pump filter should be cleaned regularly to prevent blockages. Locate the filter cover at the bottom front of the machine, open it, and carefully remove the filter. Clean it under running water and reinsert it securely.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the table below before contacting service.

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not closed properly; Start/Pause button not pressed.	Check power connection; Ensure door is latched; Press Start/Pause.
Excessive vibration	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry.
Water leakage	Hoses not properly connected; Detergent dispenser clogged; Drain filter loose.	Check hose connections; Clean detergent dispenser; Tighten drain filter.
Poor washing results	Incorrect detergent dosage; Overloading; Wrong program selection.	Adjust detergent; Reduce load size; Select appropriate program.

7. SPECIFICATIONS

Technical data for the Svan SL6203AIDV washing machine:

Brand: SVAN
Model: SL6203AIDV
Capacity: 6 kg
Maximum Spin Speed: 1200 rpm
Motor Type: Inverter
Energy Efficiency Class: A
Maximum Noise Level (Spin): 72 dB
Power: 1600W
Number of Programs: 11
Control Type: Push button
Recommended Use: Residential
Operating Mode: Fully automatic
Color: White
Dimensions (D x W x H): 40.5 x 59.8 x 84.5 cm
Weight: 50 kg
First Available: April 22, 2025

7.1 Energy Label Information



svan

SL6203AIDV

A

B

A

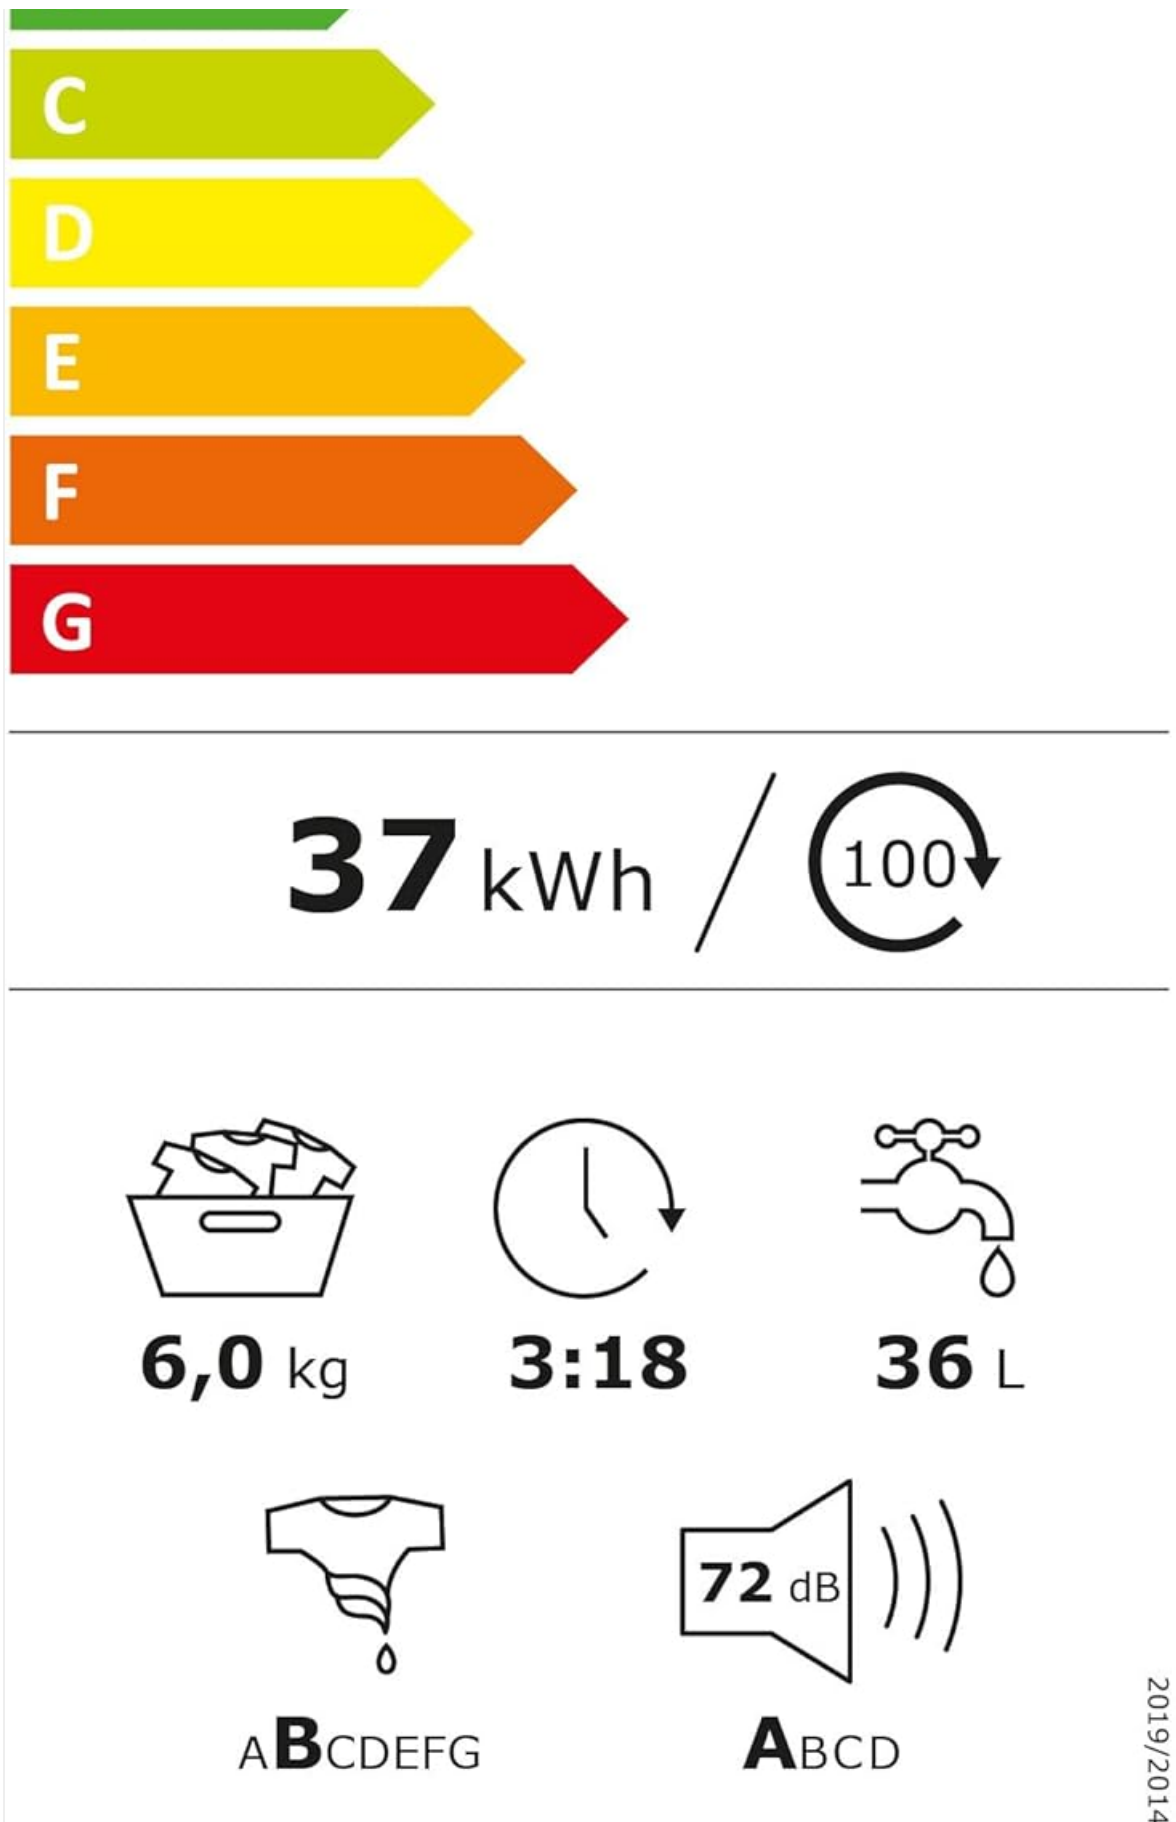


Figure 3: Energy efficiency label for the Svan SL6203AIDV, indicating Class A energy rating, 37 kWh/100 cycles, 6.0 kg capacity, 3:18 cycle duration, 36 L water consumption, and 72 dB noise level.

For detailed energy information, please refer to the EPREL database: <https://eprel.ec.europa.eu/qr/2213792>

8. WARRANTY AND SUPPORT

Your Svan SL6203AIDV washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact your retailer or the authorized Svan service center in your region.