

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Zumex](#) /
- › [Zumex VERSATILE BASIC 04817 Electric Juicer User Manual](#)

Zumex VERSATILE BASIC 04817

Zumex VERSATILE BASIC 04817 Electric Juicer User Manual

Model: VERSATILE BASIC 04817

1. INTRODUCTION

Thank you for choosing the Zumex VERSATILE BASIC 04817 Electric Juicer. This commercial-grade juicer is designed for high-volume juice production in foodservice establishments, offering efficient and automatic operation. Please read this manual thoroughly before installation, operation, or maintenance to ensure safe and optimal performance of your appliance.



Figure 1.1: Side view of the Zumex VERSATILE BASIC 04817 Electric Juicer, showing the fruit feeder basket and internal juicing mechanism.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Electrical Safety:** Ensure the juicer is connected to a grounded 115/120V power outlet. Do not operate with a damaged cord or plug. Disconnect power before cleaning or servicing.
- **Moving Parts:** Keep hands, hair, and clothing away from moving parts during operation. Never attempt to reach inside the juicer while it is running.
- **Supervision:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Cleaning:** Always turn off and unplug the juicer before cleaning. Refer to the "Maintenance and Cleaning" section for detailed instructions.
- **Placement:** Place the juicer on a stable, level surface. Ensure adequate ventilation around the unit.
- **Intended Use:** Use the juicer only for its intended purpose of extracting juice from citrus fruits. Do not process other types of produce or non-food items.

3. SETUP

1. **Unpacking:** Carefully remove the juicer from its packaging. Retain all packaging materials for future transport or storage.
2. **Inspection:** Inspect the juicer for any signs of damage during transit. Contact your supplier immediately if damage is found.
3. **Placement:** Position the juicer on a sturdy, level countertop capable of supporting its 120 lbs weight. Ensure there is sufficient space for operation and cleaning, and that the unit is away from heat sources or direct sunlight.
4. **Power Connection:** Plug the power cord into a dedicated 115/120V grounded electrical outlet.
5. **Initial Cleaning:** Before first use, clean all removable parts that will come into contact with fruit or juice according to the "Maintenance and Cleaning" section.

4. OPERATION

The Zumex VERSATILE BASIC 04817 is designed for automatic juicing of citrus fruits.

1. **Prepare Fruits:** Use fresh, firm citrus fruits (e.g., oranges, lemons, limes) of appropriate size for the juicer. Wash fruits thoroughly.
2. **Load Feeder:** Place the washed fruits into the top feeder basket. The juicer has a 22 lb capacity automatic feeder.
3. **Position Container:** Place a suitable juice collection container (e.g., pitcher, glass) under the juice spout.
4. **Start Juicing:** Press the ON button (usually green or marked with 'I') to start the juicing process. The machine will automatically feed, cut, and squeeze the fruits.
5. **Monitor Operation:** The juicer can process up to 40 fruits per minute. Monitor the juice level in the collection container and the fruit level in the feeder.
6. **Stop Juicing:** Press the OFF button (usually red or marked with 'O') to stop the juicing process.
7. **Empty Debris Tray:** Regularly empty the integrated debris tray for peel and pulp disposal to prevent overflow and maintain hygiene.

Your browser does not support the video tag.

Video 4.1: Demonstration of the commercial juicer machine in operation, showing fruit loading, automatic juicing, and juice dispensing.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance are crucial for the longevity and hygienic operation of your juicer.

1. **Power Off and Unplug:** Always turn off the juicer and unplug it from the power outlet before cleaning.
2. **Disassembly:** Carefully remove all detachable components, including the feeder basket, juicing mechanism parts, and debris tray.
3. **Washing:** Most removable parts are dishwasher-safe. For parts that are not dishwasher-safe (e.g., the clear plastic cover), wash them by hand with warm, soapy water and a soft brush. Rinse thoroughly.
4. **Main Unit Cleaning:** Wipe down the main unit's exterior with a damp cloth. Do not immerse the main unit in water or spray water directly onto electrical components.
5. **Drying and Reassembly:** Ensure all parts are completely dry before reassembling the juicer. Reassemble components in reverse order of disassembly, ensuring they are securely in place.
6. **Debris Tray:** Empty and clean the integrated debris tray after each use.

Note: The clear plastic cover is not dishwasher-safe and should be hand-washed.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your juicer.

Problem	Possible Cause	Solution
Juicer does not start.	Not plugged in; power switch off; safety interlock not engaged.	Ensure power cord is securely plugged in. Turn power switch ON. Check that all components are correctly assembled and the safety cover is closed.
Low juice yield.	Fruits are too dry or not fresh; incorrect fruit size; juicing mechanism clogged.	Use fresh, ripe citrus fruits. Ensure fruits are within the recommended size range. Clean the juicing mechanism thoroughly.
Excessive noise or vibration.	Unit not on a stable surface; foreign object in mechanism; loose components.	Place the juicer on a firm, level surface. Turn off and unplug, then inspect for any foreign objects. Ensure all removable parts are correctly installed.
Juice leaks from the unit.	Components not properly sealed; debris tray full.	Check that all removable parts are correctly assembled and sealed. Empty and clean the debris tray.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Name	VERSATILE BASIC
Item Model Number	04817
Brand	Zumex

Feature	Detail
Product Dimensions (D x W x H)	25" x 25" x 40"
Item Weight	120 pounds
Maximum Power	380 Watts
Voltage	115/120 Volts
Capacity (Feeder)	22 Pounds
Processing Speed	Up to 40 fruits per minute
Special Features	Antibacterial Technology, Automatic Feed, Built-in Feeder, High Capacity, Integrated Debris Tray
Dishwasher Safe Parts	Yes (except clear plastic cover)
Material (Blade)	Stainless Steel

8. WARRANTY AND SUPPORT

Zumex products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Zumex website. Keep your proof of purchase for warranty claims. For technical support, spare parts, or service inquiries, please contact your authorized Zumex dealer or customer service representative. Provide your model number (VERSATILE BASIC 04817) and serial number (if applicable) when contacting support.