

PSDRCBCCY-UPPERFLOWER-D100CM

Generic Nordic Chandelier D100cm Upper Flower Instruction Manual

Model: PSDRCBCCY-UPPERFLOWER-D100CM

1. INTRODUCTION

Thank you for purchasing the Generic Nordic Chandelier D100cm Upper Flower. This instruction manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read this manual thoroughly before installation and retain it for future reference.



Image 1.1: The Nordic Chandelier D100cm Upper Flower installed above a dining table.

2. IMPORTANT SAFETY INFORMATION

- **Electrical Installation:** Installation must be performed by a qualified electrician in accordance with all local electrical codes and regulations.
- **Power Disconnection:** Always disconnect power at the main circuit breaker before installing, cleaning, or servicing the fixture.
- **Voltage Compatibility:** Ensure the supply voltage matches the fixture's requirements (110V/220V/AC90-240V).
- **Secure Mounting:** Ensure the mounting surface can support the weight of the fixture.
- **Avoid Water:** Do not install in damp or wet locations. This fixture is designed for indoor use only.
- **Bulb Type:** Use only the specified bulb type and wattage.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all parts are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- Chandelier body (branch with flower lights)

- Mounting canopy
- Adjustable suspension cables
- Mounting hardware (screws, wire nuts, etc.)
- Instruction manual

4. INSTALLATION INSTRUCTIONS

Tools Required: Screwdriver, wire strippers, drill, ladder, voltage tester.

1. **Turn Off Power:** Locate the circuit breaker controlling the light fixture and turn off the power. Verify power is off using a voltage tester.
2. **Prepare Mounting Location:** If replacing an existing fixture, carefully remove it. Ensure the junction box is securely mounted and capable of supporting the chandelier's weight.
3. **Install Mounting Bracket:** Attach the mounting bracket to the junction box using the provided screws.
4. **Adjust Suspension Cables:** Determine the desired hanging height for the chandelier. Adjust the length of the suspension cables by pressing the pin on the canopy and sliding the cable to the desired length. Ensure both cables are of equal length for level hanging.

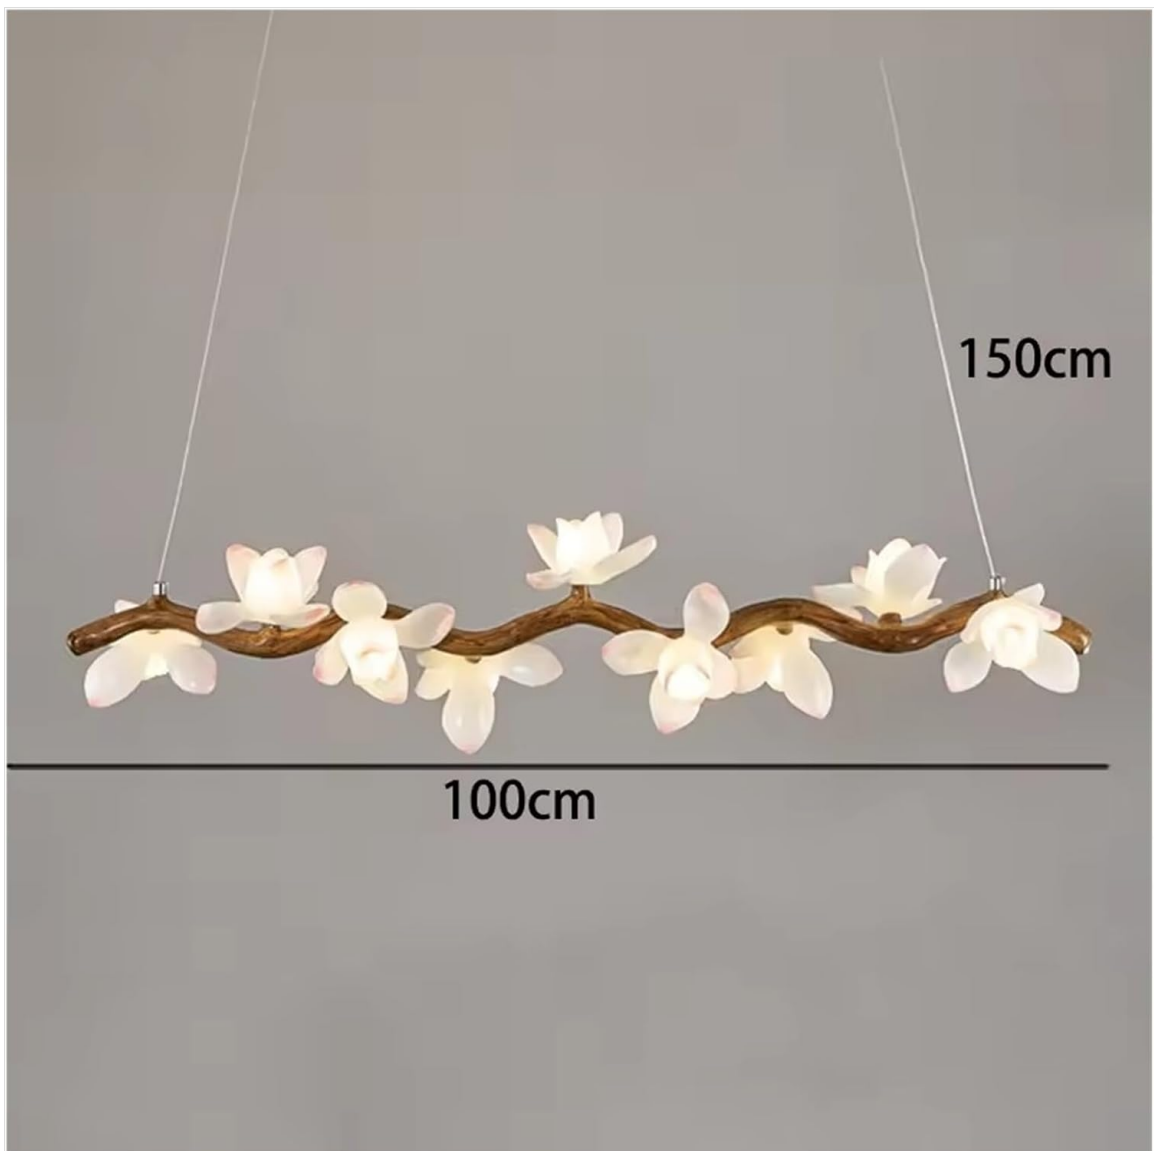


Image 4.1: Chandelier dimensions, illustrating 100cm length and adjustable suspension up to 150cm.

5. **Wiring:** Carefully connect the chandelier's wires to the household electrical wires. Connect the live (black or red) wire from the fixture to the live wire from the ceiling, the neutral (white) wire from the

fixture to the neutral wire from the ceiling, and the ground (green or bare copper) wire to the ground wire from the ceiling. Secure connections with wire nuts.

6. **Mount Canopy:** Carefully push the canopy up to the ceiling, aligning the screw holes with the mounting bracket. Secure the canopy with the provided screws.
7. **Install Light Sources:** The chandelier features integrated LED light sources within the flower designs. No separate bulbs are required for installation.



Image 4.2: Detail of a flower light and its connection to the main branch structure.

8. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

5. OPERATING INSTRUCTIONS

This chandelier is designed for simple operation. Once properly installed and powered, it functions like any standard ceiling light fixture.

- **Turning On/Off:** Use your existing wall switch to turn the chandelier on or off.
- **Light Output:** The chandelier is available in various configurations: 7 heads (35W), 9 heads (45W), and 11 heads (55W), providing illumination suitable for areas between 10-20 square meters.



Image 5.1: Close-up view of the illuminated flower lights.

6. MAINTENANCE

Regular cleaning will help maintain the appearance and performance of your chandelier.

- **Cleaning:** Always turn off the power at the circuit breaker before cleaning. Use a soft, dry, or slightly damp cloth to wipe the fixture. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or acrylic components.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.
- **LED Lifespan:** The integrated LED light sources are designed for long-term use and are not user-replaceable. If the LEDs fail, contact customer support.

7. TROUBLESHOOTING

If you experience issues with your chandelier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture; Loose wiring connection; Faulty wall switch	Check circuit breaker; Verify all wire connections are secure (with power off); Test or replace wall switch.

Problem	Possible Cause	Solution
Light flickers	Loose wiring connection; Incompatible dimmer switch (if applicable); Overheating	Check all wire connections (with power off); Ensure dimmer switch is LED-compatible; Ensure proper ventilation.
Fixture is not level	Uneven suspension cable adjustment	Adjust suspension cables to ensure equal length.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	PSDRCBCCY-UPPERFLOWER-D100CM
Brand	Generic
Type	Chandelier / Pendant Light
Color/Size	D100cm Upper Flower
Wattage Options	7 heads-35W, 9 heads-45W, 11 heads-55W
Applicable Area	10-20 square meters
Product Material	Ironware, Acrylic
Voltage	110V/220V/AC90-240V (Universal)
Power Source	AC
Indoor/Outdoor Usage	Indoor
Product Dimensions	1"L x 1"W x 1"H (Note: This appears to be a placeholder, actual length is 100cm as per image)
Item Weight	50 Grams (Note: This appears to be a placeholder)
Required Assembly	No (Refers to the main light body, installation is required)

9. WARRANTY AND SUPPORT

Specific warranty details for this product are not provided in the available information. For warranty claims, technical support, or replacement parts, please contact the seller or retailer from whom you purchased the product. Please have your purchase receipt and model number (PSDRCBCCY-UPPERFLOWER-D100CM) available when contacting support.