

Indesit IM 1072

Indesit IM 1072 MY TIME IT Washing Machine User Manual

Model: IM 1072 | Reference: 869991698710

1. SAFETY INFORMATION

Please read these instructions carefully before using the appliance and retain them for future reference. This manual provides important information regarding the safe installation, use, and maintenance of your washing machine.

- Ensure the appliance is properly earthed.
- Do not allow children to operate or play with the appliance.
- Never force the door open.
- Unplug the appliance before any cleaning or maintenance.
- Do not install the appliance in areas exposed to extreme temperatures or humidity.

2. PRODUCT OVERVIEW

The Indesit IM 1072 MY TIME IT is a front-loading washing machine designed for domestic use, offering efficient and rapid washing cycles. It features a 10 kg drum capacity and a maximum spin speed of 1200 rpm.



Image: Front view of the Indesit IM 1072 MY TIME IT Washing Machine, showcasing its white finish and central loading door.

Key Features:

- **Drum Capacity:** 10 kg for large loads.
- **Spin Speed:** Up to 1200 rpm for effective water extraction.

- **Rapid Cycles:** Includes 3 full-load 59-minute cycles, a 14-minute Express cycle, and a 28-minute Cotton program.
- **Steam Function:** Helps reduce wrinkles and soften fabrics.
- **Anti-Stain Program:** Targets stubborn stains for thorough cleaning.
- **AcquaFlex Technology:** Optimizes water consumption for environmental efficiency.
- **Energy Efficiency:** Rated A 10%.

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine. Refer to the detailed installation guide provided with the appliance for specific instructions.



Image: Indesit washing machine integrated into a modern laundry room setup, demonstrating typical placement.

3.1 Placement

- Place the washing machine on a flat, stable surface.
- Ensure adequate ventilation around the appliance.
- Maintain a minimum distance from walls or furniture as specified in the full manual.

3.2 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread.
- Ensure all connections are tight to prevent leaks.

3.3 Drainage

- Position the drain hose correctly into a standpipe or over the edge of a sink, ensuring it is securely fastened.

- The drain hose should not be kinked or obstructed.

3.4 Electrical Connection

- Plug the appliance into a properly earthed electrical socket.
- Do not use extension cords or multiple adapters.

3.5 Leveling

- Adjust the appliance's feet to ensure it is perfectly level. This prevents excessive vibration and noise during operation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Image: Detailed view of the Indesit washing machine's control panel, showing the program selector dial, display, and function buttons.

- **Program Selector Dial:** Used to choose the desired washing program.
- **Display:** Shows cycle time, temperature, spin speed, and other relevant information.
- **Function Buttons:** Activate special options like Steam, Anti-Stain, or AcquaFlex.
- **Start/Pause Button:** Initiates or pauses the washing cycle.

4.2 Detergent Dispenser



Image: The detergent drawer of the Indesit washing machine pulled open, showing compartments for pre-wash, main wash, and fabric softener.

The detergent dispenser has compartments for:

- **Compartment 1:** Pre-wash detergent (if applicable for selected program).
- **Compartment 2:** Main wash detergent.
- **Compartment 3:** Fabric softener.

Add the appropriate amount of detergent and fabric softener according to the manufacturer's instructions and the load size.

4.3 Loading Laundry



Image: The Indesit washing machine with its door open, revealing the stainless steel drum ready for loading laundry.

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload it.
- Close the door firmly until it clicks.

4.4 Selecting a Program

- Turn the Program Selector Dial to choose the desired washing program based on fabric type and soil level.
- The display will show the default duration and settings for the selected program.

4.5 Customizing Settings (Optional)

- Use the temperature and spin speed buttons to adjust these settings if desired.
- Press the relevant function buttons to activate special options like Steam, Anti-Stain, or AcquaFlex.

4.6 Starting a Cycle

- Press the Start/Pause button to begin the washing cycle.
- The door will lock, and the machine will start filling with water.

5. WASHING PROGRAMS

The Indesit IM 1072 MY TIME IT offers a variety of programs to suit different laundry needs. Refer to the control panel image for program names.



Image: Close-up of the Indesit washing machine's control panel, highlighting the program selection dial and digital display.

Rapid Cycles (MyTime):

- **Pieno Carico 59' (Full Load 59 min):** For large loads requiring a quick wash.
- **Misti 59' (Mixed 59 min):** For mixed fabrics with moderate soiling.
- **Sintetici 59' (Synthetics 59 min):** For synthetic garments.
- **Cotone 28' (Cotton 28 min):** Ideal for lightly soiled cotton items.
- **Express 14' (Express 14 min):** A very quick refresh cycle for small, lightly soiled loads.

Standard Programs:

- **Antimacchia (Anti-Stain):** Designed to tackle tough stains effectively.
- **Misti (Mixed):** For daily mixed laundry.
- **20°C:** Energy-saving wash at low temperature.
- **Cotone (Cotton):** For durable cotton fabrics.
- **Eco 40-60:** Energy-efficient program for cottons and mixed items washable at 40°C or 60°C.
- **Lana e Delicati (Wool & Delicates):** Gentle wash for wool and delicate items.
- **Pulizia Cestello (Drum Clean):** A self-cleaning cycle for the washing machine drum.

Special Functions:

- **Risciacquo (Rinse):** An extra rinse cycle.
- **Centrifuga e Scarico (Spin & Drain):** Drains water and performs a spin cycle.

- **Vapore (Steam):** Reduces wrinkles and refreshes clothes.
- **AcquaFlex:** Optimizes water usage.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water.
- Clean any residue from the compartments and the housing.

6.2 Cleaning the Door Seal

- Wipe the rubber door seal with a damp cloth after each wash to remove lint and detergent residue.

6.3 Cleaning the Filter

- Periodically clean the drain pump filter to prevent blockages. Refer to the full manual for location and procedure.

6.4 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.5 Descaling

- Use a suitable descaling product periodically, especially in hard water areas, following the product's instructions.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, consult this section before contacting customer service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, program not selected, Start/Pause not pressed.	Check power connection, ensure door is latched, select a program, press Start/Pause.
Water not filling	Water tap closed, inlet hose kinked, water supply issue.	Open water tap, straighten hose, check household water supply.
Water not draining	Drain hose kinked or blocked, filter clogged.	Straighten drain hose, clean the drain pump filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry.
Detergent residue in dispenser	Insufficient water pressure, clogged dispenser.	Check water pressure, clean the detergent dispenser.

8. SPECIFICATIONS

Technical details for the Indesit IM 1072 MY TIME IT Washing Machine.

Feature	Specification
Model	IM 1072 MY TIME IT
Reference Number	869991698710
Brand	Indesit
Appliance Type	Front-loading Washing Machine
Installation Type	Freestanding
Color	White
Drum Capacity	10 kg
Maximum Spin Speed	1200 rpm
Dimensions (H x W x D)	84.5 cm x 60 cm x 58 cm
Weight	72 kg
Energy Efficiency Class	A 10%
Manufacturer	Beko Europe Management Srl

9. WARRANTY AND SUPPORT

Your Indesit IM 1072 MY TIME IT Washing Machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the Indesit official website or in the documentation provided with your appliance.

When contacting support, please have your model number (IM 1072) and reference number (869991698710) readily available.



Washing - Machine User Manual



IMA 764 MY TIME UK
800007120700

CE

[Indesit IMA 764 MY TIME UK Washing Machine User Manual](#)

Comprehensive user manual for the Indesit IMA 764 MY TIME UK washing machine, covering safety, installation, operation, maintenance, and troubleshooting.



[Indesit Washing Machine Quick Guide - Model IWC71252WUKN](#)

Concise guide for the Indesit IWC71252WUKN washing machine, covering control panel, wash cycles, operation, maintenance, and troubleshooting. Learn how to use your Indesit appliance efficiently.

Instructions for use

WASHING MACHINE



[Indesit IWC 71253 Washing Machine Instructions for Use](#)

Comprehensive guide for the Indesit IWC 71253 washing machine, covering installation, operation, care, maintenance, and troubleshooting.



[Indesit Washer-Dryer: Quick Guide and User Information](#)

Get started with your Indesit washer-dryer. This quick guide covers control panel functions, wash cycles, product details, and troubleshooting for efficient laundry care.


Instructions for use

WASHING MACHINE



[Indesit IWSC 61051 Washing Machine User Manual and Instructions](#)

This document provides comprehensive instructions for the Indesit IWSC 61051 washing machine, covering installation, operation, care, maintenance, troubleshooting, and technical specifications for optimal use.

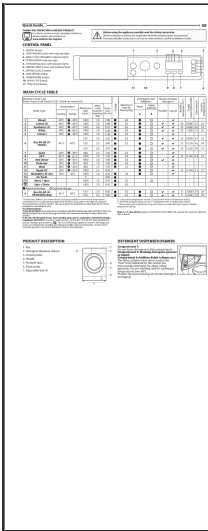

[Indesit Washing Machine Quick Guide: Operation, Maintenance, and Troubleshooting](#)

A comprehensive quick guide for Indesit washing machines, covering control panel functions, wash cycle details, daily operation, maintenance tips, and troubleshooting solutions. Learn how to use your appliance efficiently and maintain it for optimal performance.