Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- AODELAN /
- > AODELAN BR-3 Wireless Remote Control for Fujifilm Cameras User Manual

AODELAN BR-3

AODELAN BR-3 Wireless Remote Control for Fujifilm Cameras User Manual

INTRODUCTION

This manual provides comprehensive instructions for the AODELAN BR-3 Wireless Remote Control, designed for use with compatible Fujifilm X-series cameras. It covers product overview, key features, setup, operating procedures, charging, compatibility, and troubleshooting to ensure optimal performance and user experience.

PRODUCT OVERVIEW

The AODELAN BR-3 is a compact and lightweight wireless remote control that offers enhanced control over your Fujifilm camera's functions, including shutter release, video recording, and zoom. It features an OLED display for clear status indication and a rechargeable battery for extended use.



Image: The AODELAN BR-3 Wireless Remote Control shown alongside a Fujifilm camera, illustrating its compact design and the OLED display.

KEY FEATURES

- **Rechargeable Battery:** Integrated USB-C rechargeable battery provides approximately 10 hours of continuous operation on a single charge.
- **OLED Screen Display:** Visualizes operations and current status for clear and specific function settings.
- **Still Photo and Video Shooting:** Supports single shots, continuous shooting, Bulb mode, self-timer, and video recording.
- Focus/Zoom Control: Half-press for focus (camera in AF mode), full-press for shutter. Zoom function available with power zoom lenses.
- Lock Function: Disables control buttons to prevent unintentional operations.
- Wireless Range: Operates up to 10 meters (32.8 feet) away from the camera.
- Durable Design: Resistant to dust and moisture, suitable for various environmental conditions.



Image: An infographic illustrating the key features of the AODELAN BR-3 remote control, including its rechargeable nature, OLED screen, various shooting modes, focus/zoom capability, Bulb mode, and 10m range.

COMPATIBILITY

The AODELAN BR-3 Wireless Remote Control is compatible with the following Fujifilm camera models and their specified firmware versions:

- X Mirrorless Digital Cameras: X-H2S (Ver.3.00 or later), X-H2 (Ver.1.20 or later), X-T5 (Ver.1.00 or later), X-T4 (Ver.1.70 or later), X-T3 (Ver.4.50 or later), X-S20, X-S10 (Ver.2.60 or later), X-T50, X-T30 II (Ver.1.20 or later), X-T30 (Ver.1.50 or later), X-M5, X-E5.
- X Fixed Lens Cameras: X100VI.

Note: Remote zoom functionality is only available with power zoom lenses. The X-T30 II, X-T30, and X100VI models do not support remote zoom at this time, even with a compatible zoom lens.

Compatible with Fujifilm Models:

X Mirrorless Digital Camera: X-H2S,X-H2,X-T5,X-T4,X-T3,X-S20,X-S10,

X-T50,X-T30 II,X-T30,X-M5,X-E5

X Fixed Lens Camera: X100VI,X half;

-Compatible models and the firmware versions are

X-H2S (Ver.3.00 or later), X-H2 (Ver.1.20 or later)

X-T5 (Ver.1.00 or later), X-T4 (Ver.1.70 or later)

X-T3 (Ver.4.50 or later), X-S10 (Ver.2.60 or later)

X-T30II (Ver.1.20 or later), X-T30 (Ver.1.50 or later)

Remote zoom is only available with zoom lenses. (Even with a zoom lens, the X-T30 II/

X-T30/X100VI does not support remote zoom for the time being.)



Image: A visual representation of the compatible Fujifilm camera models and their required firmware versions for use with the AODELAN BR-3 remote control.

SETUP: PAIRING INSTRUCTIONS

Follow these steps to pair your AODELAN BR-3 remote control with your Fujifilm camera. The pairing procedure may vary slightly between camera models.

1. Prepare the Camera for Pairing (Example: Fujifilm X-T5)

- 1. Turn on your Fujifilm camera.
- 2. Press and hold the (**Bluetooth**) button on the camera for two seconds. Bluetooth options will be displayed.
- 3. Navigate to MENU → CONNECTION SETTING → [Bluetooth/SMARTPHONE SETTING].
- 4. Select [Bluetooth ON/OFF] → [ON].
- 5. Select [Pairing] (or [PAIRING REGISTRATION]). The camera will initiate the pairing process, displaying "SEARCHING".

2. Pair the Remote Control

1. Ensure the AODELAN BR-3 remote control is powered on. The OLED screen will display "Scanning".


- 2. Press and hold the **Pair** button (bottom right button with a chain link icon) on the remote control for at least 2 seconds. The remote will enter pairing state, displaying "Pairing".
- 3. Once the camera detects the remote, the remote's screen will display "OK!" and the camera screen will show "PAIRING COMPLETE".
- 4. If the smartphone name is not correct, please try pairing again.

How to Pair


(Take XT-5 as an example, the pairing procedure may be different for different cameras, contact customer service for more support)

On the camera, press and hold the
(Bluetooth) button. Bluetooth options will be displayed.



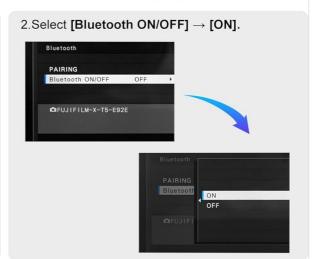

3.Select [Pairing] (or [PAIRING REGISTRATION]). The camera will initiate the pairing process.

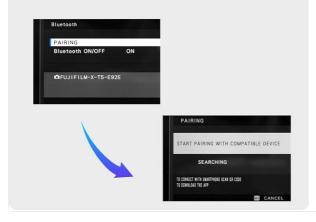

4. On the Remote Control, press and hold the pair button for at least 2 seconds.



Image: A visual guide demonstrating the pairing process between the AODELAN BR-3 remote control and a Fujifilm X-T5 camera, showing menu navigation and remote button presses.

Connection Settings


Press MENU on the camera, select [SET UP] →
[CONNECTION SETTING] → [Bluetooth/SMARTPHONE SETTING]. Bluetooth options will be displayed.

(If there is a [®] (Bluetooth) button on the camera, pressing and holding this button also displays the Bluetooth options.)



Take Fujifilm X-S10 as an example, the menu of different cameras may be different, refer to the actual or consult customer service.

2. In the Bluetooth options, select [Bluetooth ON/OFF] \rightarrow [ON].

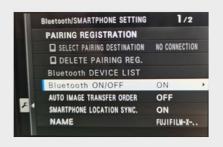

3. In the Bluetooth options, select [Pairing] (or [PAIRING REGISTRATION]).



4. The camera initiates the pairing process.

On the Remote Control, press and hold the pair button for at least 2 seconds.

When pairing is complete, the camera screen says "PAIRING COMPLETE".

(When you enter shooting mode, $\bar{\mathbb{A}}$ is displayed on the shooting screen.)



Image: An illustration of the connection settings menu on a Fujifilm X-S10 camera, detailing the steps to enable Bluetooth and initiate pairing with the remote control.

OPERATING INSTRUCTIONS

Once paired, the AODELAN BR-3 remote control allows you to operate various camera functions wirelessly.

1. Shutter Release for Still Photos

- Ensure your camera is set to the desired still photo mode.
- Press the **Shutter Release button** (large camera icon) halfway down to focus. The camera needs to be in AF (auto focus) mode.
- Press the **Shutter Release button** all the way down to take a photo.
- For Bulb shooting, press the Shutter Release button once to open the shutter, and press it again to close the shutter.

2. Video Recording

- Adjust your camera to the video recording mode.
- Press the Movie Recording button (red dot icon) to start recording a video.
- Press the Movie Recording button again to stop recording.



Image: Two scenarios demonstrating the use of the AODELAN BR-3 remote control for capturing still photos and initiating video recording, with a focus on the shutter and record buttons.

3. Focus and Zoom Function

- Focus: Half-press the Shutter Release button to activate autofocus.
- **Zoom:** Use the (+) and (-) buttons for zooming. The zoom speed is controlled by how far the button is pressed. A light press results in slow zoom, while a full press results in fast zoom. This function is only available with power zoom lenses and when the camera supports remote zoom.



Image: A split image showing a wide-angle and telephoto view, illustrating the zoom capability of the AODELAN BR-3 remote control with a compatible lens, along with its operating distance.

4. Lock Function

- Press and hold the **Control Lock button** (padlock icon) to disable all other control buttons on the remote. This prevents accidental operations. The OLED screen will display a padlock icon.
- To unlock, press and hold the **Control Lock button** again until the padlock icon disappears from the screen.

1.+(zoom in),-(zoom out) button

Controls the camera to perform the operation of power zoom(when supports).

2. Control lock button

Disables the control buttons on the Remote Control in order toprevent unintentional operations.

Press and hold the button until the icon $\stackrel{\triangle}{=}$ appears on the screerand the control buttons are locked. To unlock it, press and holdthe button until the icon $\stackrel{\triangle}{=}$ disappears.

3. Movie recording button

Starts recording a movie with the camera.

4.Shutter-release button

Take pictures with the camera. When the camera is set to B shuttel(BULB)exposure, press and hold the button to start the exposurerelease the button to end the exposure.

5. Power button

Press and hold to turn the Remote Control on or off.

6. Pair button

Press and hold the button for at least 2 seconds, the RemoteControl enters the pairing state (the screen displays "Pairing")While in the pairing state, press the button to make the RemoteControl exit the pairing state.

7. USB Type-c connector

Used to connect to an external power source (5V)to charge theRemote Control.Can also be used for firmware update (when necessary).

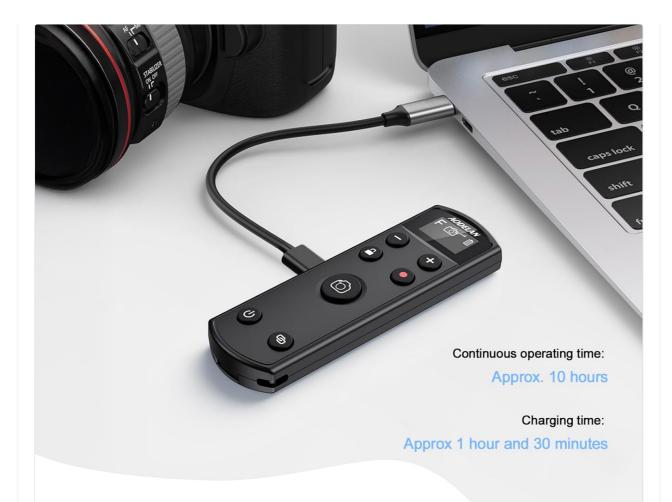


Image: A detailed diagram of the AODELAN BR-3 remote control, labeling each button and its corresponding function, including the zoom, control lock, movie recording, shutter release, power, pair, and USB Type-C connector.

CHARGING AND BATTERY LIFE (MAINTENANCE)

The AODELAN BR-3 remote control features a built-in rechargeable battery. To charge the device, connect it to a 5V external power source using the provided USB-C cable. A full charge typically takes approximately 1 hour and 30 minutes and provides up to 10 hours of continuous operating time. To conserve battery life, press the power button to shut down the remote when not in use.

The USB-C interface also supports firmware upgrades, which can help prevent incompatibility issues with future camera updates.



Rechargeable and Upgradable

Built in rechargeable battery,the Type-C interface can be used for both charging and firmware upgrades to prevent incompatibility caused by future camera upgrades.

Image: The AODELAN BR-3 remote control connected to a laptop via its USB-C cable for charging, with text indicating approximate charging and operating times.

TROUBLESHOOTING

- Remote not pairing: Ensure both the camera and remote are powered on and in pairing mode. Check camera's Bluetooth settings. Ensure the remote's battery is charged.
- Remote not responding: Check if the remote's Lock Function is activated. Ensure the remote is within the 10m operating range. Verify the remote's battery level.
- **Zoom function not working:** Confirm that your camera is equipped with a power zoom lens and that the camera model supports remote zoom functionality. Refer to the compatibility section.
- **Intermittent connection:** Avoid obstructions between the remote and the camera. Ensure no other Bluetooth devices are causing interference.

SPECIFICATIONS

Feature	Detail
Brand	AODELAN
Model Number	BR-3

Item Weight	2.39 ounces
Package Dimensions	4.61 x 1.97 x 1.06 inches
Special Feature	Lightweight, OLED Screen
Max Number of Supported Devices	1
Compatible Devices	Fujifilm Cameras (X-series)
Connectivity Technology	Bluetooth
Power Source	Rechargeable USB-C

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or service, please refer to the documentation included with your purchase or visit the official AODELAN website. Contact details for customer service are typically available on the product packaging or the manufacturer's support page.

Related Documents - BR-3



AODELAN WTR-2 TRS-1 Wireless Timer Remote Shutter Release User Manual

Comprehensive user manual for the AODELAN WTR-2 and TRS-1 wireless and wired timer remote shutter release systems. Learn about features, setup, operation, safety, and technical specifications for photographers.



AODELAN WTR-2 & TRS-1 Wireless Timer Remote Shutter Release User Manual

Comprehensive user manual for the AODELAN WTR-2(T), WTR-2(R), and TRS-1 wireless and wired timer remote shutter release systems. Learn about features, setup, operation, and technical specifications.



AODELAN BR-E1A Wireless Remote Control User Manual

User manual for the AODELAN BR-E1A Wireless Remote Control, detailing its features, setup, operation for still photos and movies, compatibility with Canon cameras, and specifications. Includes safety precautions and regulatory information.



AODELAN BR-E1A Wireless Remote Control User Manual | Features & Specifications

Comprehensive user manual for the AODELAN BR-E1A Wireless Remote Control. Learn about its features, setup, shooting modes, safety precautions, and specifications. Compatible with Canon cameras.



FCC Test Report for Shenzhen Aodelan Technology Co., Ltd. Wireless Remote Control Model RMT-P1BTA

This FCC test report details the compliance testing for the Shenzhen Aodelan Technology Co., Ltd. Wireless Remote Control, model RMT-P1BTA, conducted by Shenzhen LCS Compliance Testing Laboratory Ltd. The report covers radiated emissions, bandwidth measurements, and antenna requirements according to FCC Part 15 Subpart C.



Aodelan PEBBLE Wireless Shutter Remote User Manual

This user manual provides instructions for the Aodelan PEBBLE Wireless Shutter Remote, covering its features, operation, troubleshooting, and warranty information. It details how to use the transmitter and receiver for various shooting modes including autofocus, single shot, continuous release, and Bulb shooting, as well as its functionality as a wired remote.