

[Manuals.plus](#) /

› [Monster](#) /

› Monster TVLink 300 Wireless Headphones User Manual

Monster H20

Monster TVLink 300 Wireless Headphones User Manual

Model: H20

INTRODUCTION

Thank you for choosing the Monster TVLink 300 Wireless Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure an optimal audio experience for your home entertainment.

WHAT'S IN THE BOX

- Monster TVLink 300 Wireless Headphones
- Transmitter Charging Base
- Optical Audio Cable
- 3.5mm AUX Audio Cable
- RCA Audio Adapter Cable
- USB Charging Cable (for power adapter, not included)
- User Manual

PRODUCT OVERVIEW

The Monster TVLink 300 system consists of over-ear wireless headphones and a versatile transmitter that also functions as a charging base. The headphones are designed for comfortable, extended listening with clear audio, while the transmitter provides stable connectivity to your television.





Image: Monster TVLink 300 Wireless Headphones resting on their charging base.

Headphone Components

- **Earcups:** Soft, over-ear cushions for comfort.
- **Power/Volume Controls:** Located on the earcups for easy access.
- **Charging Contacts:** On the underside of the earcups, for charging on the base.
- **Audio Drivers:** Equipped with 40mm drivers for detailed sound.

Pure Monster Sound

Equipped with 40mm drivers, it delivers rich, detailed tones with powerful clarity and depth.



Image: An exploded diagram illustrating the internal components of the headphone's 40mm audio driver, highlighting its design for clear and powerful sound.

Transmitter Charging Base Components

- **Charging Dock:** Area for placing headphones to charge.
- **Input Ports:** Optical, AUX (3.5mm), and USB-C power input.
- **Status Indicator:** LED light indicating connection and charging status.

SETUP

1. Charging the Headphones

1. Connect the transmitter charging base to a power source using the provided USB charging cable and a compatible USB power adapter (not included).
2. Place the headphones onto the charging base. Ensure the charging contacts on the headphones align with those on the base.

3. The LED indicator on the base will show charging status. A full charge typically takes approximately 2-3 hours.

2. Connecting the Transmitter to Your TV

The transmitter offers multiple connection options. Choose the method that best suits your television's available audio outputs.



Image: The Monster TVLink 300 transmitter base displaying its various audio input options: Optical, AUX In (3.5mm), and RCA Adapter, along with compatible TV brands.

Optical Audio Connection (Recommended for Digital Audio)

1. Connect one end of the Optical Audio Cable to the OPTICAL OUT port on your TV.
2. Connect the other end of the Optical Audio Cable to the OPTICAL IN port on the transmitter base.
3. Ensure your TV's audio output settings are configured to 'PCM' or 'Stereo' for the optical output, as Dolby Digital or DTS formats are not supported.

AUX (3.5mm) Audio Connection

1. Connect one end of the 3.5mm AUX Audio Cable to the HEADPHONE OUT or AUDIO OUT (3.5mm) port on your TV.
2. Connect the other end of the 3.5mm AUX Audio Cable to the AUX IN port on the transmitter base.

RCA Audio Connection (using RCA Adapter)

1. Connect the 3.5mm end of the RCA Audio Adapter Cable to the AUX IN port on the transmitter base.
2. Connect the red and white RCA plugs of the adapter to the corresponding AUDIO OUT (red and white) ports on your TV.

3. Initial Pairing

Once the transmitter is powered on and connected to your TV, and the headphones are charged and powered on, they should automatically pair. The status indicator on both the headphones and the transmitter will confirm a successful connection.

OPERATING

Power On/Off

- To power on the headphones, slide the power switch to the 'ON' position.
- To power off, slide the power switch to the 'OFF' position.

Volume Adjustment

- Use the volume control buttons located on the earcup to increase or decrease the audio volume.

Wearing the Headphones

Adjust the headband for a comfortable and secure fit. The earcups are designed to fully enclose your ears for optimal sound isolation and comfort during extended viewing sessions.

Surrounded by Sound

Experience clear, layered tones that flow around you, bringing every scene closer and more vivid.



Image: A woman comfortably wearing the Monster TVLink 300 headphones while enjoying television, illustrating the immersive audio experience.

Bluetooth 6.0 Connection

The headphones utilize Bluetooth 6.0 technology for a stable and low-latency connection with the transmitter, ensuring synchronized audio with your TV content.

MAINTENANCE

Cleaning

- Wipe the headphones and transmitter with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Avoid getting moisture into any openings.

Storage

- When not in use, store the headphones on the charging base to keep them charged and ready.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

No Sound

- Ensure the headphones are powered on and charged.
- Verify the transmitter is properly connected to the TV's audio output and powered on.
- Check the TV's audio output settings (e.g., ensure 'PCM' is selected for optical).
- Increase the volume on both the headphones and the TV.

Connection Issues

- Ensure the headphones are within range of the transmitter.
- Power cycle both the headphones and the transmitter.
- Confirm no other Bluetooth devices are causing interference.

Poor Audio Quality

- Check the audio cable connections for looseness or damage.
- Ensure the TV's audio output is clean and free from static.
- Move away from potential sources of wireless interference.

SPECIFICATIONS

Model Name	Monster TVLink 300
Item Model Number	H20
Wireless Communication Technology	Bluetooth 6.0
Form Factor	Over Ear
Color	Black
Item Weight	1.32 pounds (0.6 Kilograms)
Batteries	1 A battery required (included)
Manufacturer	Monster

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or liquids.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Dispose of batteries according to local regulations. Do not incinerate.
- Prolonged listening at high volumes may cause hearing damage. Adjust volume to a safe level.

WARRANTY AND SUPPORT

Monster products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Monster website. You may also contact Monster customer service for assistance.

For more information, visit the [Monster Store on Amazon](#).

© 2025 Monster. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why will my Monster TVLink 300 (H20) headphones not pair with the transmitter base when used with my TCL 75Q671G TV?

The Monster TVLink 300 (Model H20) is designed to pair automatically once both the transmitter base and the headphones are powered on. If they are not connecting, please follow these troubleshooting steps: Power Cycle:...

[Read full answer](#)