

## ECONTROLLY LP-099

# Instruction Manual

## ECONTROLLY REPLACEMENT AUDIO REMOTE CONTROL

Model: LP-099

### Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your ECONTROLLY Replacement Audio Remote Control, compatible with LONPOO LP-099 Compact Multi Region DVD CD Disc Player. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

### Product Overview

The ECONTROLLY Replacement Audio Remote Control is designed as a direct replacement for the original remote of the LONPOO LP-099 DVD CD Disc Player. It is an infrared remote control and does not require any programming for immediate use. Its compact design ensures comfortable handling.





Figure 1: Front view of the ECONTROLLY Replacement Remote Control, showing all buttons and their labels.



Figure 2: Angled view of the remote control, highlighting its ergonomic design.

## Setup

### Battery Installation

The remote control requires AAA ALKALINE batteries for operation. Rechargeable batteries are not supported.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Close the battery compartment cover securely.

**Important: Batteries are not included with the remote control. Do not use rechargeable batteries.**

## Operating Instructions

This remote control is pre-programmed and ready to use with compatible LONPOO LP-099 Compact Multi Region DVD CD Disc Players. Point the remote control directly at the infrared sensor on your DVD/CD player.

### Button Functions

Button	Function
<b>STANDBY</b>	Powers the device on or off (standby mode).
<b>OPEN/CLOSE</b>	Opens or closes the disc tray.
<b>USB</b>	Switches input to USB mode.
<b>L/R</b>	Selects left or right audio channel.
<b>OSD</b>	Displays On-Screen Display menu.
<b>SUB/COPY</b>	Controls subtitle options or copy function.
<b>AUDIO</b>	Cycles through available audio tracks.
<b>ANGLE</b>	Changes camera angle on compatible DVDs.
<b>ZOOM</b>	Zooms in or out on the video.
<b>PROGRAM</b>	Accesses program playback mode.
<b>N/R</b>	Noise Reduction function.
<b>VOL- / VOL+</b>	Decreases / Increases volume.
<b>STEP</b>	Advances video frame by frame.
<b>REPEAT</b>	Repeats current track/chapter/disc.
<b>A-B</b>	Repeats a specific section between points A and B.
<b>SLOW</b>	Plays video in slow motion.
<b>MENU/PBC</b>	Accesses disc menu or Playback Control.
<b>TITLE</b>	Returns to the disc title menu.
<b>Navigation Buttons (Up, Down, Left, Right, OK)</b>	Navigates through menus and confirms selections.
<b>SETUP</b>	Accesses the system setup menu.
<b>RETURN</b>	Returns to the previous menu or screen.

Button	Function
<b>Playback Controls (Previous, Play/Pause, Stop, Next, Fast Rewind, Fast Forward)</b>	Standard media playback functions.
<b>Numeric Keypad (0-9)</b>	Direct input for track numbers, chapters, or time.
<b>TIME</b>	Displays or inputs specific time points.
<b>CLEAR</b>	Clears current input or selection.



Figure 3: Example of the remote control in use with a compatible DVD player and television.

## Maintenance

- Keep the remote control dry. Avoid exposure to liquids or excessive humidity.


- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the remote control or subjecting it to strong impacts.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

## Troubleshooting

Problem	Possible Cause / Solution
Remote control not responding.	<ul style="list-style-type: none"> <li>• Batteries are depleted or incorrectly inserted. Replace with new AAA ALKALINE batteries, ensuring correct polarity.</li> <li>• Remote control is not pointed directly at the device's infrared sensor. Ensure a clear line of sight.</li> <li>• Distance to the device is too far. Move closer to the DVD/CD player.</li> <li>• Infrared sensor on the DVD/CD player is obstructed or faulty.</li> </ul>
Buttons are sticky or unresponsive.	<ul style="list-style-type: none"> <li>• Dirt or debris under the buttons. Clean the remote control as per maintenance instructions.</li> <li>• Internal damage.</li> </ul>

## Specifications

- **Model:** LP-099 Compatible Replacement Remote Control
- **Compatibility:** LONPOO LP-099 Compact Multi Region DVD CD Disc Player
- **Power Source:** 2 x AAA ALKALINE Batteries (not included)
- **Technology:** Infrared (IR)
- **Dimensions:** 3.94 x 1.57 x 0.59 inches (approximately)
- **Item Weight:** 1.76 ounces (without batteries)
- **Color:** Black

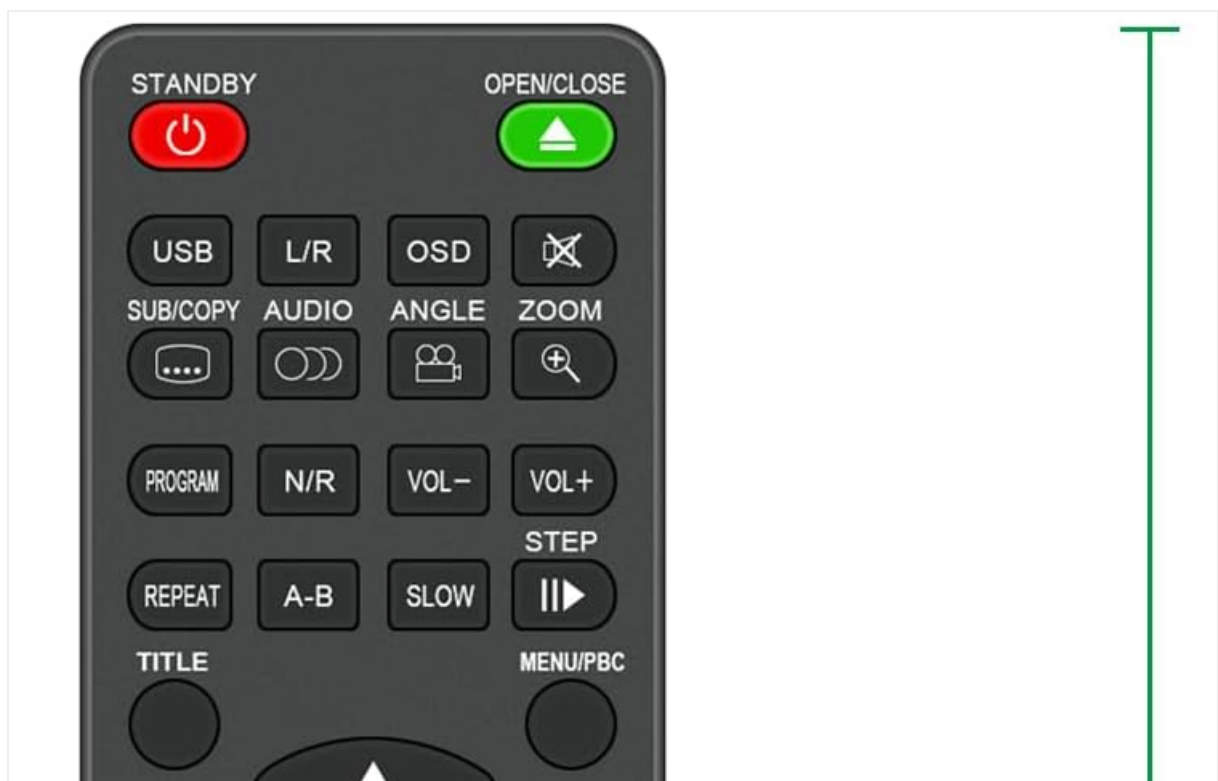

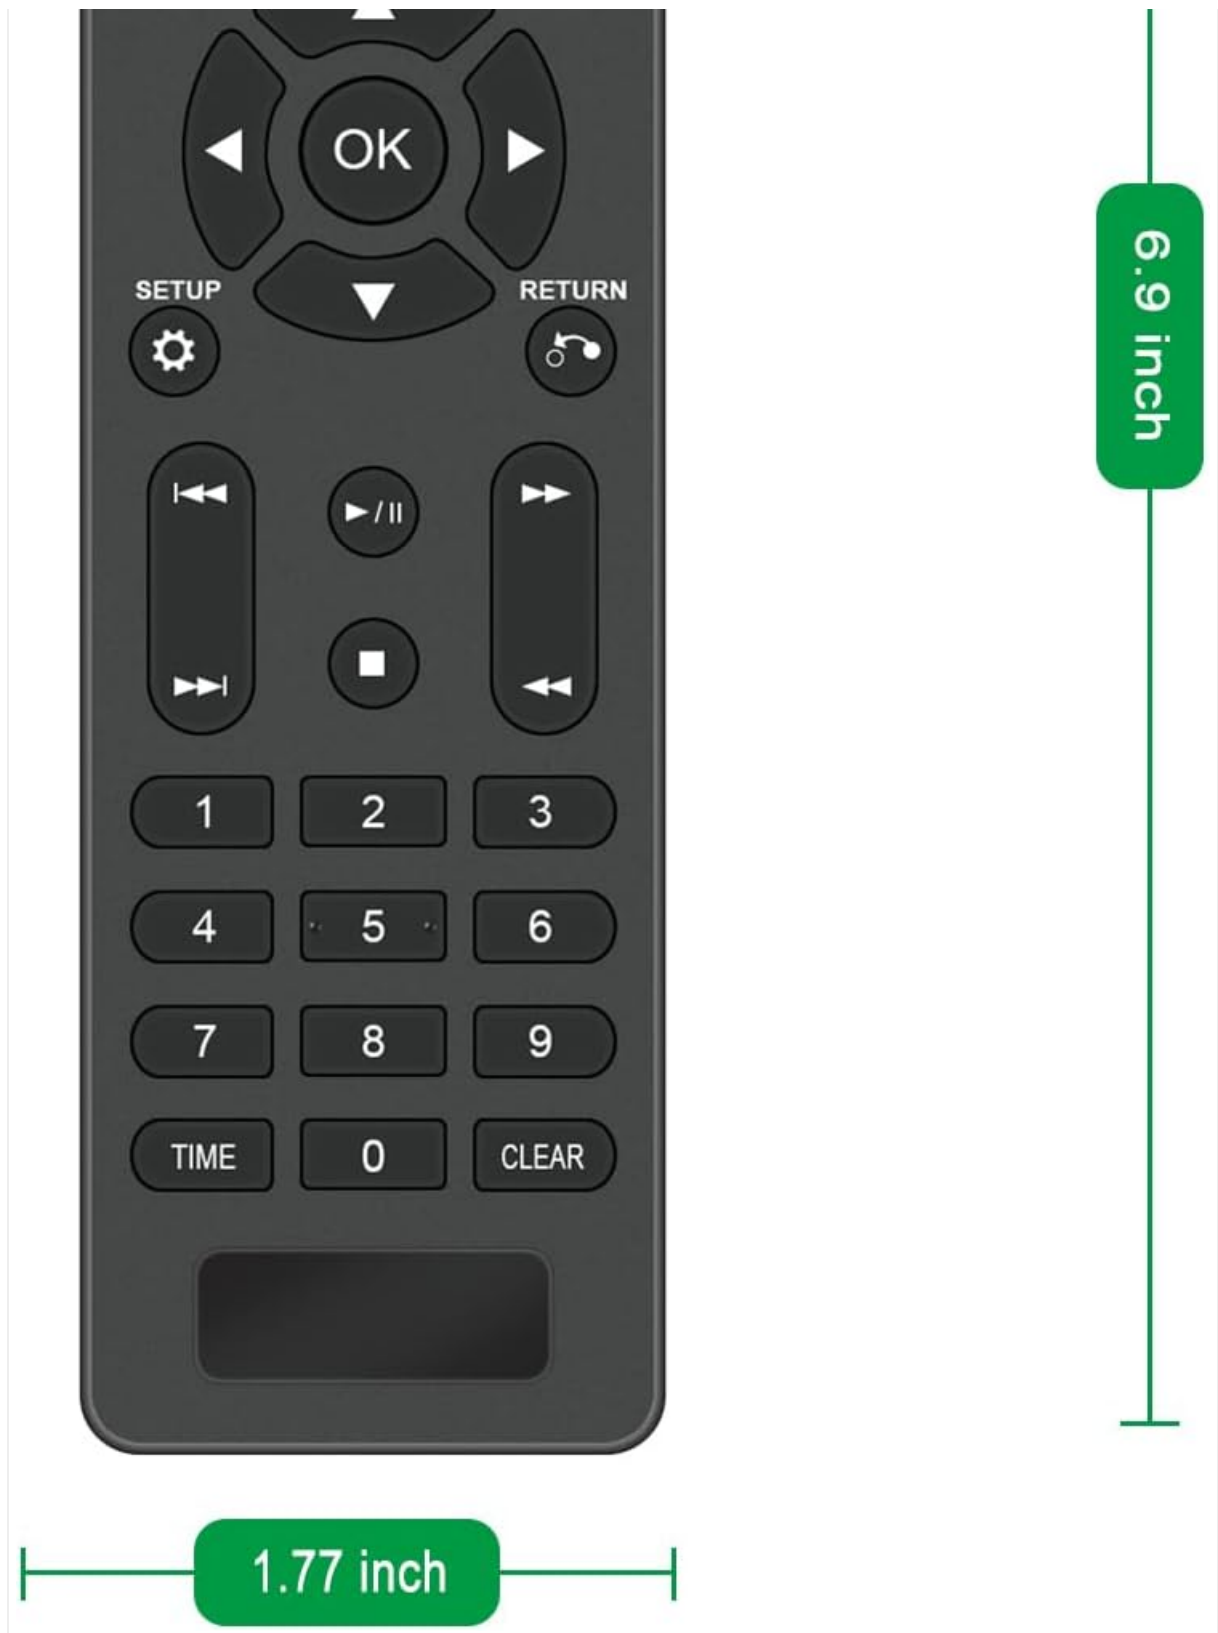


Figure 4: Approximate dimensions of the remote control.

## Warranty and Support

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the seller directly. This replacement remote control is designed to function out-of-the-box without complex setup.



