

Lamshaw 22mm Jewelry Chain Metal and Leather Smartwatch Band

Lamshaw 22mm Jewelry Chain Metal and Leather Smartwatch Band Instruction Manual

Model: 22mm Jewelry Chain Metal and Leather Smartwatch Band

[Introduction](#) [Compatibility](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
& Support

1. INTRODUCTION

This manual provides instructions for the proper installation, adjustment, care, and troubleshooting of your Lamshaw 22mm Jewelry Chain Metal and Leather Smartwatch Band. Please read this manual carefully before use to ensure optimal performance and longevity of your product.

2. COMPATIBILITY

This smartwatch band is designed for smartwatches requiring a 22mm band. It is compatible with the following models:

- ID208 Plus
- IDW13
- IDW16
- IDW17
- IDW19
- IDW20
- IDW21
- IDW23
- IDW25
- IDW26
- IDW28 Smartwatch
- Quican ID208 Plus 1.8 Inches
- aeac ID208 Plus
- WMK ID208 Plus 1.8 Inches Smart Watch

3. SETUP AND INSTALLATION

Follow these steps to attach the band to your smartwatch and adjust its length for a comfortable fit.

3.1 Attaching the Band to Your Smartwatch

1. Locate the spring bars on your smartwatch and the corresponding holes on the band.
2. Insert one end of the spring bar into the lug hole of the smartwatch.
3. Using the provided tool or your finger, compress the spring bar and align the other end with the opposite lug hole.
4. Release the spring bar, ensuring it clicks securely into place. Gently pull on the band to confirm it is properly attached.
5. Repeat for the other side of the band.



Image: The Lamshaw smartwatch band securely attached to a smartwatch on a user's wrist, demonstrating proper installation.

3.2 Adjusting Band Length

The band features a fold-over clasp and adjustable links to fit wrist sizes from 5.9 inches to 8.2 inches (140-208mm). Adjust the band by removing or adding links as needed.



Image: A step-by-step diagram illustrating how to adjust the band length by folding and pressing link points to remove or add buckles. Needles are used to fix the band to the watch.

1. **Identify Adjustable Links:** The package includes 1 fixed buckle and 4 flexible buckles for length adjustment.
2. **Fold a Buckle:** To begin adjustment, first fold one of the buckles.
3. **Press Link Point:** Carefully press the link point using your finger or a suitable tool. Avoid using fingernails directly to prevent injury.
4. **Remove/Install Buckles:** Once the link is disengaged, you can remove or install buckles one by one to achieve the desired length.
5. **Secure to Watch:** After adjusting the length, insert the provided needles into both ends of the band and fix it securely to your smartwatch.



— FOLD-OVER CLASP. EASY TO ADJUST. —



Image: A close-up view of the fold-over clasp, highlighting its design for easy adjustment.



Fits 5.9" -8.2" (140-208mm) wrists



Image: A diagram illustrating the compatible wrist size range of 5.9 to 8.2 inches (140-208mm) for the smartwatch band.

Your browser does not support the video tag.

Video: An official product video demonstrating the Lamshaw chain leather band, showing its design and how it looks when worn.

4. OPERATION

Once installed and adjusted, the Lamshaw smartwatch band operates as a secure and comfortable accessory for your compatible smartwatch. Ensure the clasp is fully engaged when wearing to prevent accidental detachment.

Chic Hybrid Watch Strap

adopts unique metal chain and leather strap
cross weaving design



Image: The hybrid design of the watch strap, featuring interwoven metal chain and leather, highlighting its aesthetic and functional integration with a smartwatch.

5. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your smartwatch band.

- **Cleaning:** Wipe the metal parts with a soft, dry cloth. For the leather, use a slightly damp cloth and mild soap if necessary, then dry immediately. Avoid harsh chemicals or abrasive materials.
- **Avoid Moisture:** While the band is durable, prolonged exposure to water or excessive moisture should be avoided, especially for the leather components.
- **Storage:** Store the band in a dry place away from direct sunlight and extreme temperatures when not in use.
- **Regular Inspection:** Periodically check the clasp and link connections for any signs of wear or loosening.

6. TROUBLESHOOTING

If you encounter issues with your smartwatch band, refer to the following common solutions:

Problem	Possible Cause	Solution
Band is too tight or too loose.	Incorrect number of links for wrist size.	Adjust the band length by adding or removing links as described in Section 3.2. The band is designed for wrist sizes 5.9"-8.2".
Difficulty attaching the band to the smartwatch.	Spring bars not properly aligned or fully compressed.	Ensure both ends of the spring bar are fully compressed and aligned with the lug holes before releasing. Gently wiggle the band to confirm it's secure.
Links are difficult to adjust.	Initial stiffness or improper technique.	Apply firm, steady pressure when pressing the link points. Refer to the adjustment diagram in Section 3.2 for visual guidance.
Band feels uncomfortable or pinches skin.	Band is too tight or not properly positioned.	Adjust the band to a slightly looser fit. Ensure the band is centered on your wrist and not twisted.

7. SPECIFICATIONS

- **Band Width:** 22mm
- **Material:** Metal chain and genuine leather
- **Clasp Type:** Fold-over clasp
- **Wrist Fit:** 5.9 inches - 8.2 inches (140-208mm)
- **Design:** Classic interwoven metal chain and leather strap

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Lamshaw smartwatch band, please contact the seller or manufacturer directly through the platform where the purchase was made. Keep your purchase receipt for warranty claims, if applicable.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question