

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PEICHENG](#) /

› [PEICHENG 10.1" Android 15.0 Tablet T30 MAX User Manual](#)

PEICHENG T30 MAX

PEICHENG 10.1" Android 15.0 Tablet T30 MAX User Manual

Model: T30 MAX

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your PEICHENG 10.1" Android 15.0 Tablet T30 MAX. Please read it thoroughly to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x PEICHENG 10.1" Android 15.0 Tablet T30 MAX
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Standable Protective Case
- 1 x Flexible Stylus
- 1 x Type-C Charging Cable
- 1 x Power Adapter
- 1 x User Manual (this document)



Image: PEICHENG T30 MAX Tablet with all included accessories.

3. DEVICE OVERVIEW

The PEICHENG T30 MAX is a versatile 10.1-inch tablet designed for both productivity and entertainment. It features an Octa-core processor, 20GB RAM, 128GB ROM, and runs on Android 15.0.

3.1 Front View



Image: Front view of the tablet showing the display and app icons.

3.2 Rear View and Camera

The tablet features a sleek design with a multi-camera setup on the rear. The main camera is 8MP, complemented by a 2MP front camera for video calls and selfies.



Image: Close-up of the tablet's rear camera.

3.3 Ports and Buttons

Familiarize yourself with the location of all ports and buttons for easy access and operation.

- Power Button
- Volume Up/Down Buttons
- USB Type-C Port (for charging and data transfer)
- 3.5mm Headphone Jack
- MicroSD Card Slot (supports up to 1TB expansion)
- Speakers

4. SETUP

4.1 Initial Power On and Charging

1. Press and hold the Power Button located on the side of the tablet until the screen lights up.
2. If the tablet does not power on, connect the Type-C cable to the tablet and the power adapter to a wall outlet. Charge for at least 2 hours before first use.
3. Follow the on-screen instructions to complete the initial setup, including language selection and Wi-Fi connection.

4.2 Connecting Accessories

Your tablet comes with a Bluetooth keyboard, mouse, and stylus for enhanced functionality.

Bluetooth Keyboard and Mouse:

1. Turn on the keyboard/mouse using their respective power switches.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Enable Bluetooth and scan for new devices.
4. Select the keyboard/mouse from the list of available devices to pair. Follow any on-screen prompts.

Stylus:

The flexible stylus does not require pairing. Simply use it to interact with the touchscreen for precise input or drawing.

RAM: 20GB(6+14GB Expand)
ROM: 128GB



Image: Tablet with keyboard and mouse connected.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The Android 15.0 operating system provides an intuitive interface. Use touch gestures (tap, swipe, pinch) or the connected mouse/stylus for navigation.

- **Home Screen:** Access your apps and widgets.
- **App Drawer:** Swipe up from the home screen to view all installed applications.
- **Notifications/Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles.

5.2 Using the Camera

The tablet is equipped with a 2MP front camera and an 8MP rear camera. Open the Camera app to capture photos and videos.

- Tap the camera icon to open the application.

- Switch between front and rear cameras using the camera toggle icon.
- Tap the shutter button to take a photo or start/stop video recording.

5.3 Media Consumption and Productivity

Enjoy movies, music, and work tasks with the tablet's vibrant IPS display and powerful performance.

The following video provides a general overview of an Android 15 tablet's capabilities, including media consumption and productivity features. While not specific to the PEICHENG brand, it demonstrates typical usage scenarios.

Your browser does not support the video tag.

Video: General overview of an Android 15 tablet's features and usage.

6. MAINTENANCE

6.1 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided charger and cable for optimal charging.

6.2 Storage Management

With 128GB internal storage and support for up to 1TB MicroSD card, you have ample space. Regularly manage your files and uninstall unused apps to maintain performance.

6.3 Software Updates

Periodically check for system updates in **Settings > System > System update** to ensure your tablet has the latest features and security patches.

7. TROUBLESHOOTING

- **Tablet not turning on:** Ensure the battery is charged. Connect to the charger and try again.
- **Slow performance:** Close unused apps, clear cache, or restart the tablet.
- **Wi-Fi connection issues:** Restart your router and the tablet. Check Wi-Fi settings.
- **Accessories not connecting:** Ensure Bluetooth is enabled on the tablet and the accessories are in pairing mode.

8. SPECIFICATIONS

Feature	Specification
Model	T30 MAX
Operating System	Android 15.0
Screen Size	10.1 Inches
Screen Resolution	1280x800 IPS
Processor	Octa-core (T615 2.0GHz)

Feature	Specification
RAM	20GB (6GB + 14GB Expandable)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB (MicroSD)
Rear Camera	8MP
Front Camera	2MP
Battery Capacity	6000mAh
Average Battery Life	10 Hours
Wireless Connectivity	802.11ac Wi-Fi
Dimensions	10.1 x 4.85 x 0.4 inches
Weight	3.45 pounds

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your package or contact PEICHENG customer service through the retailer where you purchased the product.

© 2025 PEICHENG. All rights reserved.


Related Documents - T30 MAX

 <p>DOOGEE User Manual Thanks for choosing DOOGEE products</p>	<p><u>DOOGEE T30 Max User Manual: Setup, Safety, and Maintenance Guide</u></p> <p>Comprehensive user manual for the DOOGEE T30 Max tablet, covering device overview, SIM card insertion, basic operations, language settings, SAR information, safety precautions, and maintenance tips.</p>
 <p>Troubleshooting for Unresponsive Tablet Screens or Forgotten Passwords</p>	<p><u>Troubleshooting Unresponsive Tablet Screens and Forgotten Passwords StandUp Wireless</u></p> <p>This guide from StandUp Wireless provides step-by-step instructions for troubleshooting unresponsive tablet screens and resolving issues like forgotten PINs, Patterns, or Passwords. Learn how to perform a hard reset on various models including Vortex Tab8, Sky Octa X, BLU M8L, NUU Tablet, and Sky Elite T8, and fix software glitches.</p>



[Hadex O885 Smart TV Box H96 MAX RK3318 User Manual](#)

Instructions for use for the Hadex O885 Smart TV Box H96 MAX with RK3318 processor, 4GB RAM, and 64GB ROM. Covers setup, connections, settings, troubleshooting, and warranty.

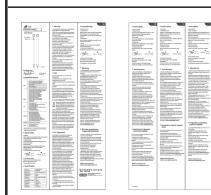

[Penoval USI 2.0 Stylus Pen User Manual and Quick Guide](#)

Comprehensive user manual and quick guide for the Penoval USI 2.0 stylus pen, detailing features, compatibility, specifications, and troubleshooting for Chromebooks and other compatible devices.



[Redragon TAIPAN MAX M810RGB-MAX 3-Mode RGB Gaming Mouse User Manual](#)

User manual for the Redragon TAIPAN MAX M810RGB-MAX gaming mouse, detailing setup, connections (wired, 2.4G, Bluetooth), DPI and backlight adjustments, power management, troubleshooting, and safety guidelines.



[X96 MAX Android 8.1 TV Box 4GB/64GB - Specifications and Overview](#)

Detailed overview and specifications for the X96 MAX Android 8.1 TV Box, featuring Amlogic S905X2 processor, 4GB RAM, 64GB storage, 4K UHD support, and dual-band WiFi.