

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN MAG544 Replacement Remote Control User Manual

PERFASCIN MAG544

PERFASCIN MAG544 Replacement Remote Control User Manual

Model: MAG544

PRODUCT OVERVIEW

This manual provides instructions for the PERFASCIN MAG544 Replacement Remote Control, designed for use with various INFOMIR MAG Linux Set-Top Boxes. This remote offers a direct replacement solution without requiring complex programming.



Front view of the MAG544 replacement remote control, showcasing its ergonomic design and button layout.

COMPATIBILITY

The MAG544 remote control is compatible with the following INFOMIR MAG Linux Set-Top Box models:

- MAG 250
- MAG 420
- MAG 424
- MAG 520
- MAG 522
- MAG 254
- MAG 256

- MAG 322
- MAG 324
- MAG 524
- MAG 540
- MAG 544
- MAG 544w3
- MAG 351
- MAG 522w1

If your specific Set-Top Box model is not listed, please contact customer support for compatibility verification before purchase.

SETUP

1. Battery Installation

Locate the battery compartment on the back of the remote control. Slide the cover off. Insert two AAA batteries, ensuring correct polarity (+ and - symbols). Replace the battery cover securely.





Rear view of the remote control with the battery compartment cover removed, showing the slots for two AAA batteries.

2. Initial Use

The MAG544 remote control requires no programming or complex setup. Once batteries are correctly installed, it is ready for immediate use with compatible INFOMIR MAG Set-Top Boxes.

OPERATING INSTRUCTIONS

The MAG544 remote control features a standard layout for easy navigation and control of your Set-Top Box. Familiarize yourself with the button layout for optimal use.



Angled view of the MAG544 remote control, highlighting the various function buttons for TV and Set-Top Box operation.

- **Power Button (Red):** Turns the Set-Top Box on or off.
- **Mute Button (Speaker with X):** Mutes or unmutes audio output.
- **Volume Up/Down (V+/V-):** Adjusts the audio volume level.
- **Channel Up/Down (P+/P-):** Changes to the next or previous channel.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.
- **Home Button (House icon):** Returns to the main menu or home screen.
- **APP Button:** Accesses installed applications on the Set-Top Box.
- **PIP Button:** Activates or controls the Picture-in-Picture function.
- **Menu Button (Three horizontal lines):** Opens the main menu or context-sensitive options.
- **Number Pad (0-9):** For direct input of channel numbers or other numerical data.
- **Back Button (Arrow left):** Returns to the previous screen or menu.

- **TV/EPG/Gear icons:** Buttons for specific functions related to TV mode, Electronic Program Guide, and Settings.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the proper polarity and have sufficient charge. Replace them if necessary.
- **Remove Obstructions:** Verify that there are no objects blocking the line of sight between the remote control and the Set-Top Box's infrared receiver.
- **Proximity:** Ensure you are within the effective operating range of the Set-Top Box.


Intermittent Functionality

- **Battery Check:** Weak batteries can cause intermittent performance. Replace them.
- **Environmental Interference:** Strong light sources or other electronic devices might interfere with the remote's signal. Try operating the remote in a different environment.

If issues persist after performing these troubleshooting steps, or if the remote control is damaged, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	MAG544
Product Dimensions	6 x 3 x 0.5 inches (15.24 x 7.62 x 1.27 cm)
Item Weight	1.9 ounces (53.86 grams)
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	No Programming Required
Compatible Devices	INFOMIR MAG Linux Set-Top Boxes

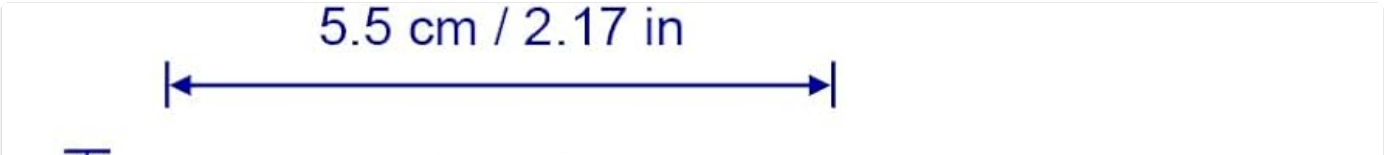

17.5 cm / 6.89 in





Front view of the MAG544 remote control with measurements indicating its length (17.5 cm / 6.89 in) and width (5.5 cm / 2.17 in).

WARRANTY AND SUPPORT

This product is covered by the seller's standard return and replacement policy. For detailed information regarding returns, refunds, or replacements, please refer to the purchase platform's return policy section.

For technical support, troubleshooting assistance, or warranty claims, please contact PERFASCIN customer service. You can typically find contact details on the product's purchase page or by visiting the PERFASCIN official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question