

[Manuals.plus](#) /

› [ROMSHINE](#) /

› ROMSHINE 60" W Mobile TV Stand with Mount User Manual

## ROMSHINE B0F6385N25

# ROMSHINE 60" W Mobile TV Stand with Mount User Manual

Model: B0F6385N25

Brand: ROMSHINE

## INTRODUCTION

---

Thank you for choosing the ROMSHINE 60" W Mobile TV Stand with Mount. This versatile and durable TV stand is designed to enhance your entertainment experience by providing a stable and mobile platform for your television. It features a robust construction, ample storage shelves, and a convenient built-in charging station. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Image: The ROMSHINE 60-inch Mobile TV Stand, showcasing its design with a mounted television, multiple shelves, and integrated charging station.

## SAFETY INFORMATION

---

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 100 lbs for the TV mount. Ensure your television is within the recommended size range of 40" to 65".
- **Stability:** Always lock the universal casters after positioning the TV stand to prevent unintended movement. Distribute weight evenly on shelves.
- **Assembly:** Assemble the product on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are securely tightened before use.
- **Electrical Safety:** The built-in charging station includes 2 American standard plug holes and 2 USB holes. Do not overload the charging station. Use only with compatible devices and ensure proper voltage. Keep liquids away from electrical components.

- **Children and Pets:** Keep small parts and packaging materials away from children. Do not allow children to climb on or play with the TV stand.
- **Placement:** Place the TV stand on a level surface. Avoid placing it in direct sunlight or near heat sources.

## PACKAGE CONTENTS

---

Before beginning assembly, please verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support immediately.

Expected components include:

- Wood Panels (various sizes for main frame, shelves)
- Metal Support Frames
- TV Mounting Bracket Kit
- Universal Casters (4 units)
- Built-in Charging Station Unit
- Assembly Hardware (screws, bolts, nuts, washers, Allen wrench)
- Instruction Manual

## ASSEMBLY INSTRUCTIONS (SETUP)

---

Follow these steps carefully and in the order specified to ensure proper assembly. It is recommended to have two people for assembly.

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to components.
2. **Attach Casters:** Securely attach the four universal casters to the base of the TV stand frame using the provided hardware. Ensure they are firmly tightened.




*Image: Detail view of a universal caster wheel attached to the base of the TV stand, highlighting its mobility feature.*

3. **Assemble Main Frame:** Connect the main wood panels and metal support frames according to the diagrams in the included instruction manual. Use the appropriate screws and fasteners for each connection.
4. **Install Shelves:** Insert and secure the lower and upper shelves into their designated positions within the frame. Ensure they are level and stable.



*Image: The TV stand's shelves, demonstrating their capacity to hold various media accessories and decorative items.*

5. **Integrate Charging Station:** Carefully install the built-in charging station into its designated slot on the upper shelf. Ensure the power cord is routed safely and accessible.

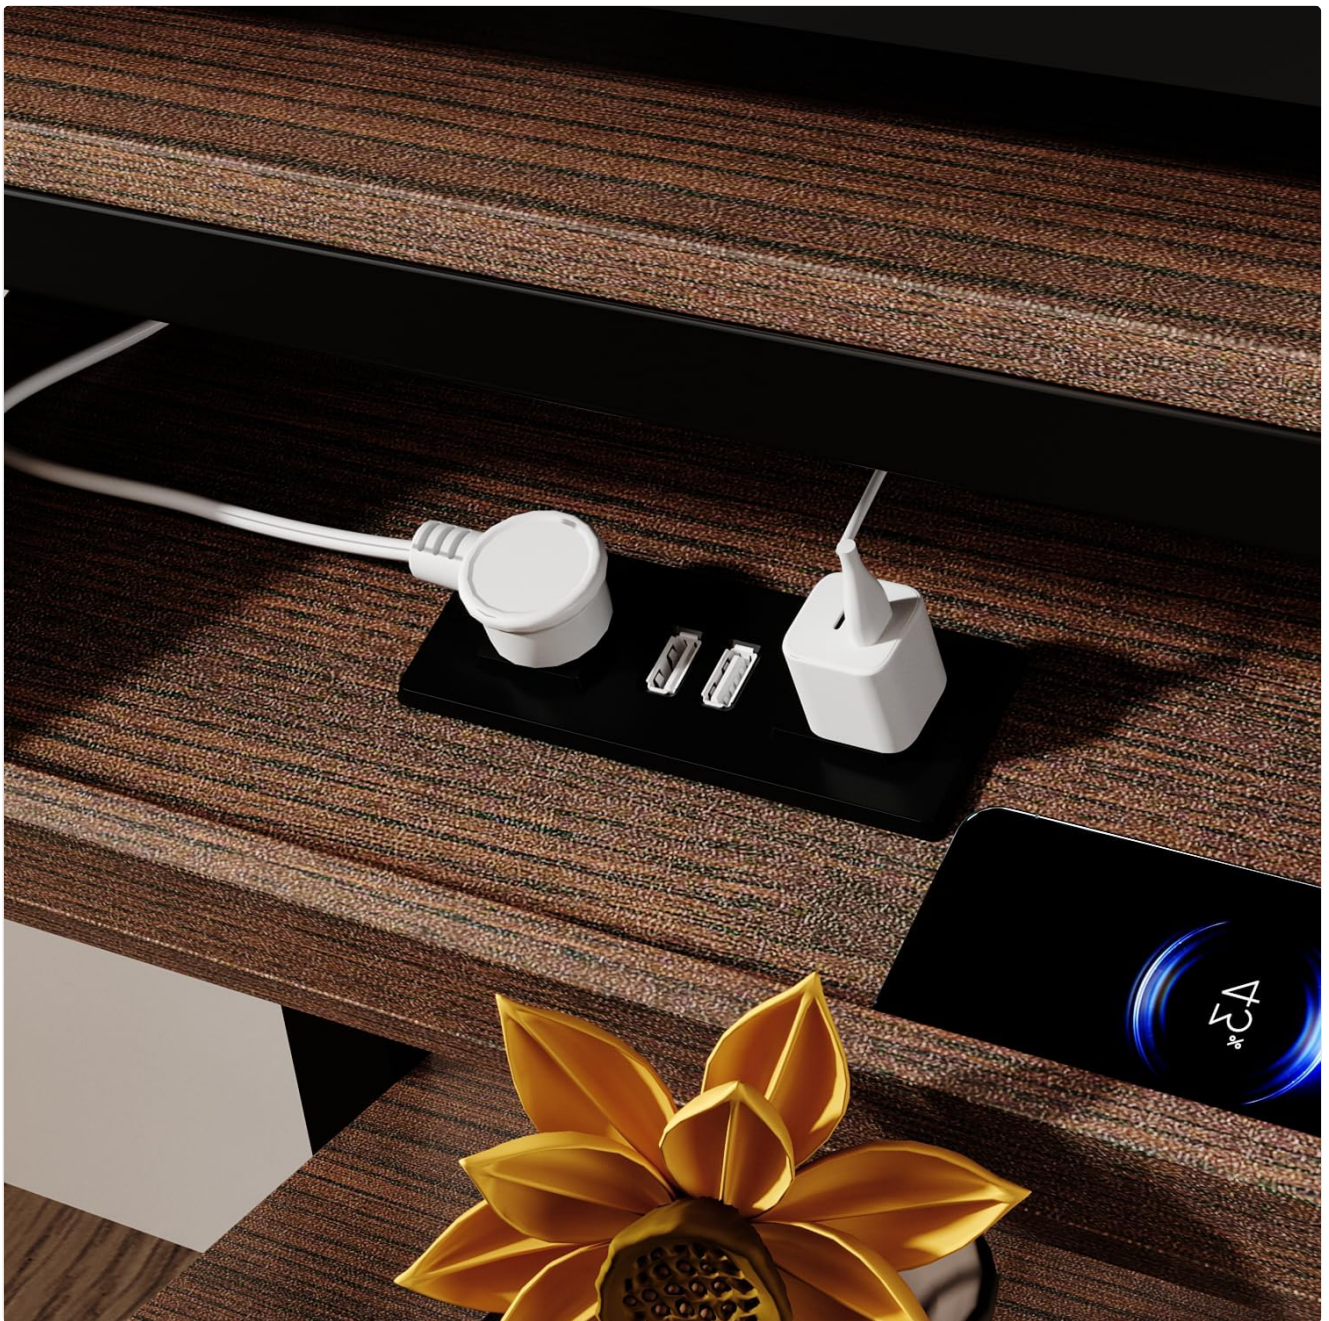

*Image: A close-up of the integrated charging station, showing the two power outlets and two USB ports.*

6. **Attach TV Mount:** Secure the TV mounting bracket to the back panel of the stand. Ensure it is centered and firmly attached using the provided hardware. Refer to the mount's specific instructions for TV attachment.



*Image: A detailed view of the TV mounting bracket installed on the stand's back panel, ready for television attachment.*

7. **Final Check:** Before placing your TV, double-check all connections and ensure the stand is stable and all fasteners are tight.

## OPERATING INSTRUCTIONS

---

- **Moving the Stand:** To move the TV stand, unlock all four universal casters. Gently push the stand to your desired location.
- **Securing the Stand:** Once the stand is in its desired position, firmly press down on the locking mechanism of each caster to prevent any unwanted movement. This ensures stability and safety.
- **Using the Charging Station:** Plug the TV stand's power cord into a standard wall outlet. You can then use the two American standard plug holes and two USB holes to power or charge your electronic devices.



*Image: The mobile TV stand positioned in an office environment, demonstrating its versatility and ease of relocation.*

## MAINTENANCE

---

Regular maintenance will help prolong the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the wood finish or metal components.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Caster Care:** Keep the caster wheels free of debris to ensure smooth rolling. If wheels become stiff, clean them and apply a small amount of silicone lubricant if needed.
- **Electrical Components:** Ensure the charging station and its cords are not pinched or damaged. Do not attempt to repair electrical components yourself.

## TROUBLESHOOTING

---

If you encounter any issues with your ROMSHINE TV stand, please refer to the following common solutions:

| Problem                       | Possible Cause                                     | Solution                                                                                                                   |
|-------------------------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Stand is wobbly or unstable.  | Loose fasteners; uneven floor; casters not locked. | Ensure all screws are tightened. Move to a level surface. Lock all casters.                                                |
| Casters do not roll smoothly. | Debris in wheels; casters locked.                  | Clean wheels of any hair or debris. Unlock casters before moving.                                                          |
| Charging station not working. | Not plugged in; power outage; faulty device.       | Ensure the stand's power cord is securely plugged into a live outlet. Check household power. Test with a different device. |
| TV mount seems loose.         | Mounting screws not fully tightened.               | Carefully re-tighten all screws connecting the mount to the stand and to the TV.                                           |

If the problem persists, please contact ROMSHINE customer support.

## SPECIFICATIONS

- **Model:** B0F6385N25
- **Brand:** ROMSHINE
- **Mounting Type:** Floor Mount
- **Movement Type:** Rolling
- **Compatible TV Sizes:** 40 inches to 65 inches
- **Maximum Weight Capacity:** Up to 100 lbs (for TV mount)
- **Color:** Brown Wood
- **Materials:** High-grade engineered wood, metal accessories
- **Dimensions (Approximate):**
  - Overall Width: 60.2 inches
  - Overall Height: 58.4 inches
  - Overall Depth: 18.5 inches
  - TV Mount Width: 17.1 inches
  - TV Mount Height: 8.7 inches
  - Upper Shelf Depth: 9.4 inches
  - Lower Shelf Depth: 16.5 inches



*Image: A detailed diagram illustrating the key dimensions of the ROMSHINE 60-inch Mobile TV Stand.*

- **Charging Station:** 2 American standard plug holes, 2 USB holes

## WARRANTY AND SUPPORT

ROMSHINE stands behind the quality of its products. For specific warranty details regarding your 60" W Mobile TV Stand, please refer to the warranty information provided at the time of purchase or contact ROMSHINE customer service directly.

**Customer Care:** If you have any questions about our product, require assistance with assembly, or need to report missing/damaged parts, please do not hesitate to contact us. Our customer support team is ready to assist you before or after your purchase.

For support, please visit the official ROMSHINE store or contact their customer service channels as listed on their website or product packaging.

*Note: Please retain your purchase receipt for warranty claims.*

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question