

QTCA20250423-311

Generic QTCA20250423-311 Wireless Handheld Electric Mixer User Manual

Model: QTCA20250423-311

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation may cause damage to the product or personal injury.

- Keep the appliance out of reach of children.
- Do not immerse the motor unit in water or any other liquid.
- Ensure the power supply voltage matches the specifications of the mixer.
- Avoid contact with moving parts during operation.
- Unplug or switch off the appliance before cleaning or changing accessories.
- Do not operate the appliance with a damaged cord or plug, or after it malfunctions or has been dropped or damaged in any manner.
- Use only manufacturer-recommended attachments.

2. PRODUCT OVERVIEW

The Generic QTCA20250423-311 is a wireless handheld electric mixer designed for various kitchen tasks such as whisking eggs, whipping cream, and mixing batters. It features a durable construction, multiple speed settings, and a convenient upright design.

2.1 Key Features

- **Two Wire Whisks:** Includes a cream whisk and an egg white beater, both removable and washable.
- **4 Adjustable Speeds:** Allows selection of different speeds for optimal mixing results.
- **Powerful Torque Motor:** Efficiently whips cream in approximately 60 seconds.
- **Vertical Base:** Designed to stand upright, preventing contact with the desktop.
- **Built-in 1500mAh Battery:** Provides extended use on a single charge.

2.2 Package Contents

- 1 x Electric Egg Whisk (Main Unit)
- 1 x Cream Whisk

- 1 x Egg White Beater
- 1 x USB Charging Cable (Type-C)



Image 1: Overview of the electric mixer and its included whisks.

3. SETUP

3.1 Charging the Mixer

1. Locate the Type-C charging port on the mixer.
2. Connect the provided USB charging cable to the port and plug the other end into a suitable USB power adapter (not included).
3. The gear indicator lights will illuminate during charging and turn off or change color when fully charged. A full charge takes approximately 3 hours.




Image 2: Location of the Type-C charging port and gear indicator.

3.2 Attaching the Whisks

1. Select the appropriate whisk for your task (cream whisk or egg white beater).
2. Align the whisk shaft with the opening on the mixer's motor unit.
3. Gently push and twist until the whisk is securely locked into place. Ensure it is firmly attached before use.

Power Switch

Long press to turn on the anti-mistouch function

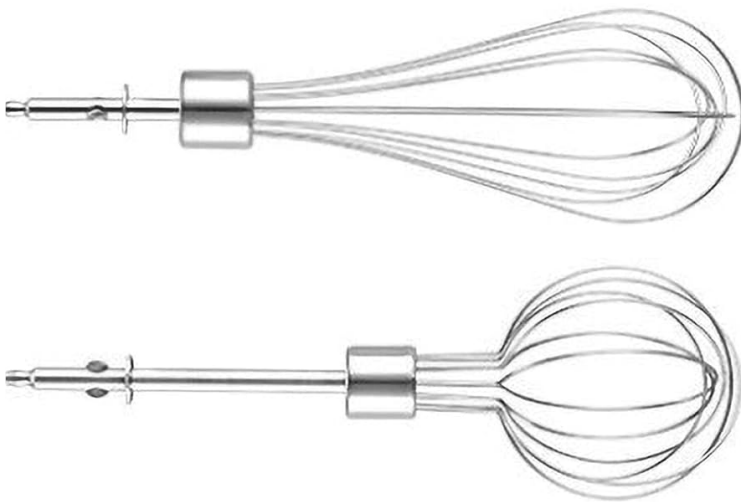

Cream Whisk & Egg White Whisk

It be removed and washed at will

Image 3: The two types of whisks included with the mixer.

4. OPERATION

4.1 Powering On/Off

- To turn on the mixer, press and hold the power button (Switch + Speed Regulation button) for a few seconds until the indicator lights illuminate. This activates the anti-mistouch function.
- To turn off the mixer, press and hold the power button again until the indicator lights turn off.

4.2 Adjusting Speeds

- Once the mixer is powered on, press the power button briefly to cycle through the 4 available speed settings.
- The gear indicator lights will show the current speed level.
- Select a lower speed for gentle mixing and a higher speed for whipping or beating.



Image 4: Handheld operation of the electric mixer.




Image 5: Mixer in use, whisking ingredients.

4.3 Usage Tips

- For best results, start with a lower speed and gradually increase as needed.
- Ensure ingredients are at room temperature unless specified otherwise in your recipe.
- The mixer can stand upright on its vertical base when not in active use, keeping your countertop clean.

Running Axis

Stable operation
and uniform mixing

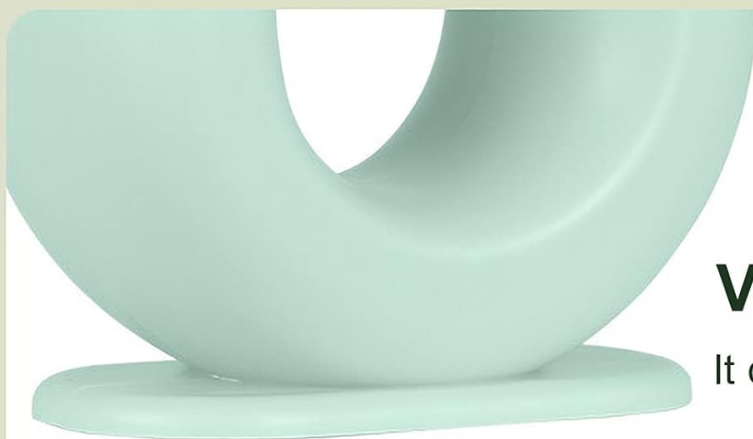

Vertical Base

It can stand without
soiling the desktop

Image 6: The vertical base allows the mixer to stand upright.

5. MAINTENANCE

5.1 Cleaning

1. Before cleaning, ensure the mixer is turned off and the whisks are detached.
2. The whisks can be easily removed and washed with warm soapy water. Rinse thoroughly and dry completely.
3. Wipe the main motor unit with a damp cloth. Do not immerse the motor unit in water or place it under running water.
4. Do not use abrasive cleaners or scouring pads, as they may damage the surface.

5.2 Storage

Store the mixer and its accessories in a clean, dry place when not in use. Ensure the whisks are completely dry before storing.

6. TROUBLESHOOTING

- **Mixer does not turn on:**
Ensure the battery is charged. Connect the mixer to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to turn it on again. Press and hold the power button for a few seconds to activate.
- **Whisks are not spinning:**
Check if the whisks are correctly attached and securely locked into the motor unit. Ensure the mixer is powered on and a speed setting is selected.
- **Reduced performance:**
The battery might be low. Recharge the mixer fully. Ensure you are using the appropriate speed setting for the task.
- **Unusual noise during operation:**
Turn off the mixer immediately. Check if any foreign objects are obstructing the whisks or if the whisks are bent or damaged. If the issue persists, discontinue use.

7. SPECIFICATIONS

Feature	Specification
Brand	Generic
Model Number	QTCA20250423-311
Material	304 Stainless Steel, Plastic
Power	20W
Battery Capacity	1500 mAh
Charging Time	Approximately 3 hours
Operating Modes	4 Speeds
Package Dimensions	19.5 x 10 x 10 cm
Package Weight	395g / 0.87lb

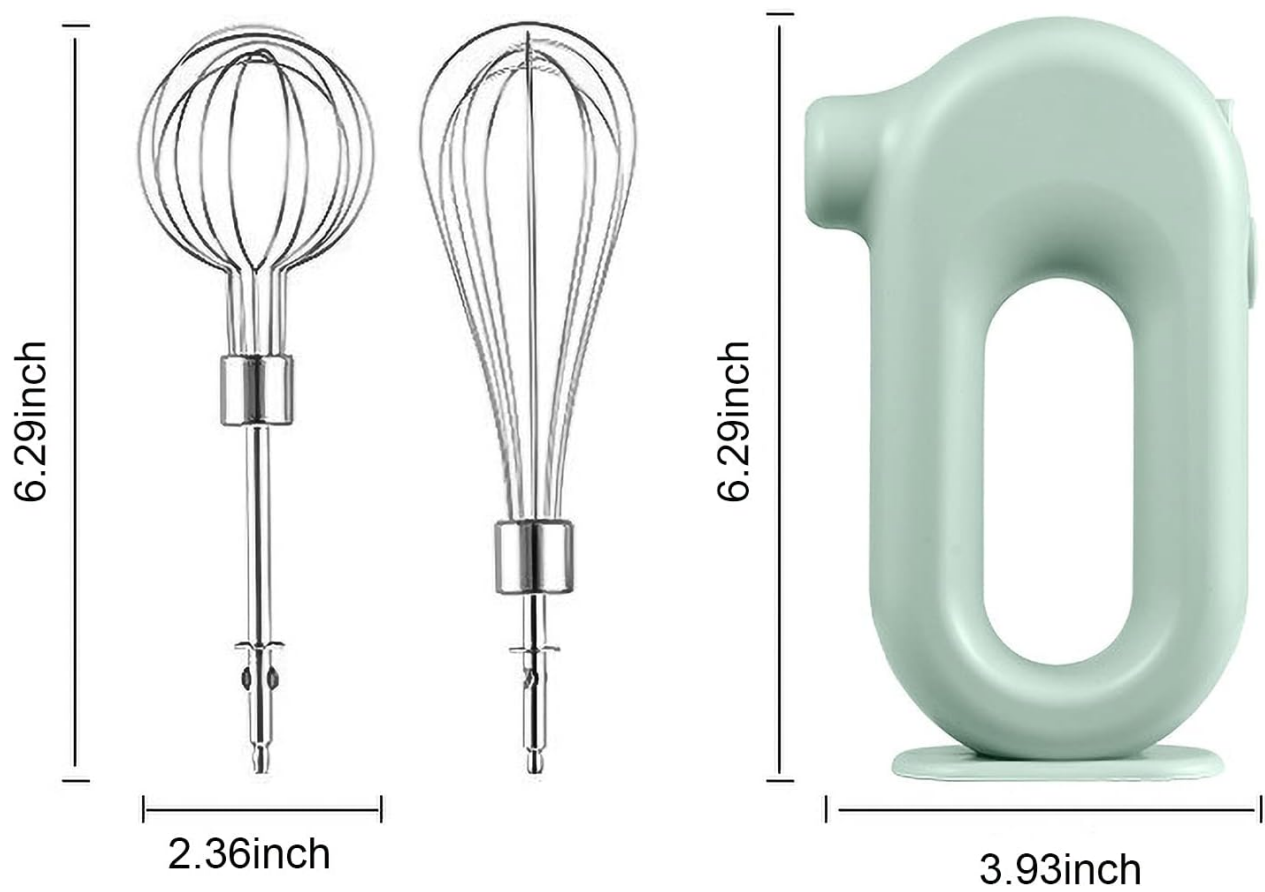


Image 7: Product dimensions.

Powerful Torque Motor

The cream can be
quickly whipped in 60s



Image 8: Illustration of the powerful torque motor.

8. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer.

For technical support or inquiries, please contact the seller or retailer from whom you purchased this product.

© 2025 Generic. All rights reserved.

	<p>Biocare Medical CD8 Monoclonal Antibody for Immunohistochemistry - Datasheet</p> <p>Technical datasheet for Biocare Medical's CD8 Concentrated and Prediluted Monoclonal Antibody (Catalog Numbers ACR 311 A, C, APR 311 AA, NPAR 311 T40). Includes intended use, background, applications, protocols, and safety information for research use.</p>
	<p>HOMCOM Multi-Drawer Storage Unit - Assembly Instructions and Safety Guide</p> <p>Comprehensive guide for the HOMCOM multi-drawer storage unit, including assembly instructions, safety warnings, maintenance tips, and customer support contact information. Suitable for children aged 3+ with a maximum weight capacity of 10kg per layer.</p>
	<p>HOMCOM Wooden Children's Shelving Unit - Safety, Assembly, and Care Instructions</p> <p>Comprehensive safety warnings, assembly guidelines, and maintenance instructions for the HOMCOM Wooden Children's Shelving Unit (Model 311-048 series). Ensure safe use and proper care for children's furniture.</p>
	<p>Worcester Bosch 24i/28i Junior Gas Boiler User Instructions & Customer Care Guide</p> <p>User and customer care guide for Worcester Bosch 24i/28i Junior gas boilers. Covers installation, operation, safety, maintenance, troubleshooting, and warranty.</p>
	<p>TELESTAR EC 311 S, EC 311 S6 & EC 311 S6 CEE Installation Guide: Setup & Operation</p> <p>Comprehensive installation guide for TELESTAR EC 311 S, EC 311 S6, and EC 311 S6 CEE AC electric vehicle charging stations. Covers setup, safety, technical specifications, and usage instructions.</p>
	<p>ZONE KIZ 311-059V80/311-059V90 Toy Organizer Storage Unit - Assembly and Care Instructions</p> <p>This document provides assembly instructions, safety warnings, and maintenance guidelines for the ZONE KIZ 311-059V80/311-059V90 toy organizer storage unit. It is suitable for children aged 3+ years and has a maximum weight capacity of 5 kg.</p>