

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DWVO](#) /

› **DWVO Farmhouse TV Stand with Power Outlet (Model MADWVultU1) User Manual**

DWVO MADWVultU1

DWVO Farmhouse TV Stand with Power Outlet

Model: MADWVultU1

Brand: DWVO

INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your DWVO Farmhouse TV Stand with Power Outlet, Model MADWVultU1. Please read these instructions carefully before assembly and use to ensure safe and proper operation of the product. Keep this manual for future reference.

PRODUCT SIZE:

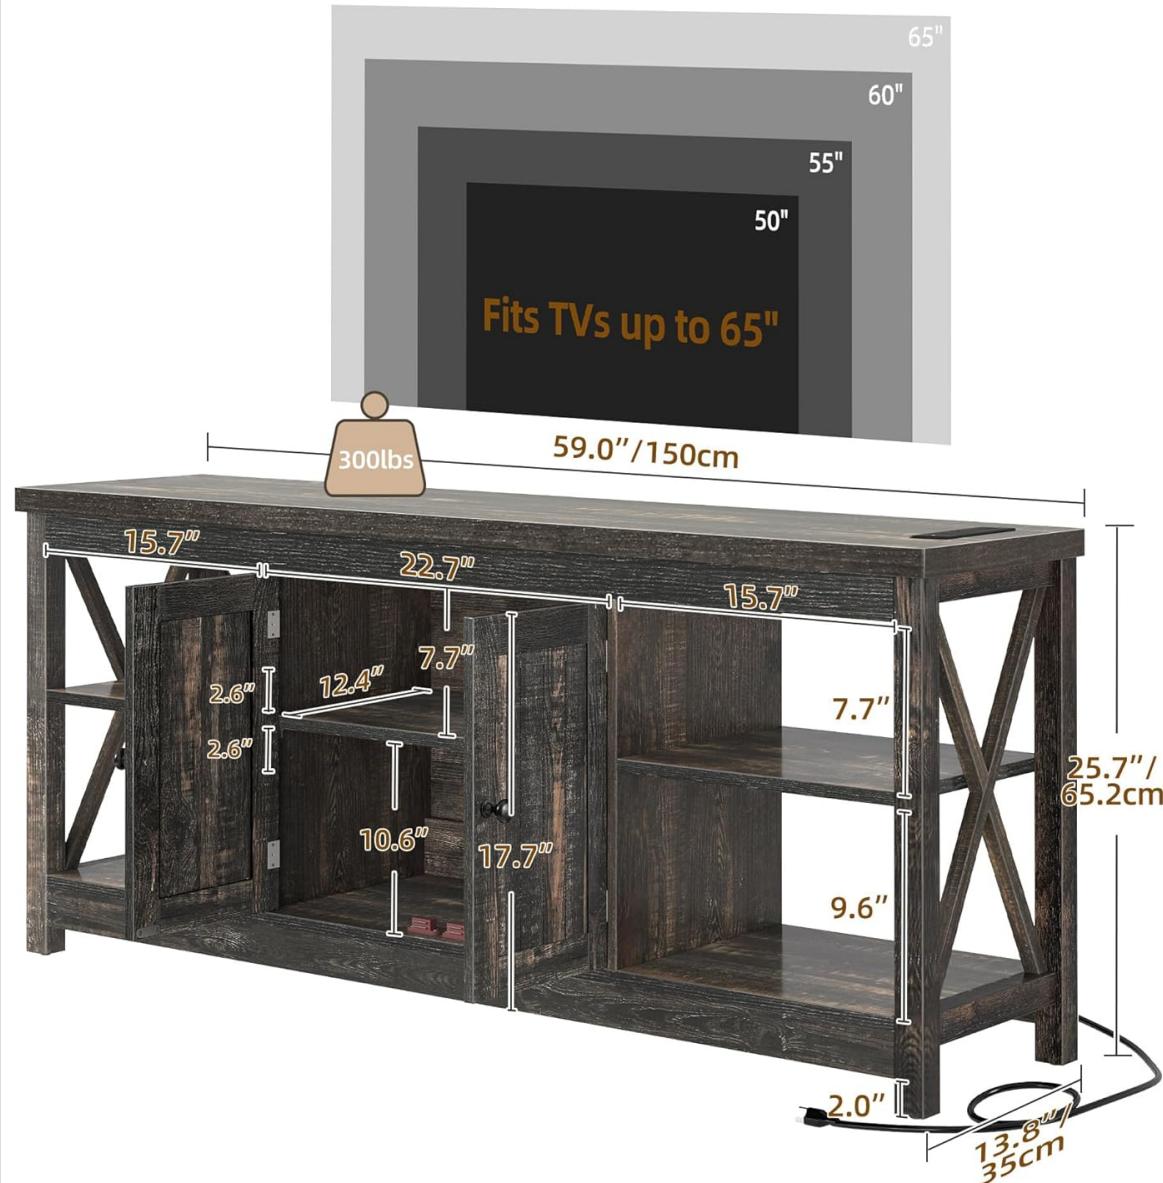


Image: The DWVO Farmhouse TV Stand in Dark Rustic Oak, 59 inches wide, featuring X-bar accents and central cabinet doors.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or damaged.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the material.
- Distribute weight evenly on shelves and the top surface. Do not exceed the maximum weight capacity of 300 lbs for the top surface.
- Keep children and pets away from the assembly area.
- For electrical safety, ensure the power outlet is connected to a grounded wall socket. Do not overload the power outlets.
- Avoid placing hot items directly on the surface. Use coasters or protective pads.

PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- TV Stand components (engineered wood panels, hardware)
- Accessory Kit (screws, dowels, cam locks, etc.)
- Assembly Instructions manual
- Power outlet unit with cord

SETUP (ASSEMBLY INSTRUCTIONS)

Detailed assembly instructions are provided in the separate manual included in your package. Please follow the step-by-step guide carefully. It is recommended to have two people for assembly.

1. Unpack all components and lay them out on a clean, soft surface.
2. Identify each part using the labels and diagrams in the assembly manual.
3. Follow the numbered steps to connect the panels and secure them with the provided hardware.
4. Install the power outlet unit into the designated slot on the top surface.
5. Attach the adjustable shelves as desired.
6. Ensure all connections are tight and the stand is stable before placing any items on it.




Image: A diagram illustrating the dimensions of the TV stand (59.0"W x 13.8"D x 25.7"H) and its compatibility with TVs up to 65 inches, with a maximum weight capacity of 300 lbs.

OPERATING INSTRUCTIONS

Using the Built-In Power Outlet

The TV stand includes a built-in power strip with 2 AC outlets (120V/12A) and 2 USB ports (5V/2A) for convenient charging and powering of your devices.

1. Plug the TV stand's power cord (approximately 4.9 feet long) into a standard, grounded wall outlet.
2. Connect your TV, media players, gaming consoles, or other electronic devices to the AC outlets.
3. Use the USB ports to charge smartphones, tablets, or other USB-powered devices.
4. Do not exceed the maximum electrical load capacity of the power strip.

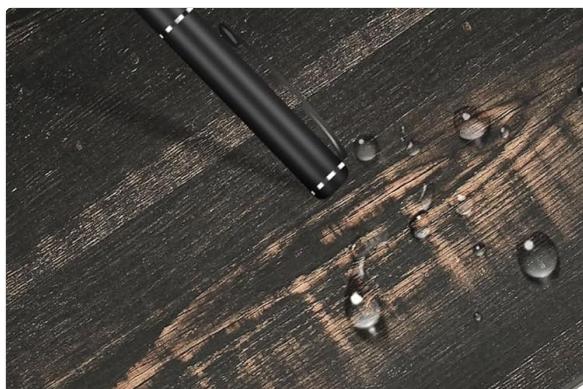

SCRATCH PROOF
& WATERPROOF

1.18" WELL-MADE BOARD ▶



◀ STABLE LEGS WITH ANTI-SLIP
AND SCRATCH-RESISTANT PADS

Image: A detailed view of the integrated power strip, showing two 120V/12A AC outlets and two 5V/2A USB ports, along with the 4.9-foot power cord.

Adjusting Shelves

The interior shelves are adjustable, allowing you to customize storage space for items of various heights.

1. Empty the shelf you wish to adjust.

2. Carefully lift the shelf and remove it from its current support pegs.
3. Relocate the support pegs to the desired height level. Ensure pegs are securely inserted into corresponding holes on both sides.
4. Place the shelf back onto the support pegs, ensuring it is level and stable.



Image: A visual representation of the adjustable shelf feature within the TV stand's cabinet, demonstrating how the shelf height can be changed to accommodate different items.

MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage. The surface is designed to be scratch-proof and waterproof, but prolonged exposure to liquids should be avoided.
- **Stability:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Protection:** The stand features stable legs with anti-slip and scratch-resistant pads. Ensure these pads are intact to protect your flooring.



Image: A collage highlighting key features: the scratch-proof and waterproof surface, the 1.18-inch thick engineered wood board, and the stable legs equipped with anti-slip and scratch-resistant pads.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable	Screws are loose; uneven floor	Tighten all screws. Adjust leg levelers if present, or place shims under legs on uneven surfaces.
Power outlets not working	Power cord not plugged in; wall outlet issue; overloaded circuit	Ensure the power cord is fully plugged into a working wall outlet. Check the wall outlet with another device. Reduce the number of devices plugged into the power strip.
Parts do not align during assembly	Incorrect orientation of parts; overtightened screws	Review the assembly manual to ensure parts are oriented correctly. Loosen screws slightly, adjust alignment, then retighten.

Problem	Possible Cause	Solution
Scratches on surface	Rough handling; sharp objects	While the surface is scratch-resistant, it is not scratch-proof. Use protective pads for items. Minor scratches may be concealed with furniture repair markers.

SPECIFICATIONS

Feature	Detail
Model Name	TV Stand
Model Number	MADWVultU1
Brand	DWVO
Color	Dark Rustic Oak
Material	Engineered Wood
Product Dimensions (D x W x H)	13.8" x 59" x 25.7" (35cm x 150cm x 65.2cm)
Item Weight	71.2 pounds (32.3 kg)
Max. TV Size Compatibility	Up to 65 inches
Max. Top Surface Weight Capacity	300 lbs (136 kg)
Power Outlet	2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
Power Cord Length	Approx. 4.9 feet
Special Features	Adjustable Shelf, Built-In Charging Station, Scratch-Resistant, Waterproof Surface
Assembly Required	Yes

WARRANTY INFORMATION

For specific warranty details, please refer to the documentation provided with your purchase or contact DWVO customer support directly. Protection plans offered by third-party providers are separate from the manufacturer's warranty.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your DWVO Farmhouse TV Stand, please contact DWVO customer support. Our team is available to help with product inquiries, missing parts, or assembly guidance.

For the most up-to-date contact information, please visit the official DWVO website or refer to your purchase documentation.

