

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sisism](#) /
- › [Sisism A10 Pro Wireless Earbuds Bluetooth 5.3 HiFi Stereo User Manual](#)

Sisism A10 Pro

Sisism A10 Pro Wireless Earbuds User Manual

Model: A10 Pro

INTRODUCTION

Welcome to your Sisism A10 Pro Wireless Earbuds. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using your earbuds.

WHAT'S IN THE BOX

Upon unboxing, please verify that all the following components are included:

- 2 x Bluetooth Earphones (Left and Right)
- 1 x Wireless Charging Case
- 1 x USB Cable (Type-C)
- 1 x User Manual
- 3 x Pairs of Eartips (S/M/L)

What's in the box



Image: All components included in the Sisism A10 Pro Wireless Earbuds package.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB Type-C cable to the charging port on the case and a power source. The LED digital display on the case will show the charging progress. A full charge for the case takes approximately 1.5 hours. The earbuds charge automatically when placed inside the case.

Magnetic contact charging 50 hrs long standby

Single earphone can use 5-8 hours, charging case can charge 3 times, from dawn to sunset, the music doesn't stop



Image: Sisism A10 Pro earbuds and charging case displaying battery levels during charging.

2. Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "A10 Pro" from the list.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

Quick Pairing

Take out the earbuds from the charging case and connect "A10 Pro" with bluetooth



Open case to pair

Put back to charge

Image: Quick pairing process of the A10 Pro earbuds with a mobile device via Bluetooth.

3. Ergonomic Fit

The A10 Pro earbuds come with three sizes of medical-grade gel eartips (S/M/L) to ensure a comfortable and secure fit. Choose the size that best seals your ear canal for optimal sound quality and noise isolation. Gently insert the earbuds into your ears and rotate them slightly until they feel snug and stable.

9D Stereo Sound Effect Immersive Enjoyment

Surging sound field, a more realistic
sound experience



Ergonomics

lightweight and comfortable
Earbud weight only **3.6g**

Image: Demonstrating the ergonomic fit of the A10 Pro earbud in a user's ear.

OPERATING INSTRUCTIONS

1. Touch Controls

The A10 Pro earbuds feature sensitive touch controls on each earbud for easy management of music playback and calls.

Function	Action
Play/Pause	Single tap on either earbud
Next Song	Double tap on the Right earbud
Previous Song	Double tap on the Left earbud
Volume Up	Triple tap on the Right earbud

Function	Action
Volume Down	Triple tap on the Left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud for 2 seconds
Activate Voice Assistant	Press and hold either earbud for 3 seconds

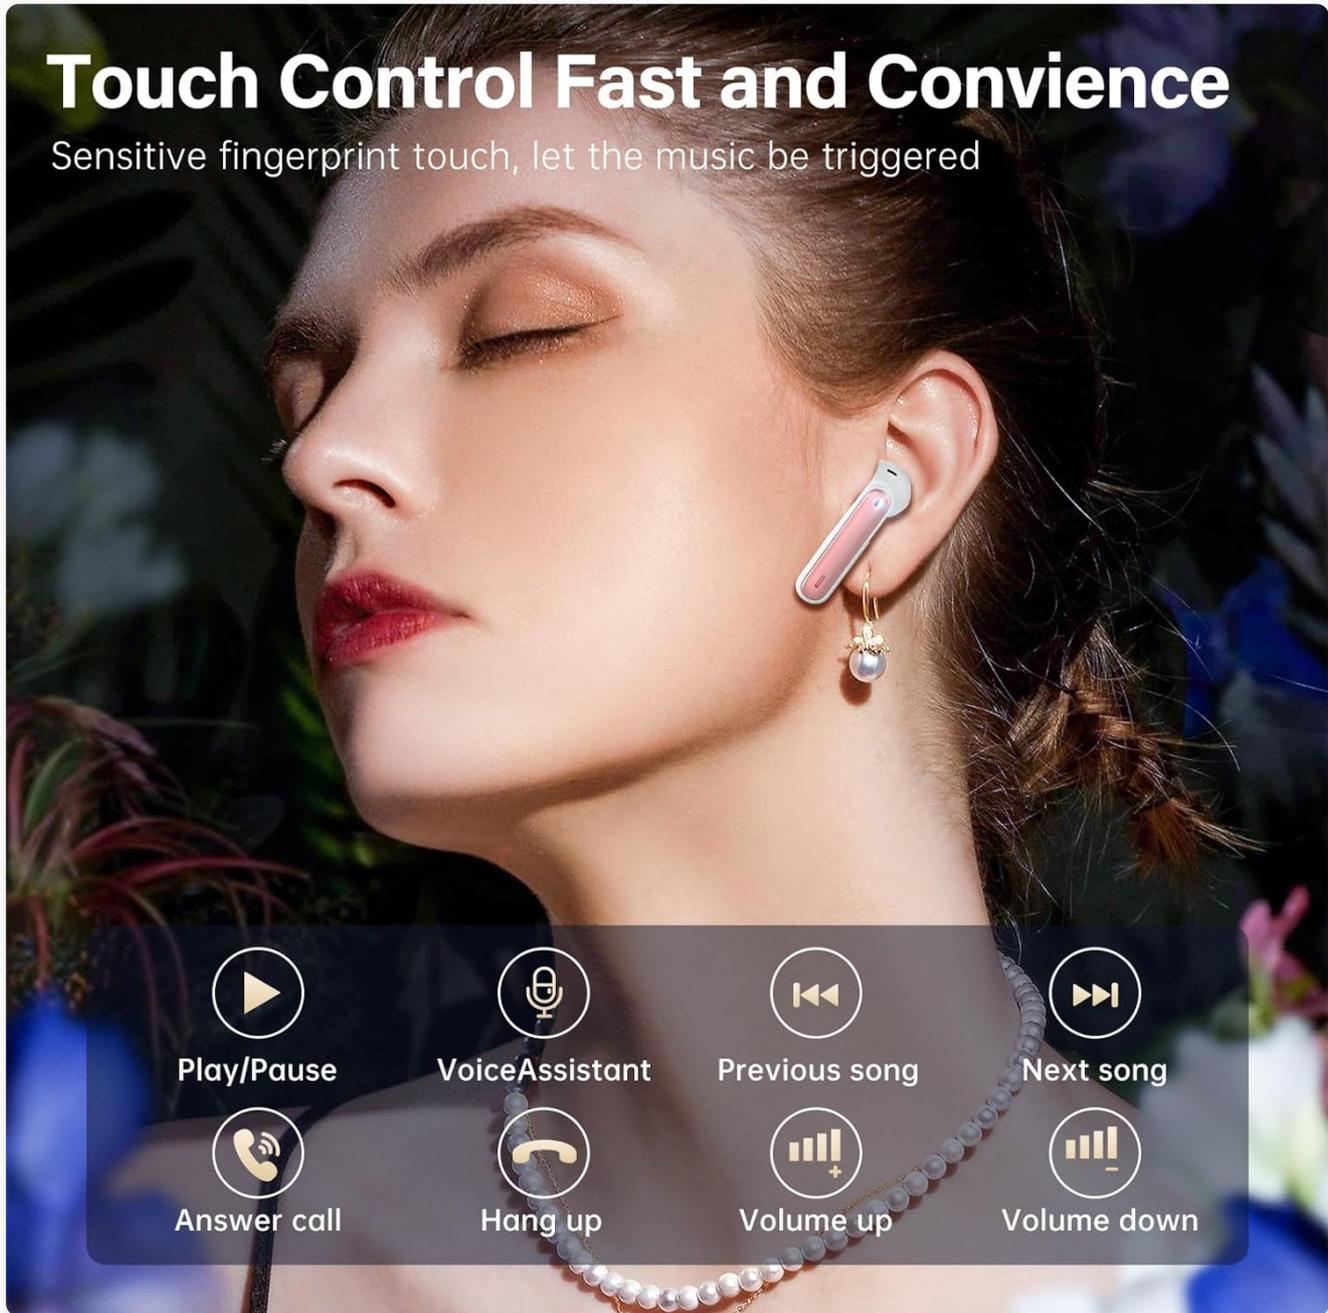


Image: Visual guide to the touch controls for the A10 Pro earbuds.

2. LED Digital Display

The charging case features a dual LED digital display that shows the real-time power levels for both the charging case (0-100%) and each individual earbud. This allows you to monitor battery status at a glance, ensuring you are always aware of remaining power.



Image: The A10 Pro charging case with its clear LED digital display showing battery percentages.

MAINTENANCE

1. Cleaning

To maintain optimal performance and hygiene, regularly clean your earbuds and charging case. Use a soft, dry, lint-free cloth to wipe down the surfaces. For the eartips, remove them from the earbuds and clean with a mild soap solution if necessary, then rinse and dry thoroughly before reattaching. Do not use abrasive cleaners or immerse the earbuds or case in water.

2. Water Resistance

The A10 Pro earbuds are designed with IPX7 water resistance, featuring a waterproof mesh and nano-coating. This protects them from sweat and light rain, making them suitable for workouts and outdoor activities. However, they are not designed for swimming or prolonged submersion in water. Ensure the charging port is dry before charging.

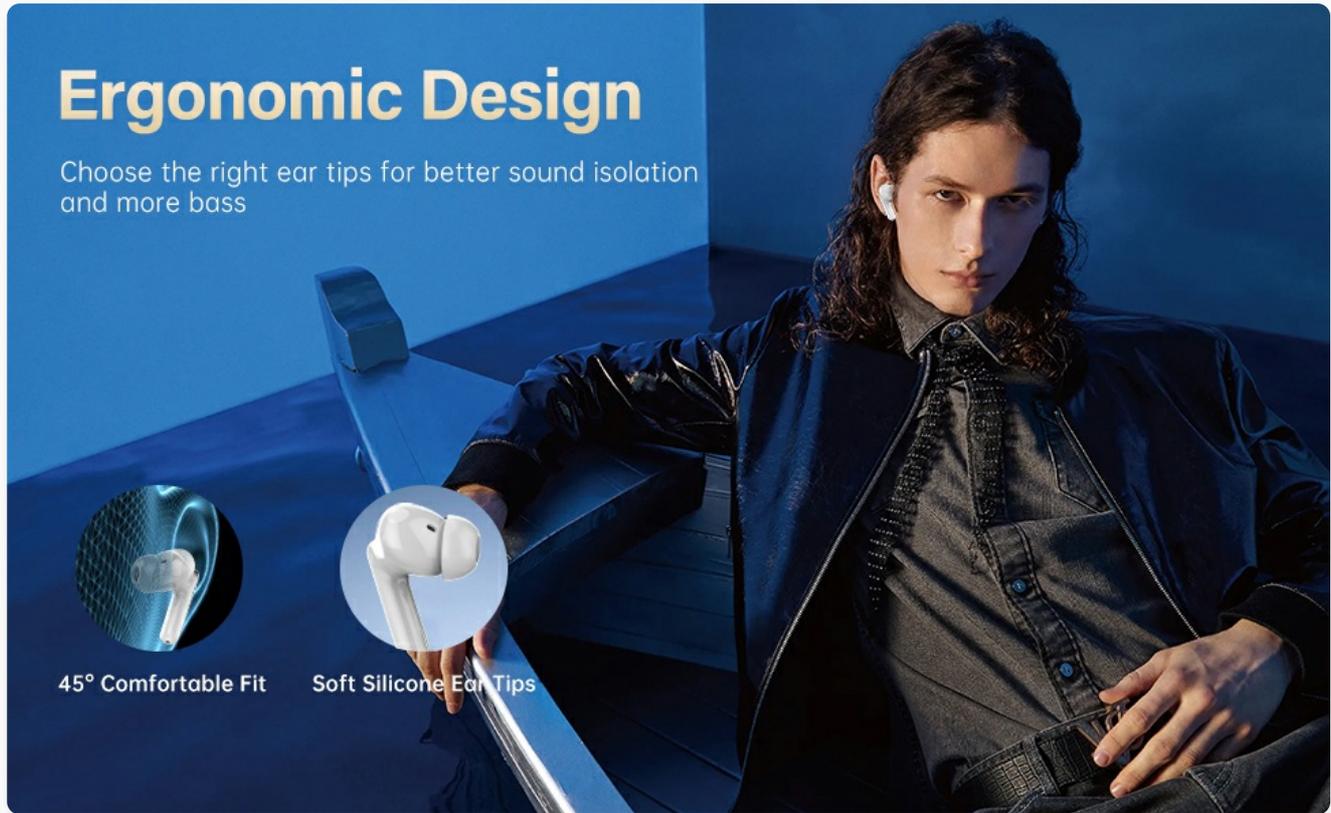


Image: The A10 Pro earbuds and case demonstrating their water-resistant capabilities.

TROUBLESHOOTING

- **Earbuds not charging:** Ensure the charging cable is securely connected to both the case and the power source. Check if the charging contacts on the earbuds and inside the case are clean and free of debris.
- **Earbuds not pairing:** Make sure Bluetooth is enabled on your device and the earbuds are within range. Forget the "A10 Pro" device from your device's Bluetooth list and try pairing again. Ensure the earbuds are charged.
- **No sound from one earbud:** Place both earbuds back into the charging case, close the lid for a few seconds, then take them out again. This often re-syncs them. If the issue persists, try resetting the earbuds (refer to specific reset instructions if available in a separate quick start guide).
- **Poor sound quality:** Ensure the eartips provide a good seal in your ear canal. Try different sized eartips. Clean any earwax or debris from the earbud nozzles.
- **Connection drops frequently:** Ensure there are no major obstructions between the earbuds and your device. Keep the device within the Bluetooth range (up to 15m). Avoid environments with strong electromagnetic interference.

SPECIFICATIONS

Feature	Detail
Model Name	A10 Pro

Feature	Detail
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	Up to 15 meters (approx. 49 feet)
Playtime Per Charge	Up to 8 hours
Total Playtime (with case)	Up to 50 hours
Charging Case Battery Capacity	300 mAh
Charging Time (Case)	Approx. 1.5 hours (Type-C)
Noise Control	ENC Noise Cancelling (for calls)
Water Resistance Level	IPX7
Audio Driver Size	13mm
Item Weight (Earbuds)	Approx. 3.6g per earbud
Control Type	Touch Control

WARRANTY AND SUPPORT

Sisism products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official Sisism website. If you encounter any issues or have questions about your A10 Pro Wireless Earbuds, please do not hesitate to contact our 24-hour online customer care service. Your satisfaction is our top priority.

For further assistance, please contact Sisism customer support through the platform where you purchased the product or via the contact information provided on the official Sisism website.