

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [Gasbye](#) /
- › Gasbye ICE2037YJ Ice Cream Maker Instruction Manual

## Gasbye ICE2037YJ

# Gasbye ICE2037YJ Ice Cream Maker Instruction Manual

Model: ICE2037YJ

## 1. INTRODUCTION

Thank you for choosing the Gasbye ICE2037YJ Ice Cream Maker. This appliance is designed to simplify the process of making homemade ice cream, yogurt, and sorbet with its advanced built-in compressor, eliminating the need for pre-freezing. Enjoy fresh, creamy frozen treats in approximately 35-40 minutes.



Image: The Gasbye ICE2037YJ Ice Cream Maker, a sleek stainless steel unit with an LED display, shown on a kitchen counter next to a bowl of freshly made ice cream.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance to ensure safe operation and to prevent damage or injury. Keep this manual for future reference.

- Always unplug the appliance from the power outlet before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Ensure the voltage of the appliance matches your local power supply before connecting.
- Keep hands and utensils out of the freezer bowl during operation to reduce the risk of injury to persons or damage to the unit.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Place the appliance on a stable, flat surface away from heat sources.

## 3. WHAT'S IN THE BOX

---

Your Gasbye Ice Cream Maker comes with the following components:

- **Main Unit:** The compressor-based ice cream maker.
- **2.1 Quart Mixing Bowl:** Stainless steel bowl for churning.
- **Churn Blade:** BPA-free plastic blade for mixing ingredients.
- **Transparent Lid:** With an opening for adding ingredients.
- **Ice Cream Scoop:** For serving your frozen treats.
- **Measuring Cup:** For precise ingredient measurement.
- **User Manual:** This document.
- **Recipe Book:** A collection of recipes to get you started.

## Sleek Design, Fits Any Kitchen



Image: A visual representation of the included accessories: a mixing bowl with handle, a BPA-free churn blade, an ice cream scoop, a measuring cup, the user manual, and a recipe book.

### 4. SETUP

- 1. Place the Mixing Bowl:** Carefully place the 2.1 quart mixing bowl into the main unit's chamber. Ensure it is seated correctly.
- 2. Insert the Churn Blade:** Place the churn blade onto the motor shaft inside the mixing bowl. Ensure it is properly aligned and seated at the bottom of the bowl.
- 3. Secure the Lid:** Place the transparent lid onto the mixing bowl and twist it clockwise until it locks securely into place. The lid has an opening for adding ingredients.



Image: A four-panel graphic illustrating the simple operation: 1. Pour mixture into the bowl. 2. Set to Ice Cream Mode. 3. Ready in minutes. 4. Enjoy your frozen treat.

## 5. OPERATING INSTRUCTIONS

The Gasbye Ice Cream Maker features an intuitive LED display and control buttons for easy operation.



Image: A detailed view of the control panel, highlighting the digital display and function buttons for various modes and time adjustments.

1. **Prepare Your Mixture:** Follow a recipe from the included book or an online source to prepare your desired ice cream, yogurt, or sorbet mixture.
2. **Pour Mixture into Bowl:** With the machine assembled and the churn blade in place, pour the prepared mixture through the opening in the transparent lid into the mixing bowl.
3. **Select Mode:** Press the 'MENU' button to cycle through the available modes:
  - **Ice Cream Mode:** For making creamy ice cream.
  - **Yogurt Mode:** For customizing yogurt and frozen yogurt.
  - **Mixing Only:** To incorporate mix-ins like chocolate, nuts, or fruit.
  - **Cooling Only:** To keep your frozen treat fresh and cool for up to 60 minutes after churning.
4. **Adjust Time (Optional):** Use the 'TIME+' and 'TIME-' buttons to adjust the churning duration if desired. The default time for ice cream is typically 35-40 minutes.
5. **Start Churning:** Press the 'START/PAUSE' button to begin the churning process. The machine will automatically stop when the set time expires or when the mixture reaches optimal firmness.

6. **Enjoy:** Once complete, remove the lid and churn blade, then scoop out your fresh frozen treat.

## 6. RECIPES

The Gasbye Ice Cream Maker includes a thoughtfully prepared recipe book to help you get started with various frozen treats. Additionally, this machine shares recipe compatibility with many popular brands, so numerous online tutorials and recipes are available for further inspiration and guidance.

## 7. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your ice cream maker. All removable parts are easy to clean.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Remove the transparent lid, churn blade, and mixing bowl from the main unit.
3. **Wash Removable Parts:** Wash the mixing bowl, churn blade, and lid with warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing. These parts are not dishwasher safe.
4. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.

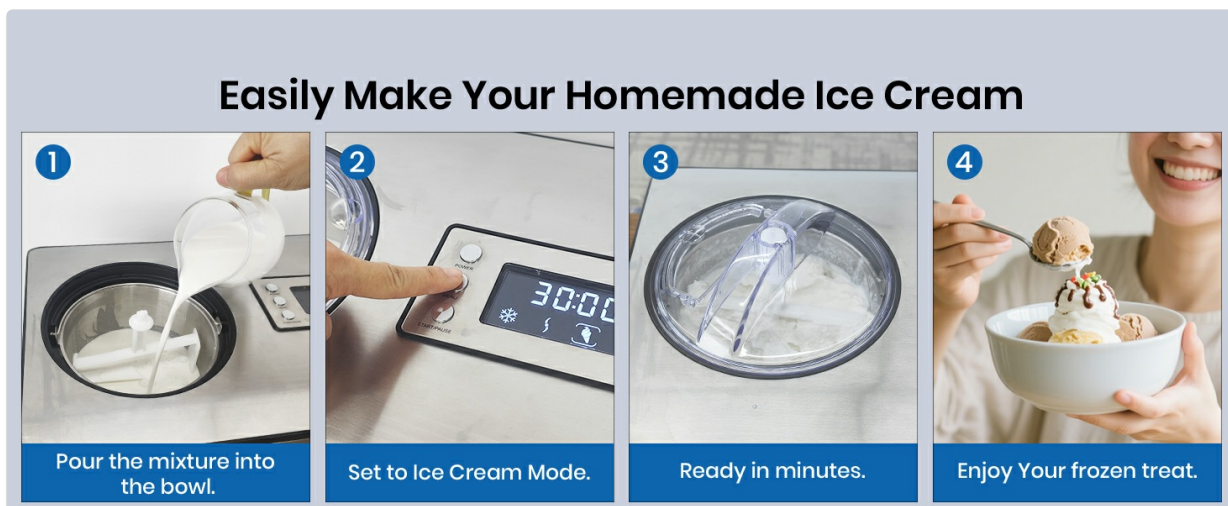


Image: A visual guide demonstrating the easy cleaning process for the detachable mixing bowl, churn blade, and transparent lid under running water.

## 8. TROUBLESHOOTING

Here are some common issues you might encounter and their solutions:

- **Issue: Mixing bowl is stuck or difficult to remove.**  
**Cause:** Water or condensation on the outside of the mixing bowl may have frozen, adhering it to the machine's liner.  
**Solution:** Turn off the machine and wait a few minutes for the ice to defrost. The bowl should then be easier to remove.
- **Issue: Churn blade stops spinning during operation.**  
**Cause 1:** The motor may be overheating due to prolonged use (e.g., multiple batches in a row) or very firm ingredients.  
**Solution 1:** The machine has a safety feature to prevent damage. Allow the motor to cool down for a

period before resuming operation.

**Cause 2:** The ice cream mixture has reached its desired firmness, and the machine has automatically stopped churning.

**Solution 2:** The ice cream is ready to be served.

- **Issue: Lid does not fit properly or is difficult to lock.**

**Cause:** The mixing bowl or churn blade may be misaligned.

**Solution:** Ensure the mixing bowl is fully seated. Adjust the churn blade by rotating it slightly until it sits all the way down and the lowest part touches the bottom of the bowl. This should provide enough clearance for the lid to lock.

- **Issue: Churn blade is rubbing or banging against the mixing bowl.**

**Cause:** The mixing bowl may be damaged (e.g., an inward dent or deformation).

**Solution:** Remove the mixing bowl and inspect it for any damage. If deformed, it may need to be replaced.

- **Issue: Mixing bowl gets stuck halfway when inserting into the machine.**

**Cause:** Similar to the blade rubbing, this could indicate damage or deformation to the mixing bowl.

**Solution:** Remove the bowl and inspect it for any damage. If deformed, it may need to be replaced.

Video: Ice Cream Maker Problem Troubleshooting Guide. This video provides visual demonstrations and solutions for common operational issues with the ice cream maker.

## 9. SPECIFICATIONS

---

- **Brand:** Gasbye
- **Model Name:** ICE2037YJ
- **Color:** Stainless Steel
- **Capacity:** 2.1 Quarts
- **Special Feature:** Built-In Compressor for Faster Freezing (No Pre-Freezing Needed)
- **Material:** Stainless Steel
- **Included Components:** 2.1 Quart Mixing Bowl, Churn Blade, Ice Scoop
- **Product Dimensions:** 16.7"L x 11.2"W x 10.3"H
- **Item Weight:** 26 Pounds
- **Operation Mode:** Automatic

## 10. WARRANTY AND SUPPORT

---

The Gasbye ICE2037YJ Ice Cream Maker comes with a 2-year quality coverage. If you encounter any issues or believe the product does not meet your expectations after use, please do not hesitate to contact Gasbye Support for a full refund or free replacement. All replacement units provided are brand new, not refurbished.

For support, please refer to the contact information provided in your product packaging or visit the official Gasbye website.