



[Manuals.plus](#) /

> [Xiaomi](#) /

> [Xiaomi TV A Pro 55" 2026 User Manual](#)

Xiaomi A Pro 55" 2026

Xiaomi TV A Pro 55" 2026 User Manual

Model: A Pro 55" 2026

INTRODUCTION

Thank you for choosing the Xiaomi TV A Pro 55" 2026. This smart television combines a stunning 4K QLED display with the intuitive Google TV operating system, delivering an immersive entertainment experience. Featuring Dolby Audio, DTS-X, and DTS Virtual:X for superior sound, a premium metal finish, and a 360° Bluetooth remote control, this TV is designed for modern living. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television.

IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the television. Keep this manual for future reference.

- **Power Source:** Connect the TV only to an AC power source as indicated on the rating label.
- **Ventilation:** Ensure proper ventilation around the TV. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Heat:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- **Cleaning:** Unplug the TV from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Mounting:** When wall-mounting, ensure the wall mount is securely installed and capable of supporting the TV's weight.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Xiaomi TV A Pro 55" 2026 Unit
- Remote Control

- Power Cable
- User Manual (this document)
- Warranty Card
- TV Stands (2x) and Screws (for stand assembly)

SETUP

1. Unpacking and Placement

Carefully remove the TV from its packaging. It is recommended to have two people for this process due to the size and weight of the unit. Place the TV on a stable, flat surface or prepare for wall mounting.



Image: The Xiaomi TV A Pro 55" 2026 displayed on its stand, showcasing its sleek design and vibrant display.

2. Attaching the TV Stands (Optional)

If you are not wall-mounting the TV, attach the included stands:

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.

3. Connecting Power

Plug the power cable into the TV's power input port, then plug the other end into a wall outlet. The TV will enter standby mode.

4. Connecting External Devices

Connect your external devices such as set-top boxes, gaming consoles, or Blu-ray players to the TV's input ports.

- **HDMI Ports:** For high-definition video and audio. The TV supports 120Hz refresh rate under Game Boost mode via

HDMI.

- **USB Ports:** For connecting USB storage devices to play media files.
- **Antenna/Cable Input:** For connecting an antenna or cable TV signal.



Image: A side-angle view of the Xiaomi TV A Pro 55" 2026, illustrating its thin bezel and potential port locations.

5. Initial Setup (Google TV)

Upon first power-on, the TV will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Network Connection:** Connect to your Wi-Fi network or use an Ethernet cable for a wired connection.
3. **Google Account Sign-in:** Sign in with your Google account to access Google TV features, apps, and personalized recommendations.
4. **Terms of Service:** Accept the terms and conditions.
5. **Channel Scan:** If connecting an antenna, the TV will scan for available channels.

OPERATING YOUR TV

1. Remote Control Overview

The 360° Bluetooth remote control allows for flexible operation without needing to point directly at the TV. Familiarize yourself with its buttons:

- **Power Button:** Turns the TV on/off or to standby.
- **Navigation Pad (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Accesses the Google TV home screen.
- **Volume Up/Down:** Adjusts the volume.
- **Channel Up/Down:** Changes TV channels.
- **Google Assistant Button:** Activates voice commands.
- **App Shortcut Buttons:** Direct access to popular streaming services.

2. Google TV Interface Navigation

The Google TV interface organizes your content from various streaming services and apps into a single, personalized home screen. Use the navigation pad on your remote to browse recommendations, access your installed apps, and manage settings.

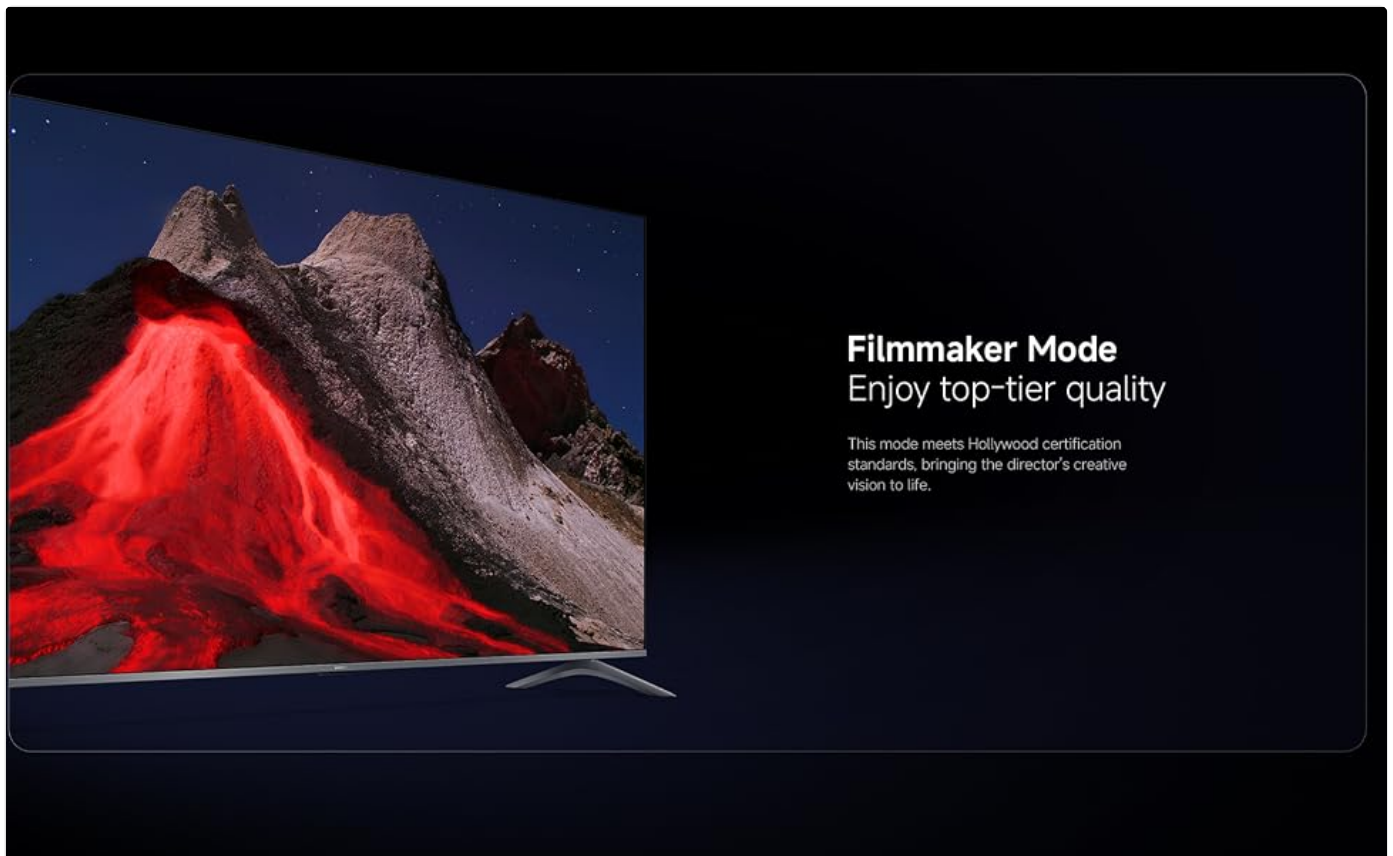


Image: A collage highlighting key features including the 4K QLED display, 120Hz refresh rate, Google TV interface, Dolby Audio, and sleek metal finish.

3. Picture and Sound Settings

Customize your viewing and listening experience:

- **Picture Modes:** Select from various preset modes (e.g., Standard, Vivid, Movie, Game) or customize settings like brightness, contrast, color, and sharpness. The 4K QLED display offers vibrant colors and deep blacks.
- **Sound Modes:** Choose from sound presets (e.g., Standard, Music, Movie, Voice) or adjust equalizer settings. The TV supports Dolby Audio, DTS-X, and DTS Virtual:X for an immersive audio experience.
- **Filmmaker Mode:** This mode meets Hollywood certification standards, ensuring content is displayed as the director intended.

4K ultra-high definition See even the most minute details

4K UHD resolution renders every detail with exceptional clarity so you won't miss a thing.



Image: An illustration explaining the QLED quantum dot display technology, highlighting its ability to produce 1.07 billion colors and 94% DCI-P3 color gamut.

4. Game Boost Mode

For an enhanced gaming experience, the TV supports a 120Hz refresh rate when Game Boost mode is activated via an HDMI connection. This provides smoother motion and reduced input lag for compatible gaming consoles.

MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (do not spray directly on the screen).
- **Cleaning the TV Body:** Use a soft, dry cloth to wipe the TV's frame and back panel.
- **Software Updates:** The TV may receive automatic software updates. Ensure your TV is connected to the internet to receive these updates, which can improve performance and add new features.
- **Storage:** If storing the TV for an extended period, unplug it and cover it to protect from dust. Store in a cool, dry place.

TROUBLESHOOTING

Before contacting support, try these common solutions:

Problem	Possible Solution
No Power	Ensure the power cable is securely plugged into both the TV and the wall outlet. Check if the wall outlet is working by plugging in another device. Press the power button on the TV itself, not just the remote.

Problem	Possible Solution
No Picture, but Sound is Present	<p>Check the input source. Press the "Input" or "Source" button on your remote to cycle through inputs.</p> <p>Ensure the HDMI cable (or other video cable) is securely connected to both the TV and the external device.</p> <p>Try a different HDMI port or cable.</p>
No Sound, but Picture is Present	<p>Increase the volume on the TV and any connected audio devices.</p> <p>Check if the TV is muted.</p> <p>Verify audio output settings in the TV menu (e.g., internal speakers, external audio system).</p> <p>Ensure audio cables are correctly connected.</p>
Remote Control Not Working	<p>Replace the batteries in the remote control.</p> <p>Ensure there are no obstructions between the remote and the TV (though Bluetooth reduces this issue).</p> <p>Try re-pairing the Bluetooth remote if it has become disconnected (refer to TV settings for pairing instructions).</p>
Network Connection Issues	<p>Restart your Wi-Fi router/modem.</p> <p>Check Wi-Fi password.</p> <p>Move the TV closer to the router or use a wired Ethernet connection.</p> <p>Go to TV network settings and try to reconnect.</p>

SPECIFICATIONS

Key technical specifications for the Xiaomi TV A Pro 55" 2026:

Model Name	Xiaomi TV A Pro 55" 2026
Screen Size	55 Inches (140 cm diagonal)
Display Technology	4K QLED UHD
Resolution	3840 x 2160 (4K)
Refresh Rate	60 Hz (Native), 120 Hz (Game Boost Mode via HDMI)
Operating System	Google TV
Audio Technology	Dolby Audio, DTS-X, DTS Virtual:X
Connectivity	Wi-Fi, Bluetooth, HDMI, USB, Ethernet
Dimensions (W x H x D)	122.6 x 71.1 x 7.6 cm (without stand)
Weight	13 kg
Included Components	TV Unit, Remote Control, Power Cable, User Manual, Warranty Card, TV Stands

WARRANTY AND SUPPORT

Your Xiaomi TV A Pro 55" 2026 comes with a manufacturer's warranty. Please refer to the included Warranty Card for detailed terms and conditions, including warranty period and coverage.

For technical support, service inquiries, or to report issues, please contact Xiaomi customer service through their official website or the contact information provided on your Warranty Card. Ensure you have your product model number (A Pro 55" 2026) and serial number ready when contacting support.

© 2026 Xiaomi. All rights reserved.
Google TV is a trademark of Google LLC.