

[Manuals.plus](#) /

› [Vitamix](#) /

› Vitamix Venturist Pro Blender Instruction Manual

Vitamix 075699

Vitamix Venturist Pro Blender Instruction Manual

Model: 075699

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Vitamix Venturist Pro Blender. Please read all instructions carefully before using the appliance.





Figure 1.1: Vitamix Venturist Pro Blender with ingredients ready for blending.

Product Overview

The Vitamix Venturist Pro Blender is a professional-grade blending system designed for versatility and performance. It features a powerful motor, variable speed control, and wireless connectivity that automatically adjusts blending times based on the container size. This renewed premium model includes a 64-ounce low-profile container and tamper, offering a wide range of blending possibilities from smooth purées to chunky salsas.

What's In The Box

- Motor Base
- 64-ounce Low Profile Container
- Tamper

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A tamper may be used only when the main lid is in place through the lid plug opening.
- Blades are sharp. Handle with extreme care.
- Do not use outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. GETTING STARTED (SETUP)

Before first use, unpack all components and clean them as described in the 'Care and Cleaning' section.





Figure 3.1: Vitamix Venturist Pro Blender with empty container, ready for setup.

Assembly

1. Place the motor base on a dry, flat, and stable surface.
2. Ensure the power cord is securely plugged into a grounded electrical outlet.
3. Place the 64-ounce low-profile container onto the motor base. The container is designed to fit securely and activate the built-in wireless connectivity, which allows the motor base to recognize the container size and adjust blending parameters accordingly.
4. Secure the lid onto the container. Ensure the lid plug is inserted into the lid opening.

4. OPERATION

The Vitamix Venturist Pro Blender offers precise control over your blending process with its intuitive interface.



Figure 4.1: Key features of the Vitamix Venturist Pro Blender.

Controls

- **Variable Speed Control:** The central dial allows you to fine-tune every texture, from smooth purées to chunky salsas. Start at a low speed and gradually increase to your desired setting.
- **Pulse Feature:** Located on the left, the Pulse switch provides quick bursts of power. This is ideal for layering coarse chops over smooth purées, such as for chunky pasta sauce or thick vegetable soups.
- **Start/Stop Switch:** Located on the right, this switch initiates and stops the blending cycle.
- **Digital Timer:** A built-in digital timer helps you avoid over-processing your blends, ensuring you achieve the perfect texture every time.

Blending Techniques

1. **Adding Ingredients:** Always add liquids first, followed by soft ingredients, leafy greens, fruits, and then ice or frozen ingredients.
2. **Starting the Blend:** Turn the Variable Speed Control to setting 1. Flip the Start/Stop switch to the ON position.
3. **Increasing Speed:** Slowly rotate the Variable Speed Control dial from 1 to 10 to increase blending speed. For most recipes, it is recommended to increase to high speed to create the Vitamix vortex.
4. **Using the Tamper:** If ingredients stop circulating, use the tamper through the lid plug opening to push

ingredients into the blades. Do not force the tamper into the container.

5. **Stopping the Blend:** When desired consistency is reached, flip the Start/Stop switch to the OFF position.



Figure 4.2: Vitamix Venturist Pro Blender in use, demonstrating its versatility.

5. CARE AND CLEANING

Proper care and cleaning will ensure the longevity and optimal performance of your Vitamix Venturist Pro Blender.

Self-Cleaning (for container)

1. Fill the container halfway with warm water and add a few drops of dish soap.
2. Secure the lid and lid plug.
3. Turn the Variable Speed Control to setting 1.
4. Flip the Start/Stop switch to the ON position and slowly increase to the highest speed.
5. Run for 30 to 60 seconds.

6. Flip the Start/Stop switch to the OFF position and rinse the container thoroughly with clean water.

Manual Cleaning

- **Container, Lid, and Tamper:** These parts are dishwasher-safe. Alternatively, wash them with warm, soapy water using a soft brush for hard-to-reach areas. Rinse thoroughly and air dry.
- **Motor Base:** Unplug the blender before cleaning. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or spray it with water.





Figure 5.1: Clean Vitamix Venturist Pro Blender after use.

6. TROUBLESHOOTING

If you encounter issues with your Vitamix Venturist Pro Blender, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure power cord is securely plugged in. Check that the Start/Stop switch is ON. Reset circuit breaker if necessary.
Ingredients not blending or circulating.	Too little liquid; too many ingredients; air pocket around blades.	Add more liquid. Reduce the amount of ingredients. Use the tamper to push ingredients into the blades. Increase speed to high.
Motor smells or overheats.	Overloading; prolonged blending of thick mixtures.	Reduce load. Allow the motor to cool down for 20-30 minutes. Ensure proper ventilation around the motor base.
Loud noise during operation.	Container not seated properly; foreign object in container.	Ensure container is securely seated on the motor base. Check for any foreign objects and remove them.

7. SPECIFICATIONS

Detailed technical specifications for the Vitamix Venturist Pro Blender.

Feature	Detail
Brand	Vitamix
Model Number	075699
UPC	703113756993

Feature	Detail
Color	Slate
Capacity	64 Fluid Ounces
Product Dimensions (D x W x H)	10.5"D x 8"W x 17"H
Item Weight	12 pounds
Power Source	AC
Voltage	120 Volts
Number of Speeds	10 (Variable Speed Control)
Blade Material	Stainless Steel
Special Feature	Built-In Wireless Connectivity (Self-Detect Technology)
Included Components	Motor Base, 64-ounce Low Profile Container, Tamper

8. WARRANTY AND CUSTOMER SUPPORT

Warranty Information

The Vitamix Venturist Pro Blender (Renewed Premium) comes with a**5-year full warranty**. This warranty covers parts, labor, and return shipping both ways, ensuring peace of mind regarding your investment.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Vitamix Customer Service. Refer to the official Vitamix website or your purchase documentation for the most current contact information. You can also visit the official Vitamix Store for more information and resources:[Vitamix Store on Amazon](#)

© 2025 Vitamix. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question