

GOWENIC GOWENIC23ofgcr64y-14

GOWENIC IPX8 Waterproof MP3 Player User Manual

Model: GOWENIC23ofgcr64y-14

1. INTRODUCTION

Thank you for choosing the GOWENIC IPX8 Waterproof MP3 Player. This device is designed for music playback in various environments, including underwater activities like swimming, surfing, and diving. With its IPX8 waterproof rating, 8GB internal memory, and support for multiple audio formats, it provides a reliable audio experience. Please read this manual carefully to ensure proper use and maintenance of your MP3 player.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x GOWENIC IPX8 Waterproof MP3 Player
- 1 x Waterproof Headphone
- 8 x Earplugs (various sizes)
- 1 x Charging Cable
- 1 x User Manual

3. PRODUCT FEATURES

- **IPX8 Waterproofing:** Designed to withstand immersion, ideal for swimming, surfing, and diving up to 10 feet underwater.
- **Multi-format Audio Support:** Compatible with MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, and Audible formats.
- **8GB Internal Memory:** Stores over 2000 songs, providing ample space for your music library.
- **Waterproof Headphones:** Specifically designed to prevent water entry and isolate external noise, ensuring clear sound quality underwater. Includes 5 different earbud sizes for a secure and comfortable fit.

- **Versatile Application:** Suitable for various activities including swimming, diving, running, surfing, skiing, kayaking, and other outdoor sports.

4. PRODUCT OVERVIEW

Familiarize yourself with the buttons and ports of your MP3 player:

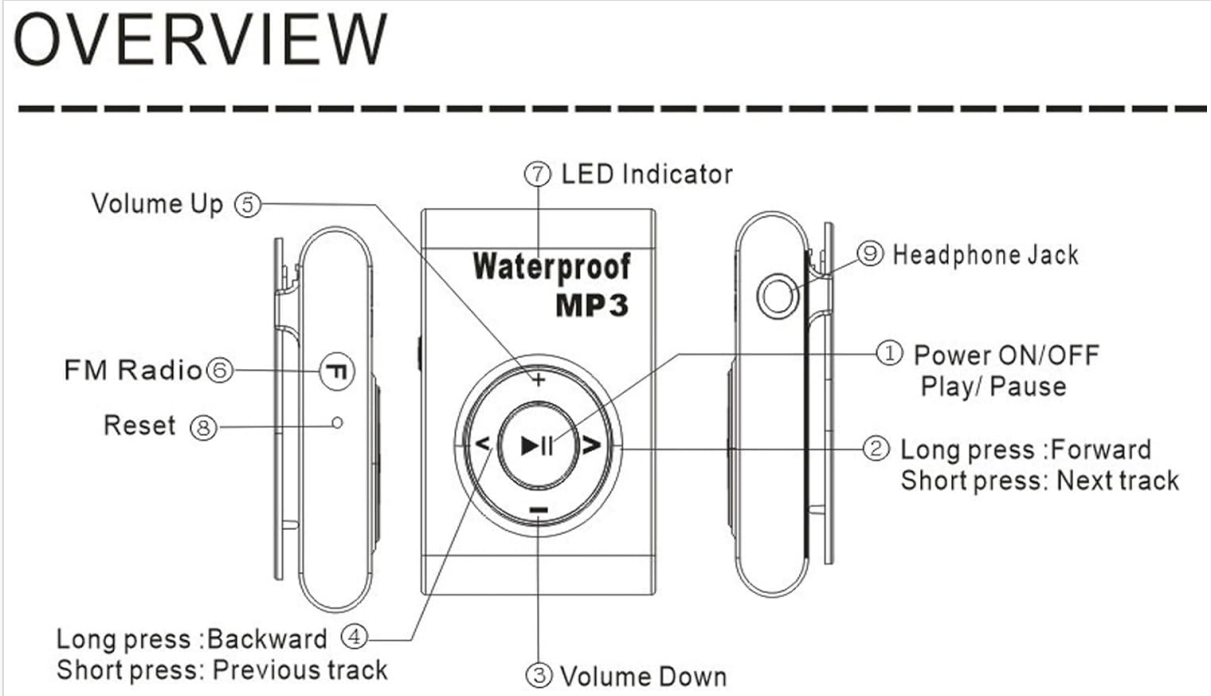


Image Description: A technical diagram illustrating the GOWENIC Waterproof MP3 Player from multiple angles (front, top, side). Key features are numbered and labeled: (1) Power ON/OFF / Play/Pause button, (2) Forward button (long press for forward, short press for next track), (3) Volume Down button, (4) Backward button (long press for backward, short press for previous track), (5) Volume Up button, (6) FM Radio button, (7) LED Indicator, (8) Reset button, (9) Headphone Jack.

1. **Power ON/OFF / Play/Pause:** Press to turn the device on or off, or to play/pause music.
2. **Forward:** Long press to fast forward within a track. Short press to skip to the next track.
3. **Volume Down:** Decrease playback volume.
4. **Backward:** Long press to rewind within a track. Short press to go to the previous track.
5. **Volume Up:** Increase playback volume.
6. **FM Radio:** Activate or deactivate FM radio function.
7. **LED Indicator:** Displays device status (e.g., charging, playing).
8. **Reset:** Use a small pin to reset the device if it becomes unresponsive.
9. **Headphone Jack:** Connect the waterproof headphones here.

5. SETUP

5.1 Charging the MP3 Player

Before first use, fully charge the MP3 player. Connect the provided charging cable to the MP3 player's port and to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status and turn off or change color when fully charged.

5.2 Loading Music Files

To transfer music to your MP3 player:

1. Connect the MP3 player to your computer using the charging cable.
2. Your computer should recognize the MP3 player as a removable disk.
3. Drag and drop your desired audio files (MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, Audible) into the MP3 player's storage folder.
4. Once files are transferred, safely eject the device from your computer before disconnecting the cable.

5.3 Attaching Headphones and Earbuds

Connect the waterproof headphones to the headphone jack (9) on the MP3 player. Select the appropriate earbud size from the 8 provided earplugs to ensure a snug and comfortable fit. A proper seal is crucial for both sound quality and waterproofing, especially during aquatic activities.



Image Description: The GOWENIC Waterproof MP3 Player in blue, connected to its black wired waterproof headphones. The MP3 player has a central control panel with play/pause, volume, and track navigation buttons. The headphones feature ear tips designed for water use.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To turn on: Press and hold the Power ON/OFF / Play/Pause button (1) for a few seconds.
- To turn off: Press and hold the Power ON/OFF / Play/Pause button (1) again for a few seconds.

6.2 Music Playback

- **Play/Pause:** Press the Power ON/OFF / Play/Pause button (1) to play or pause the current track.
- **Next Track:** Short press the Forward button (2).

- **Previous Track:** Short press the Backward button (4).
- **Fast Forward:** Long press the Forward button (2).
- **Rewind:** Long press the Backward button (4).

6.3 Volume Adjustment

- **Increase Volume:** Press the Volume Up button (5).
- **Decrease Volume:** Press the Volume Down button (3).

6.4 FM Radio (If applicable)

Press the FM Radio button (6) to switch between music playback and FM radio mode. Use the Forward (2) and Backward (4) buttons to scan for stations.



Image Description: A person wearing swimming goggles and a cap, with the blue GOWENIC Waterproof MP3 Player clipped securely to the goggle strap near their ear. The waterproof headphones are in place, indicating use during swimming.

7. MAINTENANCE

- **Cleaning:** After use, especially in chlorinated or saltwater, rinse the MP3 player and headphones with fresh water. Wipe them dry with a soft cloth.

- **Drying:** Ensure the headphone jack and charging port are completely dry before connecting the charging cable or storing the device.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Waterproofing:** The device is IPX8 rated for immersion up to 10 feet. Do not exceed this depth. Ensure the headphone connection is secure before water exposure.

8. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect to a charger and try again. If unresponsive, use a small pin to press the Reset button (8).
- **No sound or poor sound quality:** Check headphone connection. Ensure earbuds are properly seated in your ears for a good seal. Verify volume level.
- **Cannot transfer files:** Ensure the MP3 player is properly connected to the computer and recognized as a removable disk. Try a different USB port or cable.
- **Device freezes or becomes unresponsive:** Use a small pin to press the Reset button (8).

9. SPECIFICATIONS

Feature	Specification
Waterproofing Rating	IPX8
Memory Capacity	8GB
Supported Audio Formats	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, Audible
Battery Capacity	150mAh Lithium Ion Battery
Item Weight	2.01 ounces
Package Dimensions	5.51 x 3.54 x 1.18 inches
Model Number	GOWENIC23ofgcr64y-14

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official GOWENIC website. Keep your proof of purchase for any warranty claims.