

## Fanvace M32

# Fanvace M32 4-inch MP3 Player User Manual

Model: M32

## 1. INTRODUCTION

Thank you for purchasing the Fanvace M32 MP3 Player. This device is a versatile portable media player running on Android 13, offering extensive storage, high-quality audio, and various connectivity options including Bluetooth and Wi-Fi. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal use of your device.

Video: Overview of the Fanvace M32 MP3 Player's features and design.

## 2. PRODUCT OVERVIEW

### Key Features:

- **Operating System:** Android 13
- **Processor:** MTK 8-core processor
- **Display:** 4-inch touchscreen
- **Storage:** 16GB internal ROM + 3GB RAM, expandable up to 128GB with included microSD card (total 144GB)
- **Connectivity:** Bluetooth 5.0, 2.4GHz/5GHz Wi-Fi
- **Battery:** 2000mAh for extended use
- **Additional Functions:** FM Radio, Equalizer, Built-in Speaker, Video Playback, Voice Recording

### Package Contents:

The standard package includes:

- Fanvace M32 MP3 Player
- USB-C Cable
- Wired Earphones
- Screen Protector Film
- Protective Case
- 128GB MicroSD Card



Image: The Fanvace M32 MP3 Player displaying various pre-installed and downloadable applications.

### 3. SETUP

#### 3.1 Initial Power On

1. Press and hold the Power button (usually on the side) until the screen lights up.
2. Follow the on-screen prompts to select your preferred language and region.
3. Connect to a Wi-Fi network to complete the initial setup and access online features.

#### 3.2 Inserting the microSD Card

The device comes with a 128GB microSD card pre-installed. If you need to remove or replace it:

1. Locate the microSD card slot on the side of the device.
2. Gently push the existing card until it clicks and ejects, then pull it out.
3. Insert the new microSD card with the gold contacts facing down until it clicks into place.

## 144GB大容量

3GB RAM+16GB ROM+128GB  
TFカード付き、音楽データをたくさん保存できます。



3GB  
RAM



16GB  
ROM



128GB  
SDカード



1TB  
まで拡張可能



Image: Detailed view of the Fanvace M32 MP3 Player highlighting its 144GB storage capacity (16GB ROM + 3GB RAM + 128GB TF Card).

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Navigation

- **Touchscreen:** Navigate through menus and applications by tapping, swiping, and pinching.
- **Home Button:** Press the physical button below the screen to return to the home screen.
- **Volume Buttons:** Adjust volume using the dedicated buttons on the side.

### 4.2 Music Playback

The M32 supports various audio formats including MP3, OGG, FLAC, AAC, WMA, WAV, and APE.

1. Open the Music application from the home screen.
2. Browse your music library by artist, album, song, or playlist.
3. Tap on a song to begin playback.
4. Use the on-screen controls for play/pause, skip, repeat, and shuffle.

# Android13 OS MP3プレーヤー



Image: The Fanvace M32 MP3 Player showing a music playback screen and icons representing supported audio formats like MP3, OGG, FLAC, AAC, WMA, WAV, APE.

## 4.3 Video Playback

The device supports video formats such as RM, RMVB, FLV, MP4, DAT, MKV, MPG, and MOV.

1. Open a Video player application (e.g., Gallery or a downloaded app).
2. Select a video file to play.
3. Use on-screen controls for playback management.

## 素晴らしい視覚体験を提供します



Image: The Fanvace M32 MP3 Player showcasing its video playback capabilities on its 4.02-inch full touchscreen.

## 4.4 Bluetooth Connectivity

Connect your M32 to Bluetooth headphones, speakers, or car audio systems.

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth ON.
3. Ensure your Bluetooth accessory is in pairing mode.
4. Select your accessory from the list of available devices to pair.



Image: The Fanvace M32 MP3 Player's Bluetooth settings screen, demonstrating pairing with a Bluetooth headset for wireless audio.

#### 4.5 Wi-Fi Connectivity

Connect to 2.4GHz or 5GHz Wi-Fi networks for internet access and app downloads.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi ON.
3. Select your desired network from the list and enter the password if prompted.

## 5GHz&2.4GHz WiFi

2.4GHz&5GHz WiFi機能付き、  
ストリーミングやブラウザ等の  
機能が利用可能です。



Image: The Fanvace M32 MP3 Player demonstrating 2.4GHz and 5GHz Wi-Fi functionality, enabling streaming and browsing with various applications.

### 4.6 App Installation

The M32 comes with the Google Play Store pre-installed, allowing you to download various applications.

1. Open the **Play Store** application.
2. Sign in with your Google account.
3. Search for and install desired applications (e.g., streaming services, social media, learning apps).

## 5. CHARGING AND BATTERY

The M32 is equipped with a 2000mAh battery.

- **Charging:** Connect the device to a power source using the provided USB-C cable. A full charge typically takes 3-4 hours.
- **Battery Life:** Approximately 80 hours standby, 50 hours music playback, or 8 hours video playback on a full charge.

## Android 13 OSとMTK8コアプロセッサ

パワフルなMTK8コアプロセッサを搭載しており、アプリケーションのパフォーマンスと効率の向上、よりスムーズで高速な動作を実現します。



Image: The Fanvace M32 MP3 Player highlighting its 2000mAh battery capacity and estimated usage times for standby, music, video, and charging.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Software Updates:** Periodically check for system updates in **Settings > System > System update** to ensure optimal performance and security.

## 7. TROUBLESHOOTING

### Common Issues and Solutions:

| Issue                                 | Solution  |
|---------------------------------------|---|
| Device does not power on              | Ensure the battery is charged. Connect to a charger for at least 30 minutes. If unresponsive, perform a forced restart by holding the Power button for 10-15 seconds. |
| Cannot connect to Wi-Fi               | Check if Wi-Fi is enabled in settings. Ensure the password is correct. Restart the device and your Wi-Fi router. Try connecting to a different network if available.  |
| Bluetooth pairing fails               | Ensure Bluetooth is enabled on both devices and they are in pairing mode. Keep devices close to each other. Restart both devices.                                     |
| Applications are slow or unresponsive | Close unnecessary background applications. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the device.                                |
| Battery drains quickly                | Reduce screen brightness. Turn off Wi-Fi and Bluetooth when not in use. Close background apps. Limit streaming or heavy usage.  |

## 8. SPECIFICATIONS

| Feature                 | Detail   |
|-------------------------|--|
| Screen Size             | 4 inches   |
| Color                   | Black  |
| Wireless Connectivity   | 2.4 GHz Wireless Frequency, 5 GHz Wireless Frequency, Bluetooth    |
| Battery Included        | Yes  |
| Brand Name              | Fanvace  |
| Manufacturer            | Fanvace  |
| Product Model Number    | M32  |
| Included Components     | Music Player   |
| Other Features          | FM Radio, Equalizer, Touchscreen, Built-in Speaker, Video Playback |
| Connectivity Technology | Bluetooth  |
| Product Dimensions      | 1 x 4.5 x 8 cm   |
| Item Weight             | 50 grams   |
| Memory Storage Capacity | 144 GB   |
| Compatible Devices      | Speaker  |
| Media Type              | microSD Card   |

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official Fanvace website. Keep your purchase receipt for warranty claims.