

Manuals.plus /

› COSORI /

› Cosori Turbo Tower Pro Smart Chef Edition Air Fryer User Manual

COSORI Cosori Turbo Tower Pro Smart Chef Edition

Cosori Turbo Tower Pro Smart Chef Edition Air Fryer User Manual

Model: Cosori Turbo Tower Pro Smart Chef Edition

INTRODUCTION

Thank you for purchasing the Cosori Turbo Tower Pro Smart Chef Edition Air Fryer. This manual provides essential information for safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Image: Front view of the Cosori Turbo Tower Pro Smart Chef Edition Air Fryer, showcasing its sleek black and gold design with the control panel visible at the top.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the cord, plug, or housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

COMPONENTS AND FEATURES

The Cosori Turbo Tower Pro Smart Chef Edition features a unique dual-basket design for versatile cooking.



Image: Exploded view of the Cosori Turbo Tower Pro Smart Chef Edition Air Fryer, showing the main unit, two removable cooking baskets with crisper plates, and an additional rack accessory.

Key Features:

- **Dual Basket Design:** Upper basket (4.3L) and lower basket (6.5L) for simultaneous cooking of different foods.
- **Smart Chef Edition:** WiFi connectivity for app control and smart features.
- **Ceramic Coating:** Baskets feature 100% ceramic coating for non-stick performance and easy cleaning.
- **DC Motor & Double Blaze Technology:** Enhanced fan speed and heating elements for uniform cooking.

- **Pre-set Programs:** Multiple pre-configured cooking functions for convenience.



Image: Close-up view of the Cosori Turbo Tower Pro Smart Chef Edition Air Fryer's interior, highlighting the dual heating elements (Double Blaze) and the ceramic coating of the baskets. The image also mentions 3 heaters, indicating advanced heating technology.



Image: A basket from the Cosori Turbo Tower Pro Smart Chef Edition Air Fryer, emphasizing its 100% ceramic coating for health and ease of cleaning. Icons for "Easy to clean" and "Dishwasher safe" are present, though the product specifications state "Non" for dishwasher safe, so I will clarify this in the text.

Note: While the ceramic coating is designed for easy cleaning, the product specifications indicate that the baskets are not dishwasher safe. Please refer to the cleaning instructions for proper maintenance.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Keep packaging for future storage or transport.
2. **Cleaning:** Before first use, wash the baskets and crisper plates with warm, soapy water. Rinse and dry thoroughly. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances, ensuring adequate air circulation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run:** It is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) to eliminate any manufacturing odors. A slight smell may be present during this process, which is normal.

OPERATING INSTRUCTIONS

Basic Operation:

1. Place food in the cooking baskets. Do not overfill.
2. Slide the baskets firmly into the main unit.
3. Press the power button to turn on the appliance.
4. Select a pre-set program or manually set the temperature and time using the control panel.
5. Press the start button to begin cooking.
6. Shake or flip food halfway through cooking for even results, if necessary.
7. Once cooking is complete, carefully remove the baskets and transfer food.

Smart Features (WiFi Connectivity):

The Cosori Turbo Tower Pro Smart Chef Edition can be controlled via a smartphone application. Download the official Cosori app from your device's app store.

- Follow the in-app instructions to pair your air fryer with your home WiFi network.
- Control cooking settings, monitor progress, and access recipes remotely.
- Utilize the synchronization feature for cooking different items in each basket simultaneously.



Image: Illustrates the uniform cooking capability of the Cosori Turbo Tower Pro Smart Chef Edition, comparing the even heating with its DC motor and Double Blaze technology against a single heater AC motor. This highlights the improved performance for consistent results.



Image: Demonstrates the compact footprint of the Cosori Turbo Tower Pro Smart Chef Edition despite its dual basket capacity. It shows the unit on a kitchen counter with dimensions, emphasizing its space-saving design compared to traditional dual-basket models.



Image: Shows the Cosori Turbo Tower Pro Smart Chef Edition Air Fryer cooking different food categories (carbohydrates, proteins, vegetables) simultaneously in its dual baskets, illustrating its ability to prepare balanced meals in one go.

CARE AND MAINTENANCE

Cleaning:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- Wash the baskets and crisper plates with warm, soapy water and a non-abrasive sponge. Do not use metal scouring pads or abrasive cleaning materials.
- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
- For stubborn food residue, soak the baskets in warm, soapy water for 10-15 minutes before cleaning.
- Ensure all parts are completely dry before storing or using again.

Storage:

Store the air fryer in a cool, dry place. Ensure all components are clean and dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure plug is securely in outlet; test outlet with another appliance; contact customer support.
Food is not cooked evenly.	Baskets are overcrowded; food not shaken/flipped.	Cook in smaller batches; shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean baskets thoroughly after each use; drain excess oil from high-fat foods.
Appliance smells during first use.	Manufacturing residue burning off.	This is normal. Run empty for 10-15 minutes as per first use instructions.
WiFi connection issues.	Incorrect network password; too far from router; app issues.	Verify password; move air fryer closer to router; restart app/phone; consult app's troubleshooting guide.

PRODUCT SPECIFICATIONS

Model Name: Cosori Turbo Tower Pro Smart Chef Edition

Brand: COSORI

Capacity: 10.8 Liters (4.3L upper, 6.5L lower)

Control Method: Application (Smart Control)

Special Features: Pre-set programs, cooking synchronization, WiFi connectivity, DC Motor, Double Blaze heating, 100% Ceramic non-stick coating.

Internal Material: Ceramic

Item Weight: 7 Kilograms

Recommended Uses: Cooking, Frying, Roasting

Dishwasher Safe: No (for baskets/plates)

ASIN: B0F669ZLBG

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the warranty card included with your product or visit the official Cosori website. Keep your purchase receipt as proof of purchase.

Manufacturer: Cosori

Availability of spare parts: Information unavailable on spare parts.

Software updates guaranteed until: Information not available.