

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [GDKLXL](#) /

> [GDKLXL Electric Razor MS-368 User Manual](#)

### GDKLXL MS-368

# GDKLXL Electric Razor User Manual

Model: MS-368

## INTRODUCTION

Thank you for choosing the GDKLXL Electric Razor. This advanced electric shaver is designed for men, offering a comfortable and efficient shaving experience. Featuring a pop-up trimmer, waterproof design for wet and dry use, and a rechargeable battery, this device provides versatility and convenience for your daily grooming routine. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and to maximize the lifespan of your shaver.





Figure 1: GDKLXL Electric Razor MS-368. This image displays the front view of the electric razor, highlighting its three rotary shaving heads, the power button, and a digital display indicating battery percentage.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your GDKLXL Electric Razor:

- **Rotary Shaving Heads:** Three flexible heads designed to follow facial contours for a close shave.
- **Pop-Up Trimmer:** Integrated trimmer for precise detailing of sideburns and mustaches.
- **Power Button:** Located on the front, used to turn the shaver on/off.
- **Digital Display:** Shows battery charge level (e.g., "95 power left") and charging status.
- **Charging Port:** Located at the bottom of the shaver for connecting the charging cable.
- **Protective Cap:** Covers the shaving heads when not in use.

## SETUP AND INITIAL USE

### Charging the Shaver

1. Ensure the shaver is turned off.

2. Connect the charging cable to the charging port at the bottom of the shaver.
3. Plug the other end of the cable into a suitable power outlet.
4. The digital display will indicate charging status. A full charge typically takes approximately [X hours - \*information not provided, so I'll omit a specific number\*].
5. For optimal battery life, allow the shaver to fully charge before its first use.

## First Shave

After fully charging, your shaver is ready for use. It can be used for both wet and dry shaving.

## OPERATING INSTRUCTIONS

### General Shaving Tips

- Press the power button to turn the shaver on.
- Hold the shaver at a right angle (90 degrees) to your skin.
- Move the shaver in small, circular motions across your face and neck.
- Stretch your skin with your free hand to make the hairs stand upright, especially in difficult areas.
- Do not press too hard; the shaver is designed to cut effectively with light pressure.
- Press the power button again to turn the shaver off.

### Wet Shaving

The GDKLXL Electric Razor is fully waterproof, allowing for a comfortable wet shave with foam or gel.

1. Apply shaving foam or gel to your skin.
2. Shave as described in the "General Shaving Tips" section.
3. Rinse the shaver heads under running water during and after shaving to prevent clogging.

### Using the Pop-Up Trimmer

The integrated pop-up trimmer is ideal for shaping sideburns, mustaches, and detailing.

1. Locate the trimmer release switch (usually on the back or side of the shaver).
2. Slide the switch to activate the pop-up trimmer.
3. Use the trimmer to precisely shape and trim longer hairs.
4. Once finished, push the trimmer back into its housing until it clicks into place.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your shaver.

### Daily Cleaning

1. After each use, turn off the shaver.
2. Open the shaving head unit (refer to your shaver's specific mechanism, usually by pressing a release button or twisting).
3. Rinse the shaving heads and the hair chamber thoroughly under warm running water.
4. Shake off excess water and allow the shaver to air dry completely before reattaching the protective cap or

storing.

## Deep Cleaning (Weekly/Bi-weekly)

- For a more thorough clean, you may detach the individual shaving blades and combs.
- Rinse all parts under running water.
- Allow all components to dry completely before reassembling.
- Do not use abrasive cleaning agents or harsh chemicals, as these can damage the shaver.

## Blade Replacement

For continued optimal performance, it is recommended to replace the shaving heads approximately every 12 months, or sooner if you notice a decrease in shaving efficiency or increased irritation. Replacement heads can be purchased from authorized GDKLXL retailers or online.

## TROUBLESHOOTING

If you encounter issues with your GDKLXL Electric Razor, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Shaver does not turn on.	Shaver is in travel lock mode.	Press and hold the power button for 3 seconds to deactivate travel lock.
Poor shaving performance / pulling hairs.	Shaving heads are dirty or clogged.	Clean the shaving heads thoroughly as per maintenance instructions.
Poor shaving performance / pulling hairs.	Shaving heads are worn out.	Replace the shaving heads.
Shaver not charging.	Charging cable or adapter faulty.	Check connections; try a different compatible charging cable/adapter if available.

If the problem persists after trying these solutions, please contact GDKLXL customer support.

## SPECIFICATIONS

Feature	Detail
Brand	GDKLXL
Model	MS-368
Product Dimensions	1 x 1 x 1 inches
Item Weight	9.3 ounces
Battery Type	Lithium Ion (1 AA battery included)

Feature	Detail
Power Source	Rechargeable
Waterproof	Yes (Wet & Dry Use)
UPC	737633042427
Manufacturer	GDKLXL

## WARRANTY INFORMATION

GDKLXL products are manufactured to the highest quality standards. This product comes with a limited warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of the warranty. Keep your purchase receipt as proof of purchase for any warranty claims.

The warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear of consumable parts like shaving heads.

## CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your GDKLXL Electric Razor, please contact our customer support team. You can find contact information on the GDKLXL official website or through the contact details provided in your product packaging.

When contacting support, please have your product model number (MS-368) and purchase details ready.

© 2025 GDKLXL. All rights reserved.

This manual is subject to change without notice.