

[Manuals.plus](#) /

› [Miroir](#) /

› Miroir 2.2ch 100W Sound Bar User Manual

Miroir SL3301

Miroir 2.2ch 100W Sound Bar User Manual

Model: SL3301

[Setup](#)[Operating](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

INTRODUCTION

This user manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Miroir 2.2ch 100W Sound Bar. Please read this manual thoroughly before using the product to ensure proper function and longevity.



The Miroir 2.2ch 100W Sound Bar, designed for smart TVs, offers a powerful audio experience for movies, gaming, and music. It features a sleek design that integrates seamlessly into any home entertainment system.

SETUP

1. What's in the Box

Before you begin, please ensure all components are present:

- 2.2ch Soundbar (2 detachable units)
- HDMI-ARC Cable
- Optical Cable
- RCA to 3.5mm Audio Cable
- RCA to RCA Audio Cable
- Wall Mounting Kit
- Base (for vertical placement)

- User Manual
- Power Adaptor
- Remote Control (requires 2 AAA batteries, not included)



SOUND BAR



Digital Optical Cable



Stereo RCA to RCA Audio Cable(2.5m)



HDMI ARC



Stereo RCA to RCA Audio Cable(180mm)



User Manual



Stereo 3.5mm to 2RCA Audio Cable



Wall Mounting Kit



Base



Remote Control



Power Adaptor

Contents of the Miroir Sound Bar package, including cables, remote, and mounting accessories.

2. Assembly and Placement

The Miroir Sound Bar features a versatile 2-in-1 detachable design, allowing for both horizontal soundbar configuration and vertical independent speaker setup.

Horizontal Sound Bar Assembly:

1. Align the clips on both soundbar units.
2. Gently push the units together until they merge securely.
3. Ensure the connection is firm.

Vertical Independent Speaker Assembly:

1. To separate, push the units in opposite directions to detach.
2. Install the provided bases onto the bottom of each speaker unit.
3. Insert the stereo RCA to RCA audio cable to connect the two speakers for audio signal transmission.



Visual guide for assembling the soundbar in either horizontal or vertical configurations.

Placement Options:

You can place the soundbar on a desktop or mount it on a wall. The wall mounting kit is included for convenience.

- **Desktop Placement:** Place the assembled soundbar horizontally below your TV, or position the two independent speakers vertically on either side of your TV.
- **Wall Mount:** Use the included wall mounting kit to securely attach the soundbar to the wall. Ensure proper measurements and use appropriate tools for installation.

Wall Mount



Desktop Placement



Break Routine, Liberty Combination

L/R Desktop



L/R Wall Mount



Various placement options for the soundbar, including wall-mounted and desktop configurations for both combined and separated units.


3. Connections

The soundbar offers multiple connectivity options for your devices:

- **HDMI-ARC:** For optimal audio quality and control, connect the soundbar to your TV's HDMI-ARC port using the provided HDMI-ARC cable. This allows for one-click sync with your TV.
- **Optical:** Connect to your TV or other audio source using the optical cable for digital audio transmission.
- **AUX (3.5mm):** Use the RCA to 3.5mm cable to connect to devices with a 3.5mm audio output.
- **USB:** For direct audio playback from USB devices.
- **Subwoofer Out:** A port is reserved for connecting an active external subwoofer (sold separately) for enhanced bass.

SETUP LIKE A BREEZE


Further simplify your life

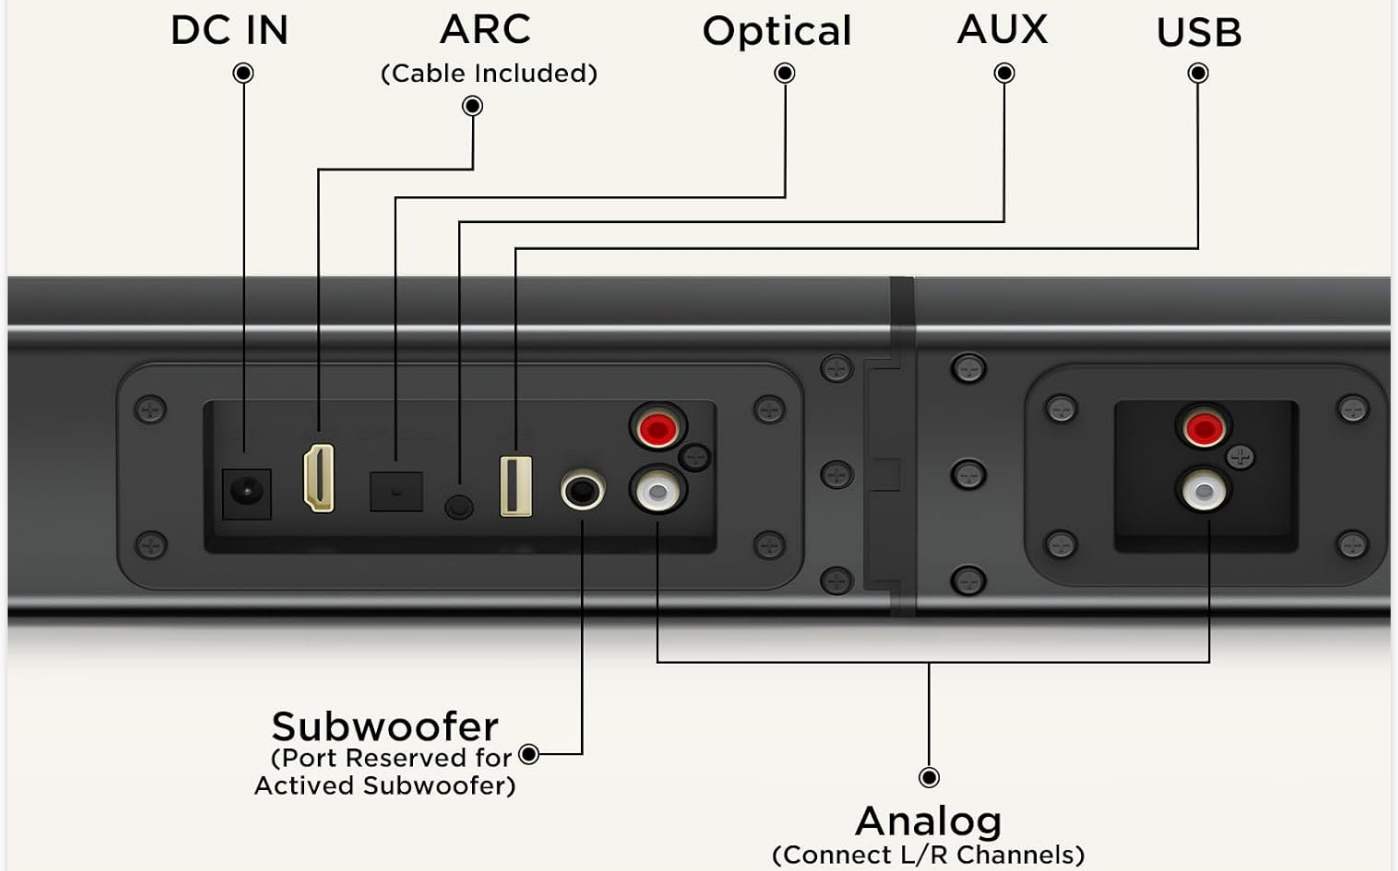

Bluetooth 5.3

15m transmission distance in various scenarios

Rear view of the soundbar illustrating all available input and output ports for various connections.

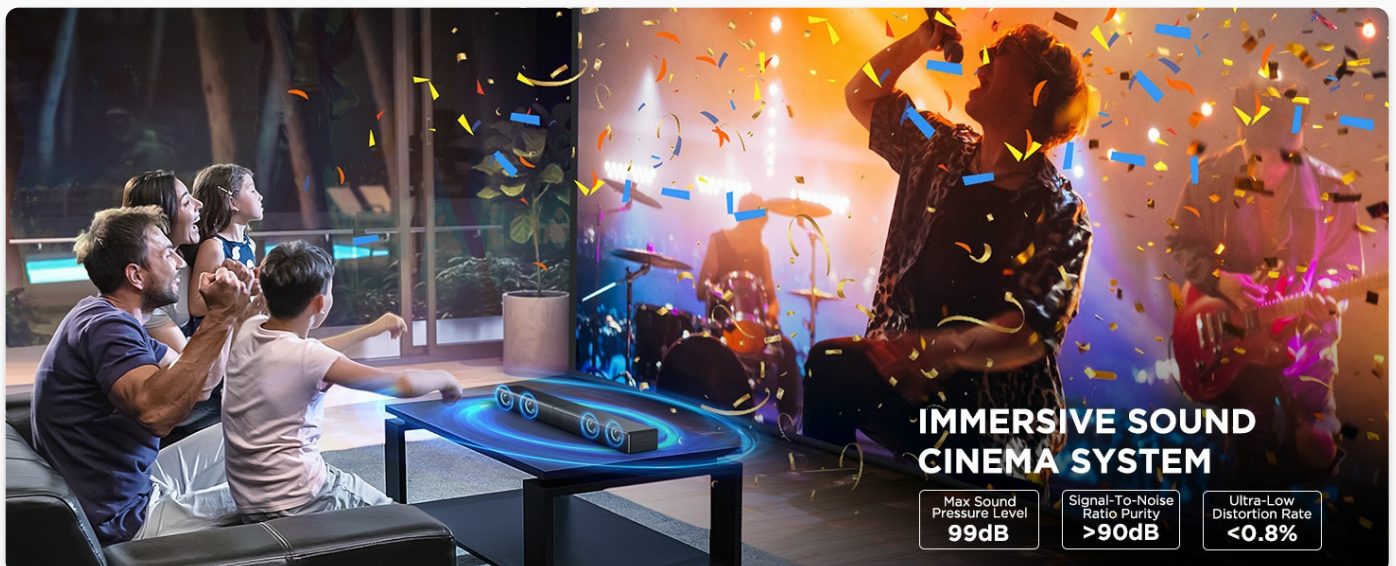

OPERATING INSTRUCTIONS

1. Power On/Off

Press the Power button on the soundbar's top panel or on the remote control to turn the unit on or off.

2. Input Selection

Press the 'Input' button on the remote control or the corresponding button on the soundbar to cycle through available input sources: HDMI-ARC, Bluetooth, Optical, and AUX.

3. Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the soundbar or remote control to adjust the audio level.

4. EQ Modes

The soundbar features 3 Equalizer (EQ) modes optimized for different audio content:

- **Music Mode:** Enhances audio for music playback, providing a balanced sound profile.
- **Movie Mode:** Optimizes sound for cinematic experiences, emphasizing dialogue clarity and dynamic effects.
- **Gaming Mode:** Tailored for gaming, offering immersive soundscapes and clear in-game audio cues.

Select the desired EQ mode using the remote control.

PERSONALIZED 3 EQ MODES

Designed For Music, Movies and Games



News



Music



Movie




The soundbar offers personalized EQ modes for News, Music, and Movie content, enhancing your listening experience.

5. Bluetooth Pairing

To connect your device via Bluetooth 5.3:

1. Ensure the soundbar is powered on.
2. Press the 'Bluetooth' button on the remote control or the soundbar's top panel to enter Bluetooth pairing mode. The LED display will indicate 'BT' and may flash.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select 'Miroir SL3301' (or similar name) from the list to pair.
5. Once connected, the LED display will show a steady 'BT' indicator.

PERSONALIZED 3 EQ MODES

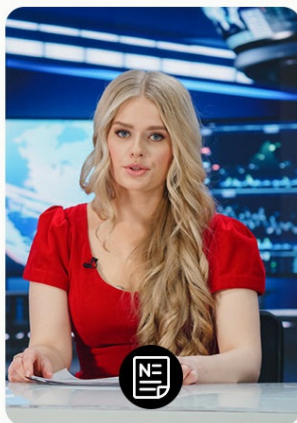

News



Music



Movie

Bluetooth 5.3 connectivity allows for wireless music streaming up to 15 meters, suitable for various scenarios.

6. Adjustable Bass

The soundbar features adjustable bass levels to customize your audio experience. Use the dedicated bass control buttons on the remote control to increase or decrease the bass output.

MAINTENANCE

To ensure the longevity and optimal performance of your Miroir Sound Bar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the soundbar. Do not use liquid cleaners or aerosol sprays, as they may damage the finish or internal components.
- **Ventilation:** Ensure the soundbar has adequate ventilation. Do not block any ventilation openings.
- **Storage:** If storing the soundbar for an extended period, disconnect it from the power source and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the soundbar with care. Avoid dropping it or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter any issues with your Miroir Sound Bar, please refer to the following common troubleshooting steps:

- **No Sound:**
 - Check if the soundbar is powered on and the volume is not muted or set too low.
 - Verify that the correct input source is selected on the soundbar (e.g., HDMI-ARC, Optical, Bluetooth).
 - Ensure all cables are securely connected to both the soundbar and the audio source (TV, console, etc.).
 - If using HDMI-ARC, check your TV's audio settings to ensure ARC is enabled.
- **Distorted Sound:**
 - Reduce the volume on both the soundbar and the connected device.
 - Check for any loose cable connections.
 - Try a different audio source or cable to rule out external issues.
- **Bluetooth Connection Issues:**

- Ensure the soundbar is in Bluetooth pairing mode.
- Move your Bluetooth device closer to the soundbar to ensure it's within the 15m range.
- Forget the soundbar from your device's Bluetooth list and attempt to re-pair.
- Turn off and on both the soundbar and your Bluetooth device.

• **Remote Control Not Working:**

- Check and replace the batteries (2 AAA batteries required).
- Ensure there are no obstructions between the remote and the soundbar.
- Point the remote directly at the soundbar's sensor.

If the issue persists after trying these steps, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Miroir
Model Name	SL3301
Speaker Type	Soundbar
Mounting Type	Wall Mount
Material	Plastic ABS
Color	Black
Product Dimensions	31.2"D x 4.17"W x 2.54"H
Item Weight	8.49 pounds
Speaker Maximum Output Power	100 Watts
Frequency Response	20 KHz
Connectivity Technology	HDMI-ARC, Bluetooth 5.3, Optical, AUX
Audio Output Mode	Stereo
Number of Batteries	2 AAA batteries required (for remote)

WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the documentation included in your product packaging. You may also visit the official Miroir website for the most up-to-date warranty terms and contact information for technical assistance.

Online Support: [Visit the Miroir Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question