

Manuals.plus /

› FORLIM /

› FORLIM SK1001-2W 2-Speed Gravity Electric Salt and Pepper Grinder Set User Manual

## FORLIM SK1001-2W

# FORLIM SK1001-2W 2-Speed Gravity Electric Salt and Pepper Grinder Set User Manual

Model: SK1001-2W

## INTRODUCTION

This manual provides instructions for the safe and efficient use of your FORLIM 2-Speed Gravity Electric Salt and Pepper Grinder Set. This set features an 800mAh rechargeable battery, an auto-reverse cleaning function, and a durable ceramic grinding core, designed for convenient one-handed operation.

## PRODUCT COMPONENTS

- Electric Grinder Unit (2)
- USB Charging Cable (2)
- User Manual (1)

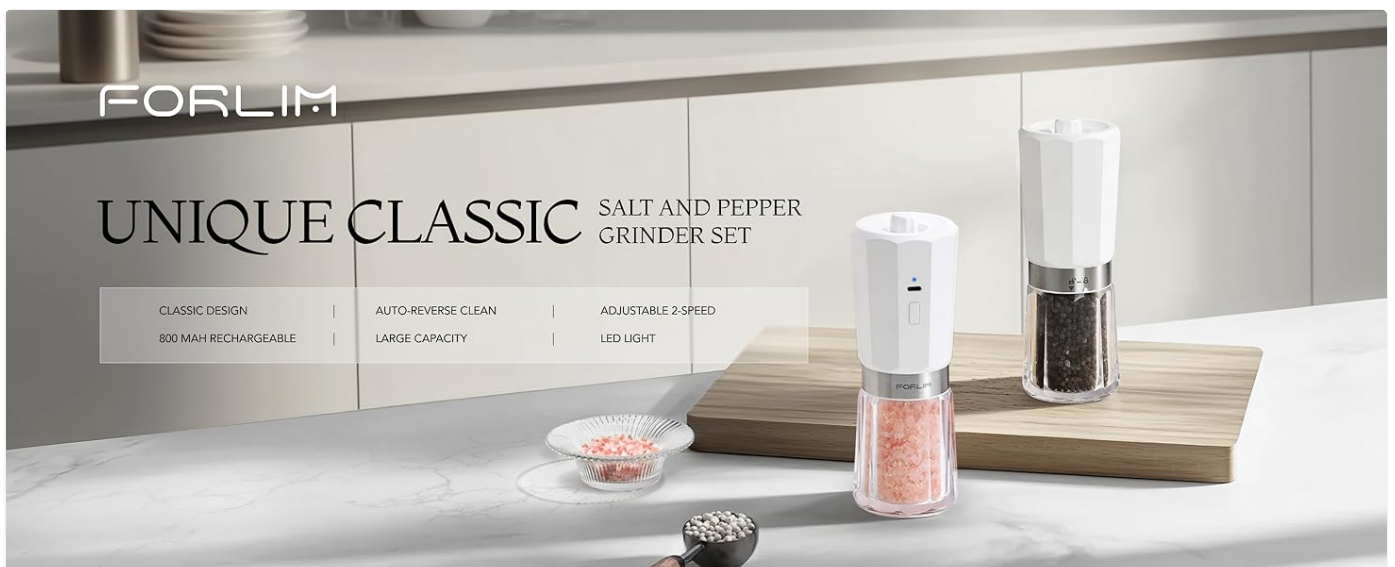 


Image: The FORLIM Electric Salt and Pepper Grinder Set, showcasing two grinder units, charging cables, and the user manual.

## SETUP

### 1. Charging the Grinder

Before first use, fully charge the grinder. Connect the provided USB charging cable to the charging port on the grinder and a suitable USB power source. The indicator light will show red during charging and turn blue when fully charged.

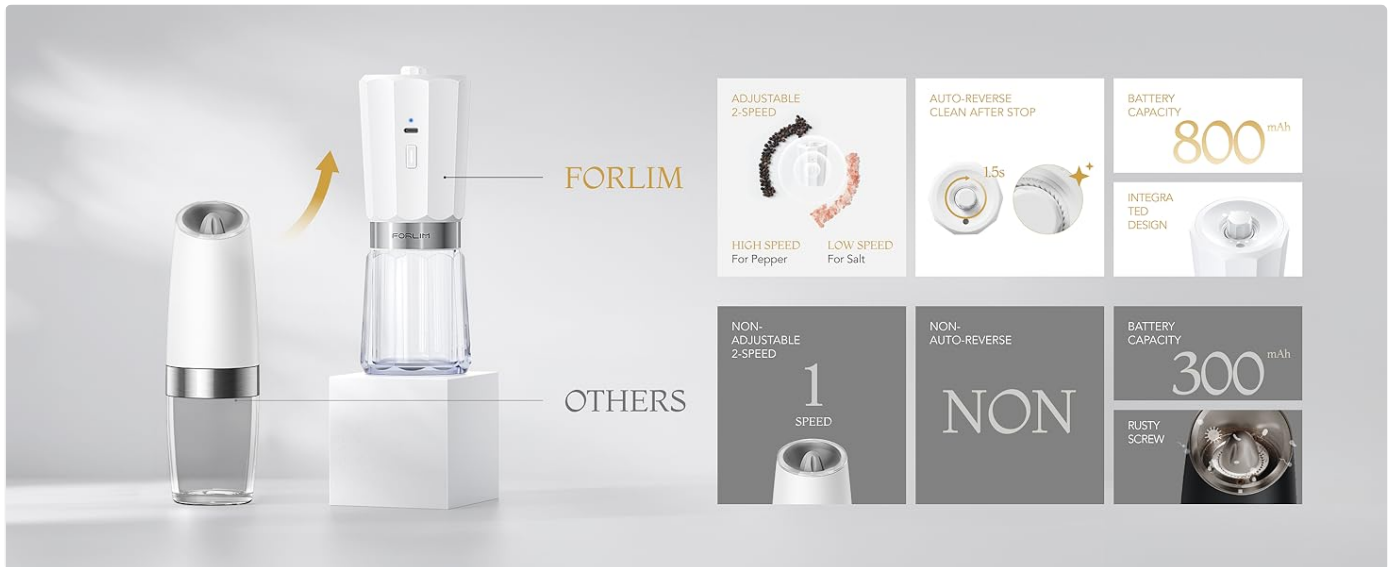 


Image: The grinder connected to a USB-C charging cable, illustrating the charging process and indicator light.

### 2. Filling the Grinder

1. Twist the transparent container counter-clockwise to detach it from the main body.
2. Fill the container with your desired spices (salt, pepper, etc.). Do not overfill.
3. Align the container with the main body and twist clockwise to secure it. Ensure it is locked firmly in place.



Image: A hand pouring pink Himalayan salt into the transparent container of the grinder, demonstrating the refilling process.

### 3. Adjusting Grinding Coarseness

The grinder features 5 levels of coarseness adjustment. Turn the adjustment knob located at the top of the grinder clockwise for finer grinds and counter-clockwise for coarser grinds. Adjust according to your preference for different spices.



Image: A detailed view of the top of the grinder, showing the adjustable knob for selecting grinding coarseness from coarse to fine.

## OPERATING INSTRUCTIONS

### 1. Gravity Sensor Operation

The grinder operates using gravity sensor technology. Simply tilt the grinder downwards to activate the grinding mechanism. It will automatically stop when returned to an upright position. No buttons need to be pressed during grinding.



Image: A hand holding the grinder tilted over food, demonstrating the gravity-activated grinding function.

### 2. Switching Grinding Speeds

The grinder offers two grinding speeds. To switch between speeds, press and hold the speed control button for 2 seconds. The indicator light will change color to reflect the current speed:

- **Green Light:** Slow Speed (suitable for salt)
- **Blue Light:** Fast Speed (suitable for pepper or other harder spices)

## LED LIGHTING INSTRUCTIONS

- Red: No Power / Charging
- Green: Slow-Speed
- Blue: Fast-Speed / Full Charged



Image: An illustration showing the grinder's dual grinding speeds, with green light indicating slow speed for salt and blue light for fast speed for pepper.

### 3. LED Indicator Light Meanings

- **Red Light:** Charging or Low Battery
- **Green Light:** Slow Speed
- **Blue Light:** Fast Speed or Charging Complete



Image: Three grinders demonstrating the different LED indicator light colors and their corresponding meanings for charging status and grinding speed.

## MAINTENANCE

### 1. Auto-Reverse Cleaning Function

The grinder is equipped with an automatic reverse cleaning function. After each grinding cycle, the grinding head will reverse for 1.5 seconds to clear any residual powder from the ceramic grinding core. This helps prevent blockages and maintains grinding efficiency.



Image: An illustration detailing the auto-reverse cleaning function, showing the grinding head reversing for 1.5 seconds to clear residue.

### 2. General Cleaning

To clean the grinder, detach the transparent container. Wipe the exterior of the grinder with a damp cloth. The transparent container can be rinsed with water. Ensure all parts are completely dry before reassembling. **Warning: The grinder is NOT dishwasher safe. Do not immerse the main body in water.**

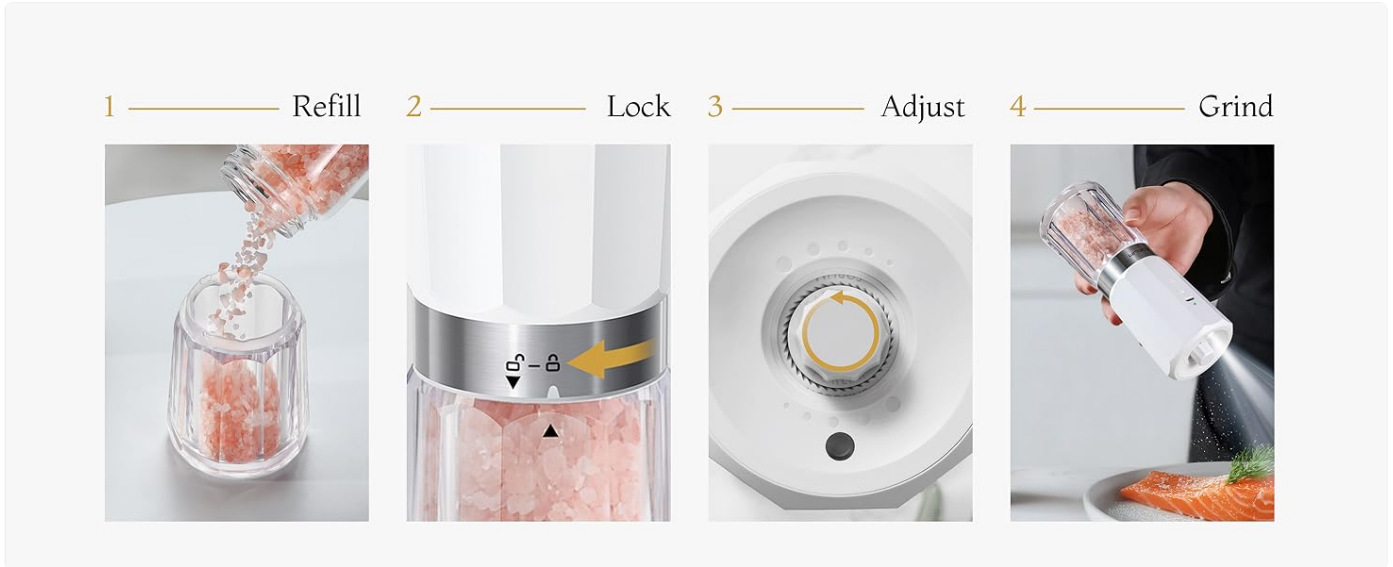


Image: The transparent container of the grinder being rinsed under water, indicating it is easy to clean.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not operate when tilted.	Low battery; container not securely attached; grinding core blocked.	Charge the grinder. Ensure the container is twisted firmly into place. Check for blockages in the grinding core and clear if necessary.
Grinding is inconsistent or stops.	Low battery; spice type unsuitable; grinding core blocked.	Recharge the grinder. Ensure you are using appropriate spices (e.g., whole peppercorns, coarse salt). Clear any blockages.
Indicator light is red after charging.	Grinder is still charging or battery is critically low.	Allow more time for charging. The light will turn blue when fully charged.

## SPECIFICATIONS

Feature	Detail
Brand	FORLIM
Model Number	SK1001-2W
Material	Plastic
Operation Mode	Automatic (Gravity Sensor)
Grinding Speeds	2 (Slow/Fast)
Battery Capacity	800mAh
Charging Type	USB
Grinding Core	Ceramic
Coarseness Levels	5
Dishwasher Safe	No

## WARRANTY AND SUPPORT

FORLIM provides a 12-month after-sale care period for this product. For any inquiries or support needs, our team is available for 24-hour assistance.

### Contacting Support:

If you require assistance, please follow these steps to contact the seller:

1. Go to the product page on Amazon.
2. Click on the "FORLIM-LINK-US" link (or similar seller name).
3. On the seller's page, click "Ask a question".
4. Select "Other" as the topic.
5. Enter your question or issue, and the FORLIM team will respond.



Image: A visual guide demonstrating the steps to contact FORLIM customer support through the Amazon platform.



