

[manuals.plus](#) /› [Uthfy](#) /› [Uthfy 26-Inch Wall Mount Oscillating Industrial Fan Instruction Manual](#)


## Uthfy FB-26

# Uthfy 26-Inch Wall Mount Oscillating Industrial Fan

Model: FB-26

## INTRODUCTION

Thank you for choosing the Uthfy 26-Inch Wall Mount Oscillating Industrial Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before installation and use, and retain it for future reference.

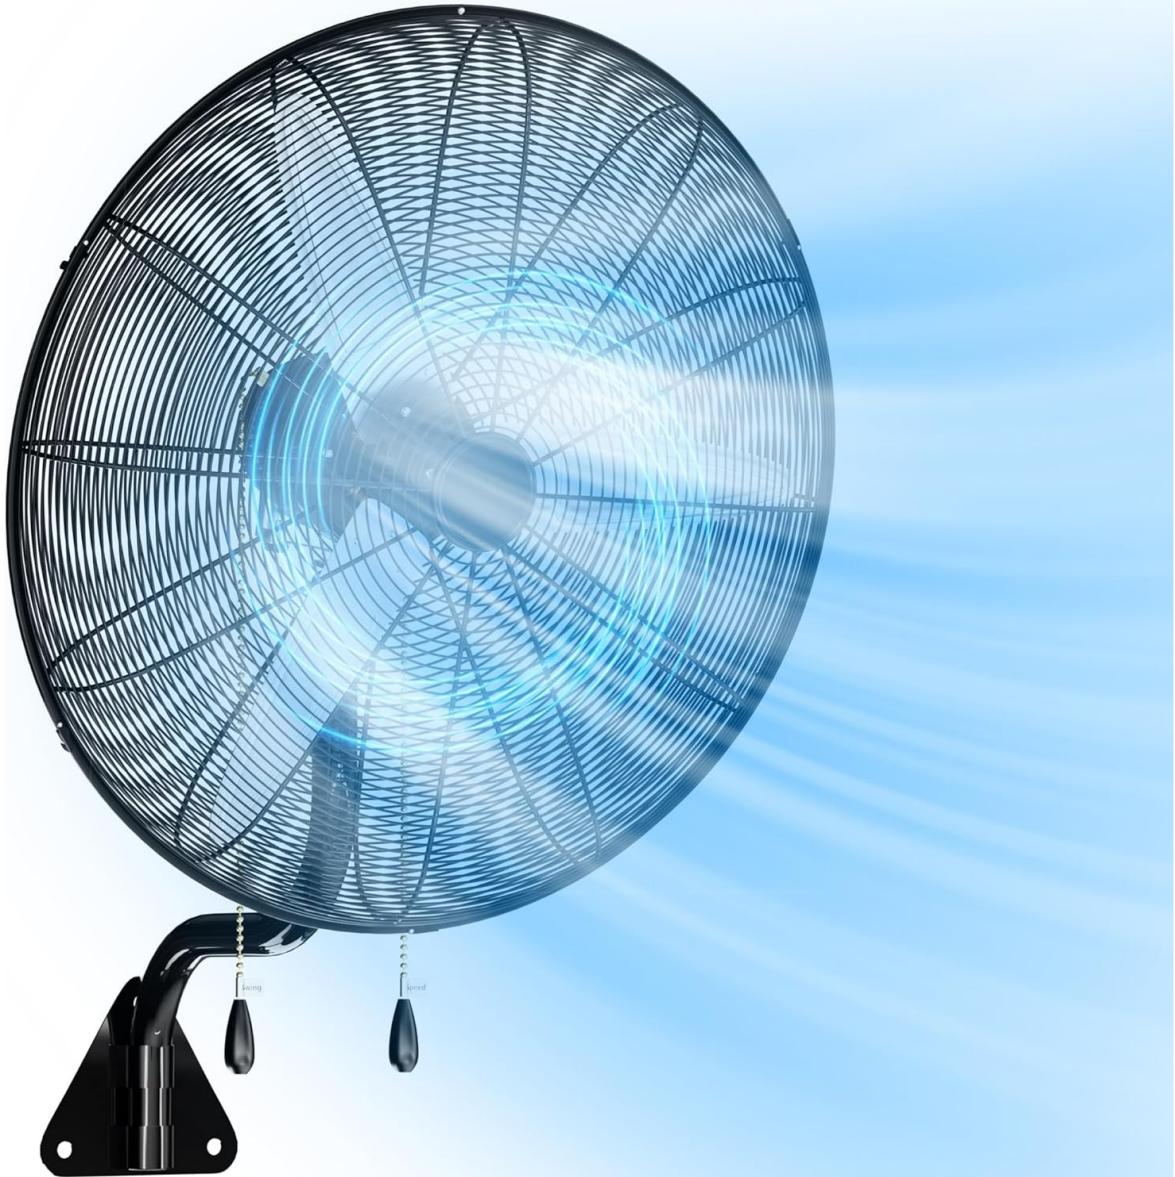

*Image: The Uthfy 26-inch wall mount oscillating industrial fan in operation, demonstrating powerful airflow.*

## SAFETY INFORMATION

- Always ensure the fan is securely mounted to a structurally sound wall or stud.
- Do not use for dry wall mounting without appropriate anchors.
- Keep fingers and other objects away from the fan blades and grille during operation.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug.
- This fan is designed for indoor use.

## PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Fan Motor Assembly

- Wall Mounting Bracket
- Fan Blades (3)
- Front and Rear Grilles
- Mounting Hardware (screws, washers, nuts)
- Instruction Manual

## SETUP AND INSTALLATION

Follow these steps for proper assembly and mounting of your Uthfy fan:

### 1. Mounting the Wall Bracket:

- Select a suitable location on a concrete wall or wood stud that can support the fan's weight and vibration.
- Position the wall mounting bracket and mark the drilling points.
- Drill holes and securely fasten the bracket to the wall using the provided hardware.


### 2. Assembling the Motor to the Bracket:

- Attach the motor's swivel bracket to the wall mounting bracket using the provided screws, washers, and nuts. Ensure all connections are tight.
- Adjust the tilt angle of the fan as needed using the triangular nut.

### 3. Attaching the Fan Grilles and Blade:

- Remove the four sets of half-round washers, spring washers, and flat nuts from the motor shaft.
- Set the rear grille onto the motor, aligning the grille port to the four bolts. Affix the washers and nuts, tightening them securely.
- Assemble the fan blade onto the motor shaft by tightening the two screws. Ensure the screws are tightly secured.
- Attach the front grille to the rear grille, ensuring all clips are securely fastened.

# Product Features & Fine Details

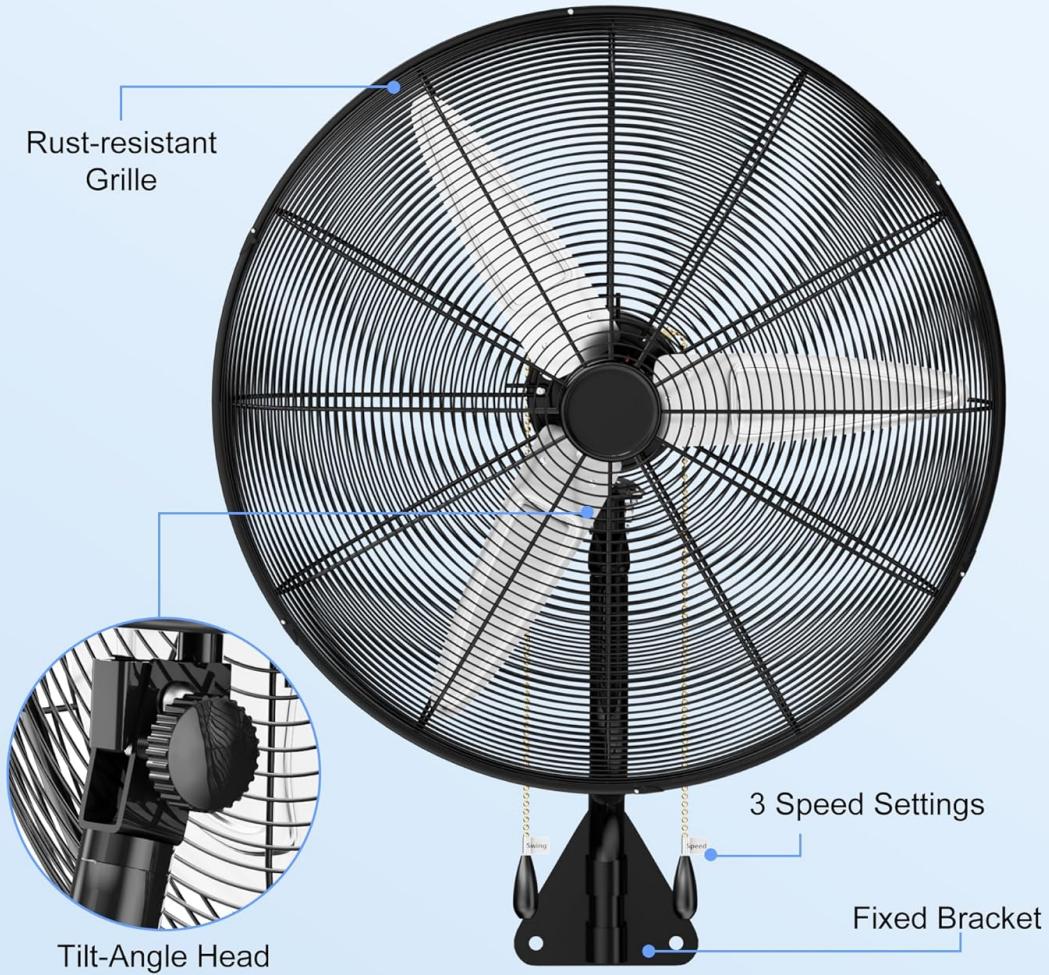

*Image: Detailed diagram illustrating the fan's components and assembly points, including the rust-resistant grille, tilt-angle head, 3-speed settings, and fixed bracket.*

## Installation Video Example

*Video: A seller-provided video demonstrating the installation process of a 20-inch wall mount fan, including mounting the bracket, assembling the motor, and attaching the fan components.*

## OPERATING INSTRUCTIONS

Your Uthfy fan is designed for ease of use with dual pull cord controls.

- Speed Selection:** Pull the chain to adjust between Low, Medium, and High-speed settings. The fan offers 9200 CFM on high, 8400 CFM on medium, and 7300 CFM on low.
- Oscillation Control:** Pull the second chain to start or stop the oscillation function. The fan provides wide-angle vertical and horizontal oscillation to distribute air evenly.
- Tilting Angle:** Manually adjust the fan head's tilt angle by loosening the triangular nut on the swivel bracket, setting the desired angle, and then re-tightening the nut.

## 3 Speeds with Enhanced, Powerful, and Distant Airflow



Image: Visual representation of the fan's three speed settings (Low, Medium, High) and their corresponding Cubic Feet Per Minute (CFM) airflow capacities.

## 80° Oscillation for Extensive and Immersive cooling



\*Delivers wide - spread, immersive cooling all around the space for a refreshing atmosphere

Image: Several Uthfy wall-mounted fans demonstrating 80° oscillation for extensive cooling in a large industrial space.

## Operation Video Examples

*Video: A seller-provided video showcasing the oscillation feature of an 18-inch wall mount fan.*

*Video: A seller-provided video demonstrating the general operation of a 24-inch wall mount fan.*

## MAINTENANCE

- **Cleaning:** Regularly wipe down the fan's exterior and blades with a soft, damp cloth. Ensure the fan is unplugged before cleaning.
- **Grille Cleaning:** The front grille can be removed for deeper cleaning of the blades. Follow the assembly instructions in reverse to remove and reattach.
- **Storage:** If storing the fan for an extended period, clean it thoroughly and store it in a dry, cool place.

## TROUBLESHOOTING

- **Fan does not turn on:**
  - Check if the power cord is securely plugged into a working outlet.
  - Ensure the pull cord for speed is engaged.
- **Weak airflow:**
  - Increase the speed setting using the pull cord.
  - Clean the fan blades and grilles to remove dust buildup.
- **Fan is not oscillating:**
  - Ensure the oscillation pull cord is engaged.

## SPECIFICATIONS

Feature	Detail
Brand	Uthfy
Model Name	FB-26
Size	26 Inch
Color	Black
Power Source	AC
Wattage	180 watts


Voltage	120 Volts
Air Flow Capacity	9200 Cubic Feet Per Minute
Noise Level	30 Decibels
Number of Power Levels	3
Special Feature	Oscillating
Installation Type	Wall Mount
Item Weight	15.65 Pounds
Product Dimensions	25.59"D x 40.94"W x 20.87"H

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Uthfy customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Uthfy. All rights reserved.

## Related Documents - FB-26

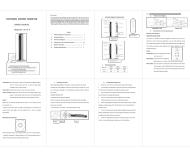	<p><a href="#"><u>Uthfy Electronic Control Tower Fan Owner's Manual - Model JTF-14-R</u></a></p> <p>This owner's manual provides detailed instructions for the Uthfy Electronic Control Tower Fan, Model JTF-14-R. It covers assembly, operation, technical specifications, maintenance, and safety guidelines for optimal use.</p>
	<p><a href="#"><u>Uthfy JDAC75 JDAC75R Air Cooler Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the Uthfy JDAC75 and JDAC75R evaporative air coolers. Includes details on operation, installation, technical specifications, safety precautions, and maintenance.</p>
	<p><a href="#"><u>Uthfy Tower PTC Heater User Guide and Safety Instructions</u></a></p> <p>Comprehensive user guide for the Uthfy Tower PTC Heater, including important safety instructions, operating procedures, troubleshooting tips, and customer care information. Learn how to use and maintain your electric heater safely and effectively.</p>

 <p>Tower Air Cooler Instruction manual ATF-015L</p>	<p><a href="#"><u>ATF-015L Tower Air Cooler Instruction Manual</u></a></p> <p>Instruction manual for the ATF-015L Tower Air Cooler, covering components, operation, safety precautions, and maintenance.</p>
	<p><a href="#"><u>Uthfy Air Cooler User Guide</u></a></p> <p>User guide for the Uthfy Air Cooler, model HY-66R. Learn about important safety instructions, how to use and clean your air cooler, and customer care information.</p>
	<p><a href="#"><u>JTF-803B Electronic Control Tower Fan Owner's Manual</u></a></p> <p>Owner's manual for the JTF-803B Electronic Control Tower Fan, including safety information, technical specifications, assembly instructions, operation instructions, and maintenance.</p>