

[Manuals.plus](#) /

› [Sundale Outdoor](#) /

› Sundale Outdoor 51 Inch Rectangle Propane Fire Pit Table (Model OIFT-003-GY) User Manual

Sundale Outdoor OIFT-003-GY

Sundale Outdoor 51 Inch Rectangle Propane Fire Pit Table

Model: OIFT-003-GY

IMPORTANT SAFETY INFORMATION

Read all instructions before assembly and use of this fire pit table. Failure to follow these instructions could result in property damage, bodily injury, or death.

- This appliance is for outdoor use only. Do not use indoors.
- Keep children and pets away from the fire pit table at all times.
- Ensure the fire pit is placed on a level, non-combustible surface.
- Maintain a safe distance from combustible materials.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Always turn off the gas supply at the propane tank when the fire pit is not in use.
- Do not attempt to light the burner if the gas is flowing but no flame is present. Turn off the gas and wait 5 minutes before attempting to re-light.
- This product is CSA Certified, ensuring it meets applicable safety standards.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Fire Pit Table Unit
- Glass Wind Guard
- Decorative Fire Crystals
- Removable Lid
- Weatherproof Dust Cover
- Assembly Hardware and Tools (if applicable)
- Instruction Manual

SPECIFICATIONS

Brand	Sundale Outdoor
Model Number	OIFT-003-GY
Material	Metal
Product Dimensions (D x W x H)	25.98" x 50.79" x 20.87"
Heat Output	50,000 BTU
Fuel Type	Liquefied Petroleum Gas (Propane)
Recommended Propane Tank Size	Standard 20-lb (under 18" diameter)
Certifications	CSA Certified

The fire pit table features a powder-coated steel frame with a metal-embossed woodgrain finish, designed for all-weather durability.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. Inspect for any damage. Follow the detailed assembly instructions provided in the separate assembly guide. Ensure all connections are secure before proceeding.

2. Propane Tank Connection

1. Locate the sliding tank holder mechanism on the side of the fire pit table.
2. Slide out the tank holder to access the propane tank compartment.
3. Place a standard 20-lb propane tank (not included) onto the holder. Ensure the tank is upright and stable.
4. Connect the regulator hose from the fire pit to the propane tank valve. Hand-tighten securely. Do not overtighten.
5. Push the sliding tank holder back into the fire pit table until it is fully closed and secured.
6. Perform a leak test: Apply a soapy water solution to all gas connections. Open the propane tank valve slowly. If bubbles appear, there is a leak. Close the tank valve immediately and re-tighten connections. Repeat the test. If leaks persist, do not use the fire pit and contact customer support.

Sliding Tank Holder

Safer and more convenient



Tank Holder



Safety Gas Valve



Stainless Steel Burner



Handle

The sliding tank holder provides easy access for propane tank installation and removal. The image also shows the safety gas valve and stainless steel burner.

Sliding Propane Tank Holder

Safer and more convenient



Tank Holder



Safety Gas Valve



Stainless Steel Burner



Handle

Detailed view of the sliding mechanism for the propane tank, designed for convenience and safety.

1. Initial Setup and Placement

Ensure the fire pit is positioned on a stable, non-combustible surface, away from any overhead obstructions or combustible materials. The glass wind guard should be placed around the burner area.



The fire pit table in operation, showcasing the flames within the glass wind guard and decorative fire crystals.

2. Lighting the Fire Pit

1. Ensure the control knob on the fire pit is in the 'OFF' position.
2. Slowly open the valve on the propane tank fully.
3. Push and hold the control knob in, then turn it counter-clockwise to the 'LOW' position.
4. While holding the knob in, press the igniter button repeatedly until the burner ignites. You should hear a clicking sound.
5. Once ignited, continue to hold the control knob in for 10-15 seconds to allow the thermocouple to heat up and engage the safety valve.

6. Release the control knob. If the flame goes out, repeat steps 3-5.



Close-up of the control panel showing the ignition button and flame adjustment knob, with indicators for high and low flame settings.



An external ignitor mechanism, used to light the propane burner.

3. Adjusting the Flame

Once lit, rotate the control knob to adjust the flame height and heat output as desired, from 'LOW' to 'HIGH'.

4. Shutting Down the Fire Pit

1. Turn the control knob on the fire pit clockwise to the 'OFF' position.
2. Close the valve on the propane tank fully.
3. Allow the fire pit to cool completely before covering or moving.

5. Converting to Coffee Table

When not in use as a fire pit, the included removable lid can be placed over the burner area to transform it into a functional coffee table. Ensure the burner is completely cool before placing the lid.



Fire Pit Table



Coffee Table

The fire pit table shown in both its fire pit configuration with flames and its coffee table configuration with the lid in place.

MAINTENANCE

1. Cleaning

- Ensure the fire pit is completely cool before cleaning.
- Wipe exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Clean the burner and fire crystals periodically to remove debris.
- The glass wind guard can be cleaned with glass cleaner.

2. Storage

- When not in use, especially during extended periods or inclement weather, cover the fire pit table with the provided weatherproof dust cover.
- Store the propane tank in a well-ventilated area, away from direct sunlight and heat sources. Do not store the propane tank indoors.

3. Inspections

- Regularly inspect the hose and connections for signs of wear, cuts, or leaks. Replace damaged parts immediately.
- Check the burner ports for any obstructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner will not light	• No gas flow • Igniter not sparking • Air in gas line	• Check propane tank valve is open and tank has gas. • Ensure control knob is pushed in and turned to 'LOW' during ignition. • Check igniter electrode for damage or obstruction. • Purge air from gas line by repeating lighting procedure several times.
Low flame or irregular flame pattern	• Low gas pressure • Obstructed burner ports • Excess flow safety device activated	• Check propane tank level. • Clean burner ports. • Turn off fire pit and propane tank, disconnect and reconnect regulator, then slowly open tank valve.
Flame goes out after releasing control knob	Thermocouple not heated sufficiently	Hold control knob in for 10-15 seconds after ignition to allow thermocouple to heat up.

If troubleshooting steps do not resolve the issue, contact customer support.

PRODUCT VIDEOS

Video: 51 Inch Fire Pit Table Overview. This video provides a general overview of the Sundale Outdoor 51 Inch Fire Pit Table, demonstrating its features and operation.

Video: 51 Inch Fire Pit Table Marketing Video. This video highlights various aspects and benefits of the 51-inch fire pit table, including its design and functionality.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Sundale Outdoor customer service directly. Keep your purchase receipt for warranty claims.

Manufacturer: Sundale Outdoor

Model Number: OIFT-003-GY