

Uthfy FB-30

Uthfy Wall Mount Oscillating Fan 30 Inch (Model FB-30) Instruction Manual

Your guide to safe and efficient operation

1. INTRODUCTION

Thank you for choosing the Uthfy 30-inch Wall Mount Oscillating Fan. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your fan. Please read it thoroughly before use and retain it for future reference.

This fan is designed to provide powerful airflow and circulation in various indoor environments, including garages, workshops, kitchens, and residential spaces. Its wall-mount design helps save floor space, and the dual pull cord controls offer convenient operation.

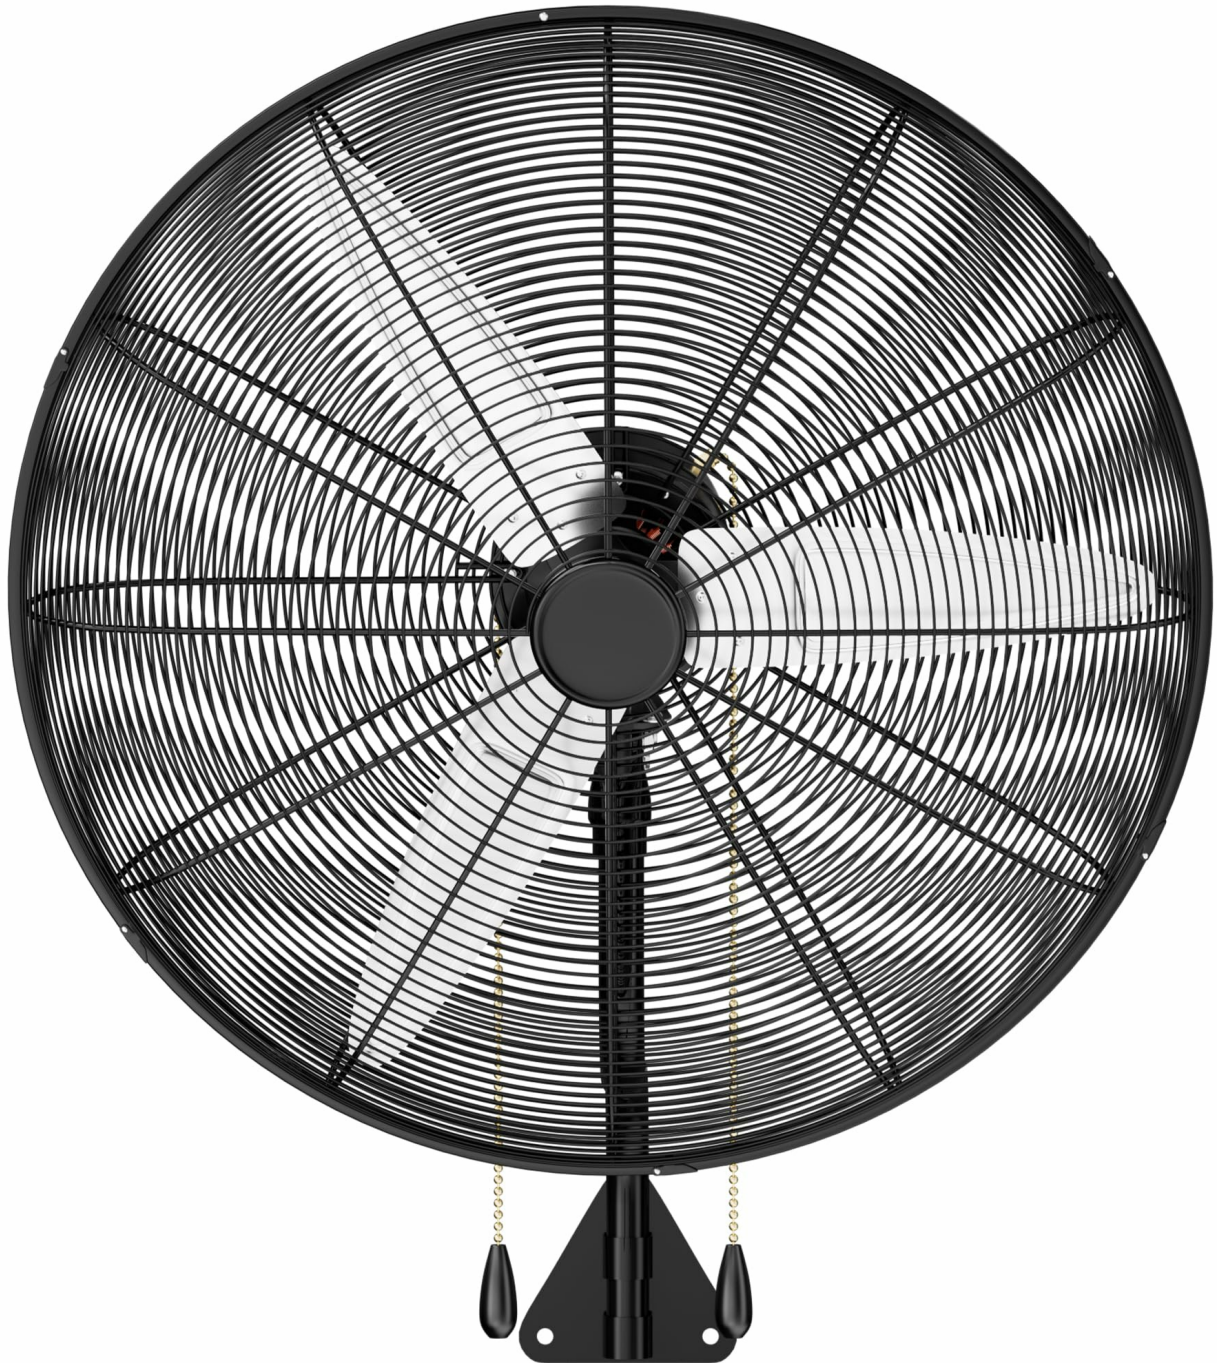


Image: Uthfy 30-inch wall mount oscillating fan in a workshop, demonstrating speed settings.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Read all instructions before using this fan.
- Always unplug the fan from the power outlet before cleaning, servicing, or when not in use.
- Do not operate any fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support for assistance.
- Do not run the power cord under carpeting or cover it with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children. Keep children away from the fan.

- Do not insert fingers or foreign objects into the grille openings or any other openings on the fan.
- Ensure the fan is placed on a stable, level surface or securely mounted to a wall to prevent tipping.
- Do not use this fan outdoors or in wet locations. It is designed for indoor use only.
- Do not use the fan near windows, where rain may come into contact with it.
- Do not operate the fan in areas where gasoline, paint, or flammable liquids are used or stored.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Uthfy 30-inch Wall Mount Oscillating Fan Head Assembly
- Wall Mounting Bracket
- Mounting Hardware (screws, anchors)
- Instruction Manual

If any items are missing or damaged, please contact Uthfy customer support.

4. SETUP AND INSTALLATION

The Uthfy Wall Mount Oscillating Fan is designed for easy installation. Ensure you have the necessary tools (e.g., drill, screwdriver, level) before beginning.

1. **Choose a Location:** Select a sturdy wall location that can support the fan's weight and allows for optimal airflow. Ensure there is a power outlet within reach of the fan's cord.
2. **Mark Drilling Points:** Hold the wall mounting bracket against the wall at the desired height and use a pencil to mark the drilling points for the mounting hardware.
3. **Drill Pilot Holes:** Drill pilot holes at the marked points. If mounting into drywall, use appropriate wall anchors.
4. **Attach Mounting Bracket:** Securely fasten the wall mounting bracket to the wall using the provided screws and anchors. Ensure it is level and firmly attached.
5. **Mount Fan Assembly:** Carefully lift the fan head assembly and attach it to the wall mounting bracket according to the bracket design. Ensure it clicks or locks into place securely.
6. **Adjust Tilt Angle:** Loosen the tilt-angle adjustment knob on the side of the fan to set the desired vertical angle, then tighten the knob to secure the fan in position.
7. **Connect Power:** Plug the fan's power cord into a standard 120V AC electrical outlet.



Stunningly Enormous Air Delivery

Generates a powerful gust of air to provide excellent cooling, making it the ultimate fit for large - sized areas

Image: Detailed view of fan components including tilt-angle head and pull cords.

Installation Video

Your browser does not support the video tag.

Video: Official product video demonstrating the features and operation of the Uthfy Wall Mount Fan, including its powerful airflow and oscillation.

5. OPERATING INSTRUCTIONS

Your Uthfy Wall Mount Fan features dual pull cord controls for easy adjustment of speed and oscillation.

- **Power and Speed Control:** One pull cord controls the fan's power and speed settings. Pull the cord repeatedly to cycle through the speeds: Off > Low > Medium > High > Off.

- **Oscillation Control:** The second pull cord controls the oscillation function. Pull the cord once to activate wide-angle oscillation, distributing air across a larger area. Pull it again to stop oscillation and direct airflow in a fixed direction.
- **Adjusting Airflow Direction:** In addition to oscillation, the fan head's tilt angle can be manually adjusted (as described in Setup) to direct airflow vertically.

90° Oscillation for Extensive and Immersive cooling



*Delivers wide - spread, immersive cooling all around the space for a refreshing atmosphere

Image: Fan demonstrating 90-degree oscillation for extensive cooling.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. For the grille, use a vacuum cleaner with a brush attachment or a soft brush to remove dust. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** If storing the fan for an extended period, cover it to protect it from dust. Store it in a cool, dry place.

- **Motor Lubrication:** The fan motor is permanently lubricated and requires no additional oiling.
- **Cord Inspection:** Periodically inspect the power cord and plug for any signs of damage. If damaged, do not use the fan and contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your Uthfy fan, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply Damaged power cord/plug	Ensure the fan is securely plugged into a working outlet. Check household circuit breaker. If cord/plug is damaged, do not use and contact support.
Weak airflow	Grille or blades are dirty Incorrect speed setting	Unplug and clean the grille and blades. Select a higher speed setting using the pull cord.
Fan is noisy	Loose parts Fan not securely mounted	Unplug the fan and check for any loose screws or components. Ensure the fan is securely mounted to the wall.
Oscillation not working	Oscillation mechanism issue	Ensure the oscillation pull cord has been activated. If the issue persists, contact customer support.

8. SPECIFICATIONS

Key technical specifications for the Uthfy 30-inch Wall Mount Oscillating Fan (Model FB-30):

Feature	Specification
Brand	Uthfy
Model Number	FB-30
Size	30 Inch
Air Flow Capacity	11200 CFM
Number of Speeds	3
Power Source	AC (120 volts)
Wattage	200 watts

Feature	Specification
Material	Metal
Mounting Type	Wall Mount
Special Feature	Oscillating
Item Weight	19.8 pounds
Product Dimensions (D x W x H)	31.5"D x 44.88"W x 20.87"H

Product Features & Fine Details

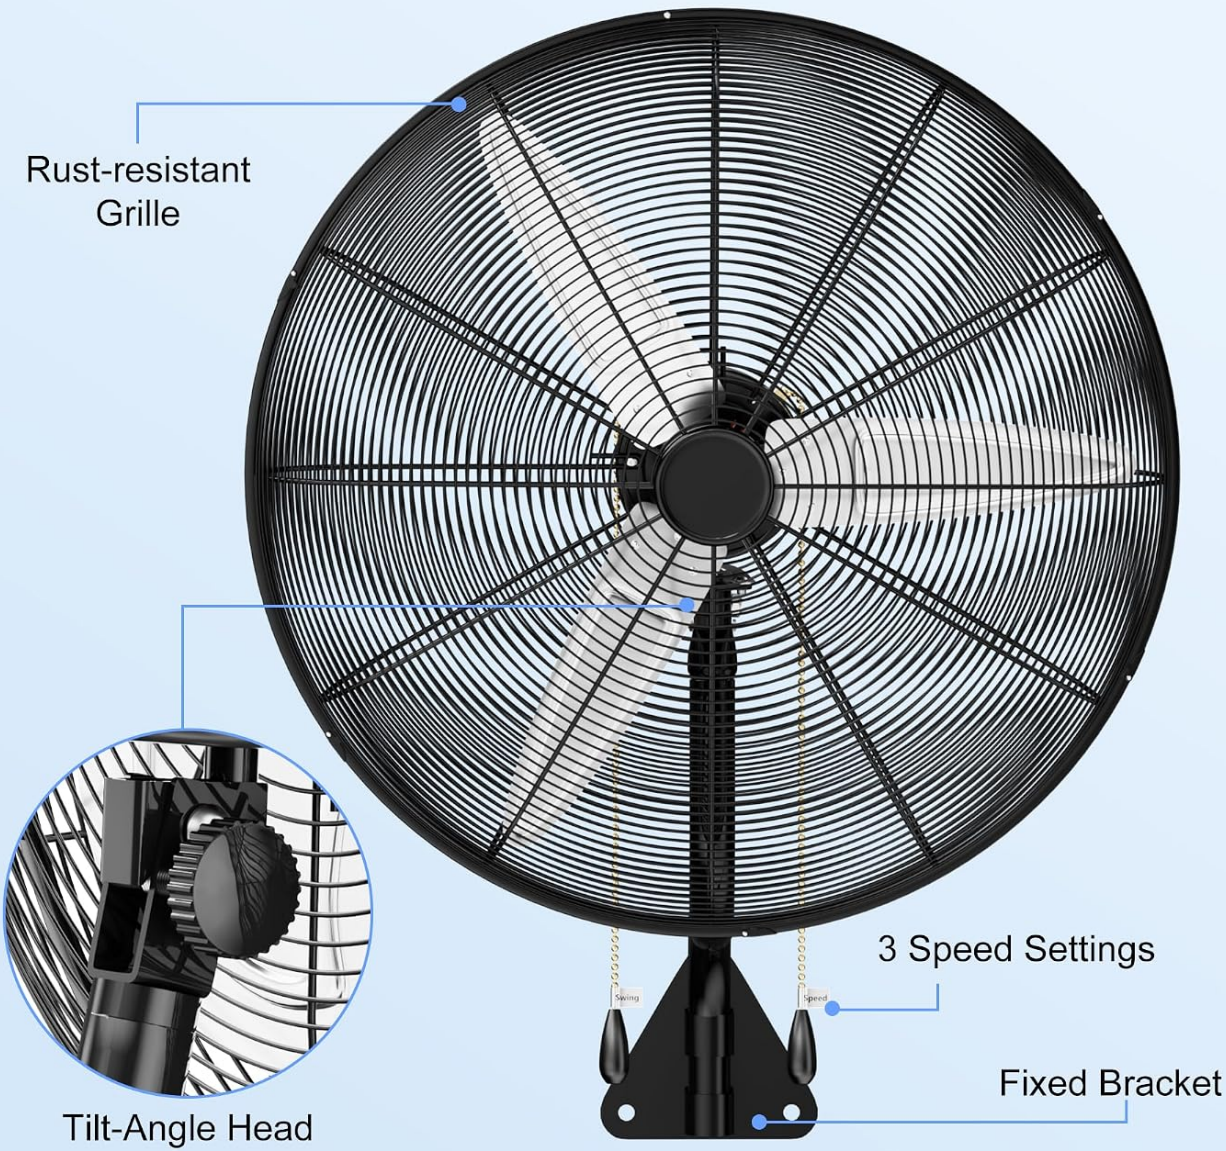


Image: Fan suitable for various indoor and commercial applications.

9. WARRANTY INFORMATION

Uthfy products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official Uthfy website. Keep your purchase receipt as proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to report a problem with your Uthfy Wall Mount Oscillating Fan, please contact our customer support team. Contact information can typically be found on the product packaging, the official Uthfy website, or your purchase documentation.

Please have your model number (FB-30) and purchase date ready when contacting support.

© 2026 Uthfy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question