

[Manuals.plus](#) /

› [LANCHEZ](#) /

› LANCHEZ Pressure Washer KLC-T2-GN-RED User Manual

LANCHEZ KLC-T2-GN-RED

LANCHEZ Pressure Washer KLC-T2-GN-RED User Manual

Model: KLC-T2-GN-RED | Brand: LANCHEZ

1. INTRODUCTION

Thank you for choosing the LANCHEZ Pressure Washer KLC-T2-GN-RED. This electric pressure washer is designed for efficient and powerful cleaning of various outdoor surfaces, including cars, patios, decks, fences, and driveways. With a maximum pressure of 4800 PSI and a flow rate of 2.8 GPM, it provides effective stain removal and general cleaning capabilities. Please read this manual thoroughly before operation to ensure safe and proper use, and retain it for future reference.

Your browser does not support the video tag.

Video: Overview of the LANCHEZ Pressure Washer KLC-T2-GN-RED in action, demonstrating its quick connect features, various nozzles, and cleaning power on different surfaces like cars and wooden decks. This video highlights the ease of assembly and effective stain removal.

2. SAFETY INFORMATION

Always observe basic safety precautions when using this product to reduce the risk of injury, electric shock, or fire. Failure to follow these instructions may result in serious injury or property damage.

- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the pressure washer with damaged cords or plugs. Keep all connections dry and off the ground.
- **Water Connection:** Connect the pressure washer to a cold water supply only. Do not use with hot water. Ensure all water connections are tight to prevent leaks.
- **High Pressure Hazard:** The high-pressure stream can cause serious injury. Never direct the spray at people, pets, or electrical devices. Always point the nozzle away from yourself and others when starting.
- **Personal Protective Equipment:** Always wear appropriate eye protection (safety glasses or goggles), hearing protection, and protective clothing (gloves, long pants, closed-toe shoes) during operation.
- **Stability:** Operate the pressure washer on a stable, level surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the operating area.

- **Chemicals:** Use only pressure washer safe detergents. Follow detergent manufacturer's instructions for use and disposal.
- **Storage:** Disconnect from power and water supply after use. Store in a dry, frost-free area.

3. PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present and undamaged. Refer to the diagram below for identification of parts.



Image: A detailed diagram illustrating the various components of the LANCHEZ Pressure Washer, including the main unit, spray gun, nozzles, hoses, and foam cannon.

1. Spray Gun Holder
2. Spray Gun
3. Start Switch
4. Water Outlet
5. Power Cord Hook
6. Power Cord
7. Wear-resistant Wheels
8. 4 Adjustable Nozzles (Quick Connect)
9. Connector
10. Filter
11. Inlet Hose
12. High Pressure Hose
13. Foam Cannon
14. Water Inlet
15. Universal Nozzle Wand
16. Turbo Nozzle Wand

4. SETUP AND ASSEMBLY

Follow these steps to assemble your pressure washer before first use.



Image: A visual guide demonstrating the six key steps for assembling the pressure washer, including handle installation, hose connections, and gun attachment.

1. **Install Handle:** Attach the handle to the main unit and tighten the screws securely.
2. **Quick Insertion (No Need to Rotate):** Insert the high-pressure hose into the spray gun.
3. **Insert and Rotate Gun:** Connect the spray gun to the main unit by inserting and rotating until it locks into place.
4. **Insert Hose Into Outlet:** Connect the high-pressure hose to the water outlet on the pressure washer.
5. **Install Inlet Hose:** Connect your garden hose (inlet hose) to the water inlet on the pressure washer. Ensure the filter is in place.
6. **Rotate Switch:** Ensure the power switch is in the 'OFF' position before connecting to power.

5. OPERATING INSTRUCTIONS

5.1 Connecting Water and Power

- Connect the garden hose to a water faucet and turn on the water supply fully.
- Ensure all connections are secure and leak-free.
- Plug the power cord into a grounded electrical outlet.

5.2 Nozzle Selection and Use

The LANCHEZ Pressure Washer comes with 4 quick-connect nozzles, a universal nozzle wand, and a turbo nozzle wand, each designed for specific cleaning tasks.



Image: Visual representation of the four basic quick-connect nozzles (0°, 15°, 25°, 40°) and their respective spray patterns.

- **0° Red Nozzle (Powerful Jet):** Delivers a concentrated, high-pressure stream for stubborn stains and hard-to-reach areas. Use with caution on delicate surfaces.




Description: The 0° red nozzle producing a powerful, concentrated jet, ideal for removing tough dirt from cracks, footpaths, and metal surfaces.

- **15° Yellow Nozzle (Focused Cleaning):** Provides a 15-degree fan spray for intensive cleaning of smaller areas. Suitable for concrete, asphalt, and brick.



Description: The 15° yellow nozzle creating a focused fan spray, effective for cleaning concrete, asphalt, and brick surfaces.

- **25° Green Nozzle (General Use):** Offers a 25-degree fan spray for general cleaning of most surfaces. Ideal for decks, fences, and terraces.

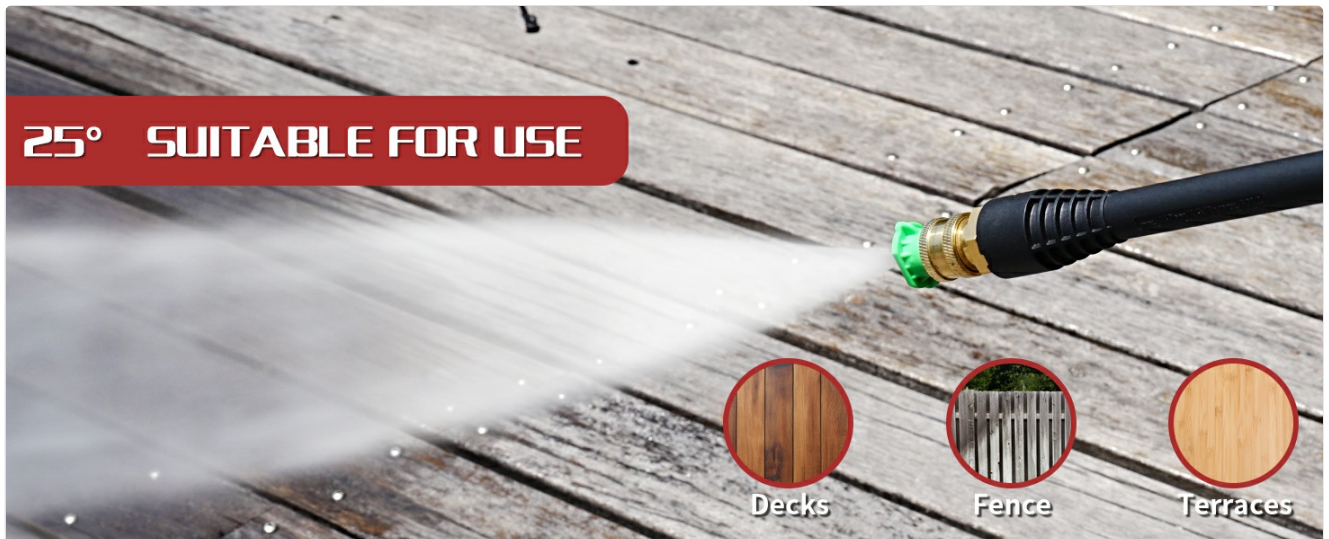

Description: The 25° green nozzle providing a wider fan spray, suitable for cleaning decks, fences, and terraces.

- **40° White Nozzle (Gentle Cleaning):** Produces a wide 40-degree fan spray for gentle cleaning of delicate surfaces. Good for vehicles, windows, and outdoor furniture.



Description: The 40° white nozzle delivering a broad, gentle spray, perfect for cleaning vehicles, windows, and outdoor furniture.

- **Universal Nozzle Wand:** Offers a 360° rotating spray for reaching difficult angles and corners, such as car undercarriages.



Description: The universal nozzle wand demonstrating its 360° rotating spray, useful for cleaning car corners and hard-to-reach areas.

- **Turbo Nozzle Wand:** Provides a powerful, oscillating jet for heavy-duty cleaning and removing tough grime from concrete, sidewalks, and lawns.

PRODUCT DETAILS

- | | |
|--------------------------|------------------------|
| 1 Spray Gun Holder | 2 Spray Gun |
| 3 Start Switch | 4 Water Outlet |
| 5 Power Cord Hook | 6 Power Cord |
| 7 Wear-resistant Wheels | 8 4 Adjustable Nozzles |
| 9 Connector | 10 Filter |
| 11 Inlet Hose | 12 High Pressure Hose |
| 13 Foam Cannon | 14 Water Inlet |
| 15 Universal Nozzle Wand | 16 Turbo Nozzle Wand |



Description: The turbo nozzle wand creating a powerful, rotating stream, ideal for cleaning concrete, sidewalks, and lawns.

5.3 Using the Foam Cannon

The included foam cannon allows for direct application of detergent, enhancing cleaning effectiveness, especially for vehicles.

Siphon Hose and Filter

Configurable water inlet options



Pure Copper Power Motor
Work for 3000+ hours and 4500 PSI



Large Wheel

Anti-tip Designs Ensure Stability



Unlocked
Latched

Safety Lock

Accidental Trigger Prevention

Image: The foam cannon attached to the spray gun, demonstrating direct foam spray onto a car surface.

1. Fill the foam cannon reservoir with appropriate pressure washer detergent.
2. Attach the foam cannon to the spray gun.
3. Activate the pressure washer and spray foam onto the desired surface.
4. Allow the foam to dwell for a few minutes (refer to detergent instructions), then rinse thoroughly with a suitable nozzle.

5.4 Starting and Stopping

- **To Start:** Ensure water supply is on and the unit is plugged in. Turn the Start Switch to the 'ON' position. Squeeze the trigger on the spray gun to begin spraying.
- **To Stop:** Release the trigger on the spray gun. The motor will stop automatically. For prolonged stops, turn the Start Switch to 'OFF' and disconnect from power.



Image: A person using the LANCHEZ Pressure Washer to clean a car, demonstrating the effectiveness of the tool.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Nozzle Cleaning:** If a nozzle becomes clogged, use the included nozzle cleaning tool to clear any debris.
- **Water Filter:** Periodically check and clean the water inlet filter to prevent debris from entering the pump.
- **Draining Water:** After each use, disconnect the water supply and run the pressure washer for a few seconds to drain any remaining water from the pump and hoses. This is crucial to prevent freezing damage in cold weather.
- **Storage:** Store the pressure washer in a dry, covered, and frost-free area. Coil hoses neatly and store accessories in their designated holders.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in; Power switch OFF; Circuit breaker tripped	Plug in cord; Turn switch ON; Reset circuit breaker
No pressure or low pressure	Water supply OFF; Inlet filter clogged; Nozzle clogged; Air in pump	Turn on water; Clean filter; Clean nozzle; Squeeze trigger to purge air
Water leaks	Loose connections; Damaged O-rings	Tighten connections; Replace O-rings
Motor stops during operation	Overheating; Low voltage	Allow to cool; Check power supply

8. SPECIFICATIONS

Key technical specifications for the LANCHEZ Pressure Washer KLC-T2-GN-RED.

- **Brand:** LANCHEZ

- **Model Number:** KLC-T2-GN-RED
- **Maximum Pressure:** 4800 Pound per Square Inch (PSI)
- **Maximum Flow Rate:** 2.8 Gallons Per Minute (GPM)
- **Product Dimensions (L x W x H):** 12.2" x 16.9" x 16.5"
- **Color:** Red
- **Unit Count:** 1.0 Count

9. WARRANTY AND SUPPORT

LANCHEZ is committed to providing quality products and excellent customer service.



Image: An image detailing LANCHEZ's commitment to quality, official warranty, and 24/7 customer service.

- **Quality Assured:** All LANCHEZ products are professionally tested in the factory to ensure high standards.
- **Official Warranty:** Your purchase includes a complimentary returns and exchange policy. Please refer to the product packaging or official website for specific warranty terms and conditions.
- **24/7 Customer Service:** For any questions, concerns, or assistance, our customer service team is available 24/7. Please contact us through the retailer's platform or visit the official LANCHEZ store for support.

For more information about LANCHEZ products and support, please visit our [official brand store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F6CJBMQK>

More documents and user manuals: <https://manuals.plus/>