



[Manuals.plus](#) /

> [Teenpull](#) /

> Teenpull Green Outdoor Parasol 78.7" x 59.1" Instruction Manual

Teenpull B0F6CK16VG

Teenpull Green Outdoor Parasol Instruction Manual

Model: B0F6CK16VG

INTRODUCTION AND SAFETY INFORMATION

Thank you for purchasing the Teenpull Green Outdoor Parasol. This manual provides essential instructions for the safe assembly, operation, and maintenance of your new parasol. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Warnings:

- Always ensure the parasol is securely anchored in a stable base (not included) before use.
- Do not use the parasol in strong winds, heavy rain, or other severe weather conditions. High winds can cause damage to the parasol and potential injury.
- Close and secure the parasol when not in use or when unattended.
- Keep children and pets away from the parasol during assembly and operation.
- Avoid placing the parasol near open flames or heat sources.
- Regularly inspect all parts for wear and tear. Do not use if any components are damaged.

SETUP INSTRUCTIONS

Assembly of this garden parasol is straightforward and typically requires one person and a screwdriver.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present according to the packing list (not provided in this manual, refer to product packaging).
2. **Assemble the Pole:** Connect the upper and lower sections of the aluminum pole. Ensure they are securely fastened.
3. **Attach Canopy to Pole:** Carefully attach the parasol canopy frame to the top section of the pole. Ensure all locking mechanisms or screws are tightened.
4. **Insert into Base:** Place the assembled parasol pole into a suitable, heavy-duty parasol base (not

included). Ensure the base is stable and capable of supporting the parasol's weight and dimensions.



Image: Fully assembled green outdoor parasol, ready for use in a patio setting.



Image: Close-up view of the canopy frame connection point to the main pole, showing the sturdy construction.

OPERATING INSTRUCTIONS

Your parasol features adjustable height and a rotatable canopy for optimal shade positioning.

Opening and Closing the Parasol:

- To open, gently push the canopy upwards until it locks into place.
- To close, locate the release mechanism (often a button or lever on the pole) and carefully lower the canopy.

Adjusting Height:

The parasol's height can be adjusted from approximately 41.3 inches to 84.6 inches.

1. Locate the height adjustment knob or clamp on the main pole.
2. Loosen the knob/clamp to allow the upper pole to slide.
3. Adjust the parasol to your desired height.
4. Tighten the knob/clamp securely to lock the height in position.



Image: Illustration showing the height adjustment feature of the parasol pole with arrows indicating vertical movement.



Image: Close-up of the 'UP' and 'DOWN' labeled knob used for adjusting the parasol's height.

Rotating the Canopy:

The canopy can be rotated 180 degrees to follow the sun's movement.

- Gently rotate the canopy section around the main pole to achieve the desired angle of shade.
- Ensure the rotation is smooth and does not encounter any obstructions.



Image: Illustration demonstrating the 180-degree rotation capability of the parasol canopy, showing its movement from one side to the other.

MAINTENANCE

Proper care will extend the life and appearance of your parasol.

Cleaning:

- **Canopy:** The polyester fabric is fade-resistant and UV-resistant. Clean with a soft brush or cloth, mild soap, and lukewarm water. Rinse thoroughly and allow to air dry completely before closing or storing. Do not use harsh chemicals or abrasive cleaners.
- **Frame:** Wipe the aluminum pole and frame with a damp cloth. Dry thoroughly to prevent water spots.

Storage:

- When not in use for extended periods, especially during off-season or inclement weather, close the parasol and store it in a dry, protected area.
- Consider using a protective cover (not included) to shield the parasol from dust, dirt, and prolonged sun exposure.

TROUBLESHOOTING

If you encounter issues with your parasol, refer to the following common solutions:

Problem	Possible Cause	Solution
Parasol does not open/close smoothly.	Obstruction in mechanism; dirt/debris; lack of lubrication.	Check for any visible obstructions. Clean the mechanism. Apply a silicone-based lubricant to moving parts if necessary.
Parasol feels unstable.	Inadequate base; loose pole connection; strong winds.	Ensure the parasol base is sufficiently heavy and stable for the parasol's size. Tighten all pole connections. Do not use in windy conditions.
Canopy fabric appears dirty or stained.	Environmental exposure; spills.	Clean the canopy as per the 'Maintenance' section using mild soap and water.

PRODUCT SPECIFICATIONS

- **Model:** B0F6CK16VG
- **Color:** Green
- **Shape:** Rectangular
- **Canopy Material:** Fade-resistant and UV-resistant Polyester Fabric
- **Frame Material:** Aluminum
- **Overall Dimensions (W x L x H):** 200 x 200 x 215 cm (approximately 78.7" x 78.7" x 84.6")
- **Adjustable Height Range:** 41.3 - 84.6 inches
- **Pole Diameter:** 2.2 cm
- **Rotatable Function:** 180 degrees
- **Assembly Required:** Yes
- **Recommended Assembly Persons:** 1
- **Weight:** 265 kg (Note: This weight is unusually high for a parasol and may be a data entry error. Please handle with care and verify actual product weight upon receipt.)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Teenpull

Brand: Teenpull

