

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tecnock](#) /

› [Tecnock Amphibious Remote Control Car Boat \(Model S8912A\) Instruction Manual](#)

Tecnock S8912A

Tecnock Amphibious Remote Control Car Boat

Model: S8912A

Manufacturer: Tecnock

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Tecnock Amphibious Remote Control Car Boat. Please read these instructions thoroughly before use and retain them for future reference.



The Tecnock Amphibious Remote Control Car Boat, showcasing its dual control options.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Amphibious Stunt Car
- 1 x Remote Controller
- 1 x Gesture Watch Band
- 1 x 3.7V 1200mAh Lithium Battery (built-in)
- 1 x Magnetic Charging Cable
- 1 x Screwdriver
- 1 x User Manual (this document)



All components included in the Tecnock Amphibious Remote Control Car Boat package.

SETUP

1. Car Battery Installation & Charging

The car features a built-in 3.7V 1200mAh lithium battery. To charge the car:

1. Locate the magnetic charging port on the car.
2. Connect the magnetic charging cable to the port.
3. Plug the USB end of the cable into a compatible USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the cable will show charging status. Ensure the battery is fully charged before first use for optimal performance.

SAY GOODBYE TO BATTERY HASSLES & WATER DAMAGE



Magnetic charging port for easy and safe battery charging.

2. Remote Controller Battery Installation

The remote controller requires 2 C batteries (included). To install:

1. Use the provided screwdriver to open the battery compartment on the back of the remote controller.
2. Insert 2 C batteries, ensuring correct polarity (+/-).
3. Close the battery compartment and secure it with the screw.

3. Gesture Watch Band Charging

The gesture watch band has its own rechargeable battery. Use the provided charging cable to charge it via a USB power source.

4. Pairing the Devices

To pair the car with either the remote controller or the gesture watch band:

1. Ensure the car's battery is charged and the car is powered ON.
2. Turn ON the remote controller or the gesture watch band.
3. The devices should automatically pair. If pairing fails, turn both devices OFF and ON again.

OPERATING INSTRUCTIONS

1. Dual Control Modes

Your Tecnock Amphibious RC Car offers two control methods:

- **Standard Remote Control:** Use the traditional joystick remote for precise control.
- **Hand Gesture Sensing:** Attach the remote to the wristband and control the car with hand movements.

Switching between modes is done with a single button on the remote, requiring no re-pairing.



The two control methods: standard remote and gesture sensing.

2. Amphibious Operation

This RC car is designed for both land and water use. Its sealed, waterproof design ensures smooth driving through various environments.

- **On Land:** Drive on grass, concrete, sand, or other outdoor surfaces.
- **In Water:** Operate in shallow water, pools, or puddles. The unique wheel design provides propulsion in water.



The car's amphibious design allows it to conquer both land and water.

3. Stunt Features & LED Lights

The car is capable of various stunts and features dynamic LED lighting:

- **360° Spins:** Perform exciting rotations with ease.
- **Side Flips:** Execute impressive side-to-side maneuvers.
- **Colorful LED Lights:** Equipped with dynamic, multicolor LED lights that enhance visibility and excitement, especially in low-light conditions.



Dynamic LED lights add excitement to playtime, day or night.

4. Official Product Videos

Your browser does not support the video tag.

Official Tecnock video demonstrating the remote control stunt car's features and movements.

Your browser does not support the video tag.

Official Tecnock video highlighting the amphibious capabilities and magnetic charging of the RC car.

MAINTENANCE

1. Cleaning

After use, especially after playing in water or dirt, clean the car with a damp cloth. Avoid using harsh chemicals or abrasive materials. Ensure all water is drained and the car is dry before storage.

2. Water Drainage

Although waterproof, it is good practice to gently shake the car to remove any trapped water after water play. Ensure the charging port cover is securely closed during water use.

3. Storage

Store the car and its accessories in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from the remote controller if not in use for extended periods.

TROUBLESHOOTING

- **Car not responding:** Ensure both the car and controller/watch are powered on and fully charged. Re-pair the devices if necessary.
- **Poor performance:** Check battery levels. Ensure the play surface is suitable (avoid excessively deep water or thick mud).
- **Lights not working:** Verify the car is powered on. If issues persist, contact customer support.

SPECIFICATIONS

- **Product Dimensions:** 6.69 x 6.69 x 2.76 inches
- **Item Weight:** 1.1 pounds
- **Item Model Number:** S8912A
- **Manufacturer Recommended Age:** 6 - 10 years
- **Car Battery:** 3.7V 1200mAh Lithium (built-in, rechargeable)
- **Remote Controller Batteries:** 2 C batteries (included)
- **Control Frequency:** 2.4GHz
- **Playtime:** Up to 60 minutes on a single charge

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Tecnock website. Keep your purchase receipt as proof of purchase.