



[Manuals.plus](#) /

› [Fodoss](#) /

› Fodoss 47x71inch Baby Playpen Instruction Manual

Fodoss 47x71inch

Fodoss 47x71inch Baby Playpen Instruction Manual

Model: 47x71inch

INTRODUCTION

Thank you for choosing the Fodoss 47x71inch Baby Playpen. This playpen is designed to provide a safe and spacious environment for your baby to play and explore. Its generous size can comfortably accommodate two babies, offering ample room for activities. The design prioritizes safety, ease of assembly, and convenient interaction between parent and child.

SAFETY INFORMATION

Always ensure the playpen is assembled correctly and all components are securely fastened before placing a child inside. Regularly inspect the playpen for any signs of wear or damage. Do not leave children unattended in the playpen. The playpen features a thickened foam upper fabric cover to provide cushioning and reduce impact in case of accidental bumps. It has passed U.S. CPSIA testing, confirming its safe material composition suitable for baby use. The bottom of the playpen is equipped with four suction cups designed to firmly attach to the floor, preventing accidental overturning on surfaces like wood or tile.



Image: Two babies inside the Fodoss playpen, highlighting its non-toxic, BPA-free, and lead-content-safe materials, along with ventilation and a 26-inch height.



Image: Icons emphasizing the playpen's secure, stable, and health-conscious design, shown with a baby and parent outdoors.

SETUP INSTRUCTIONS

The Fodoss 47x71inch Baby Playpen is designed for straightforward assembly, typically taking around 20 minutes. The assembly involves 30 pipes of the same length, simplifying the process.

Components Overview



Image: An illustration detailing the various components included for playpen assembly, such as pipes, joints, pulling rings, and the main fabric.

Assembly Steps

1. Unpack all components and lay out the fence cloth on a clean, flat surface.
2. Identify the 30 pipes of the same length (420mm) and the various joints (Upper, T-Shaped, Bottom).
3. Insert the pipes into the designated sleeves along the bottom perimeter of the playpen fabric.
4. Connect the bottom joints, which include suction cups, to the pipes at each corner of the base.
5. Insert the vertical pipes into the bottom joints and through the fabric sleeves to form the upright structure.
6. Attach the T-shaped joints to the top of the vertical pipes, then connect the horizontal pipes to these T-shaped joints to form the top frame.
7. Secure the upper joints at the top corners.
8. Ensure all connections are firm and the fabric is taut. The thickened foam upper fabric cover should be properly positioned over the top rails.
9. Verify that the four suction cups at the base are firmly attached to the floor for maximum stability.

Your browser does not support the video tag.

Video: A demonstration of the easy-to-install Fodoss Baby Playpen, showing the step-by-step assembly process.

OPERATING INSTRUCTIONS

The Fodoss playpen is designed for daily use, offering a secure and interactive play space for your child.

Access and Interaction

- **Zipper Door:** The playpen features a convenient zipper door, allowing easy entry and exit for both children and adults. This design eliminates the need to lift children over the sides, reducing strain.
- **Mesh Sides:** All four sides of the playpen are constructed with mesh material, providing excellent visibility. This allows parents to easily monitor their child and interact with them at any time, fostering a sense of connection and security.

Comfort and Safety Features


- **Thickened Foam Cover:** The upper rails of the playpen are covered with a thickened foam fabric, making them softer. This design increases cushioning and reduces potential discomfort if a child bumps against the sides.
- **Storage Pocket:** An external storage pocket is included on the side of the playpen, providing a convenient space to keep diapers, wipes, or small toys readily accessible.
- **Pulling Rings:** The playpen includes pulling rings that can be attached to the top rail, encouraging babies to practice standing and develop their motor skills.



Stable playpen, baby can't climb out



360° mesh, interact with baby at any time

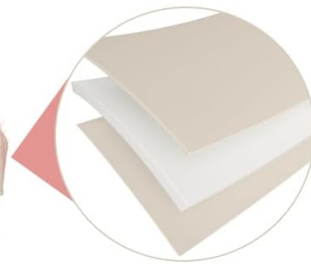

Soft cloth cover cushioning any pain

Image: Demonstrates the playpen's stability, 360-degree mesh for interaction, and the soft cloth cover for enhanced safety and comfort.

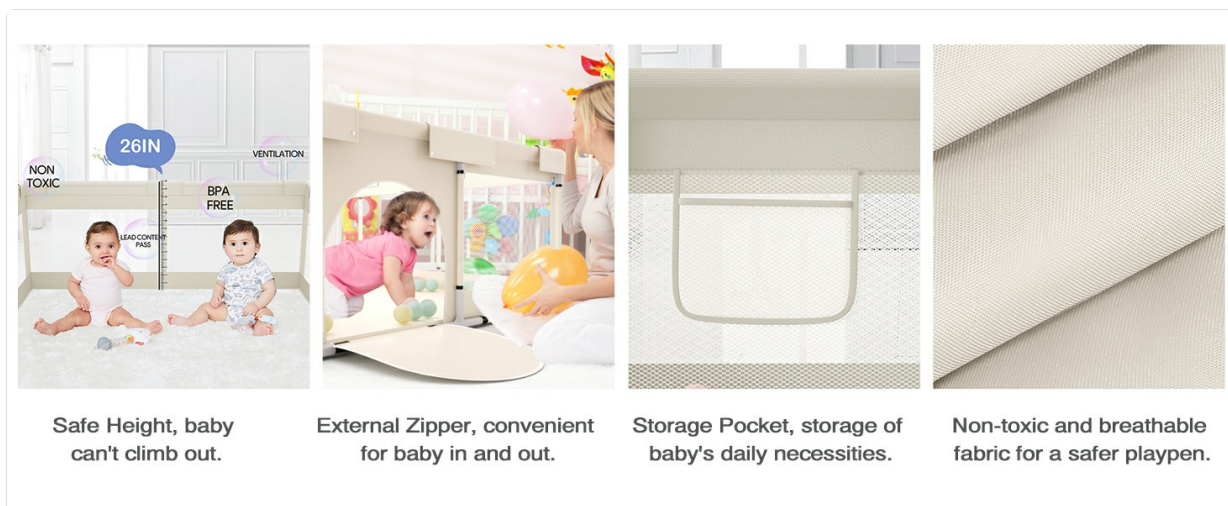


Image: Highlights the playpen's safe height, external zipper access, integrated storage pocket, and use of non-toxic, breathable fabric.

Your browser does not support the video tag.

Video: A short clip showcasing the extra-large size of the playpen, providing a safe and expansive space for playtime.

MAINTENANCE

To ensure the longevity and hygiene of your Fodoss playpen, regular cleaning and maintenance are recommended.

- **Cleaning:** The fabric and mesh materials of the playpen can be spot cleaned with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that may damage the fabric or mesh.
- **Drying:** Allow all parts to air dry completely before folding or storing the playpen to prevent mold or mildew growth.
- **Inspection:** Periodically check all pipes, joints, and fabric for any signs of wear, tears, or damage. Replace any damaged parts immediately to maintain safety.

TROUBLESHOOTING

- **Playpen instability:** Ensure all pipes are fully inserted into their respective joints and the fabric is pulled taut. Verify that the four suction cups at the base are firmly pressed onto a clean, dry, smooth floor surface (e.g., wood, tile) to prevent movement.
- **Difficulty with assembly/disassembly:** While designed for easy assembly, ensure you are following the instructions carefully. If a pipe or joint is difficult to connect, check for any obstructions or misalignment. Applying gentle, even pressure is key.
- **Zipper issues:** If the zipper for the door becomes stiff, ensure the fabric is not caught in the zipper teeth. Apply a small amount of zipper lubricant if necessary.
- **Mat not fitting flush (if using an additional mat):** Some users have noted that additional play mats might not sit perfectly flush with the playpen's base. This is often due to the mat's thickness or material. Ensure the playpen's integrated base is flat and consider tucking any excess fabric from the zipper door inward to prevent tearing if a child puts pressure on it.

SPECIFICATIONS

Brand	Fodoss
Model	47x71inch Playpen

Color	Beige
Material	Fabric, Mesh
Parcel Dimensions	44.7 x 34.5 x 20 cm; 4.72 kg
Country of Origin	China
Unit Count	1.0 Pack

WARRANTY AND SUPPORT

For specific warranty information or product support, please refer to the documentation included with your purchase or contact Fodoss customer service directly. The manufacturer is Fodoss.