

[Manuals.plus](#) /

› [HOOBRO](#) /

› HOOBRO Double Laundry Hamper Cabinet WT36XY01 User Manual

HOOBRO WT36XY01

HOOBRO Double Laundry Hamper Cabinet WT36XY01 User Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your HOOBRO Double Laundry Hamper Cabinet, Model WT36XY01. This cabinet is designed to offer efficient laundry sorting and storage with its double clothes-toss holes, two removable laundry bags, and additional storage drawers and hooks. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.



Image: The HOOBRO Double Laundry Hamper Cabinet (WT36XY01) in a laundry room, showcasing its design and functionality.

SAFETY INFORMATION

Always follow the assembly instructions provided. Secure the cabinet to the wall using the anti-tip device to prevent tipping. Be cautious when using the top surface, as it can hold up to 150 lb and may pose a risk if overloaded or used improperly. Keep the area around the cabinet clear to prevent any potential pinch points or hazards.

PACKAGE CONTENTS

Before beginning assembly, please ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Cabinet Panels (various sizes)
- Hardware Pack (screws, dowels, cam locks, etc.)

- 2 Removable Laundry Baskets
- 2 Drawer Fronts and Components
- 2 Side Hooks
- Anti-Tip Device Kit
- Assembly Instructions (this manual)

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the step-by-step instructions provided in the included assembly guide. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.

Dimensions

Refer to the diagram below for product dimensions to ensure proper placement in your desired location.

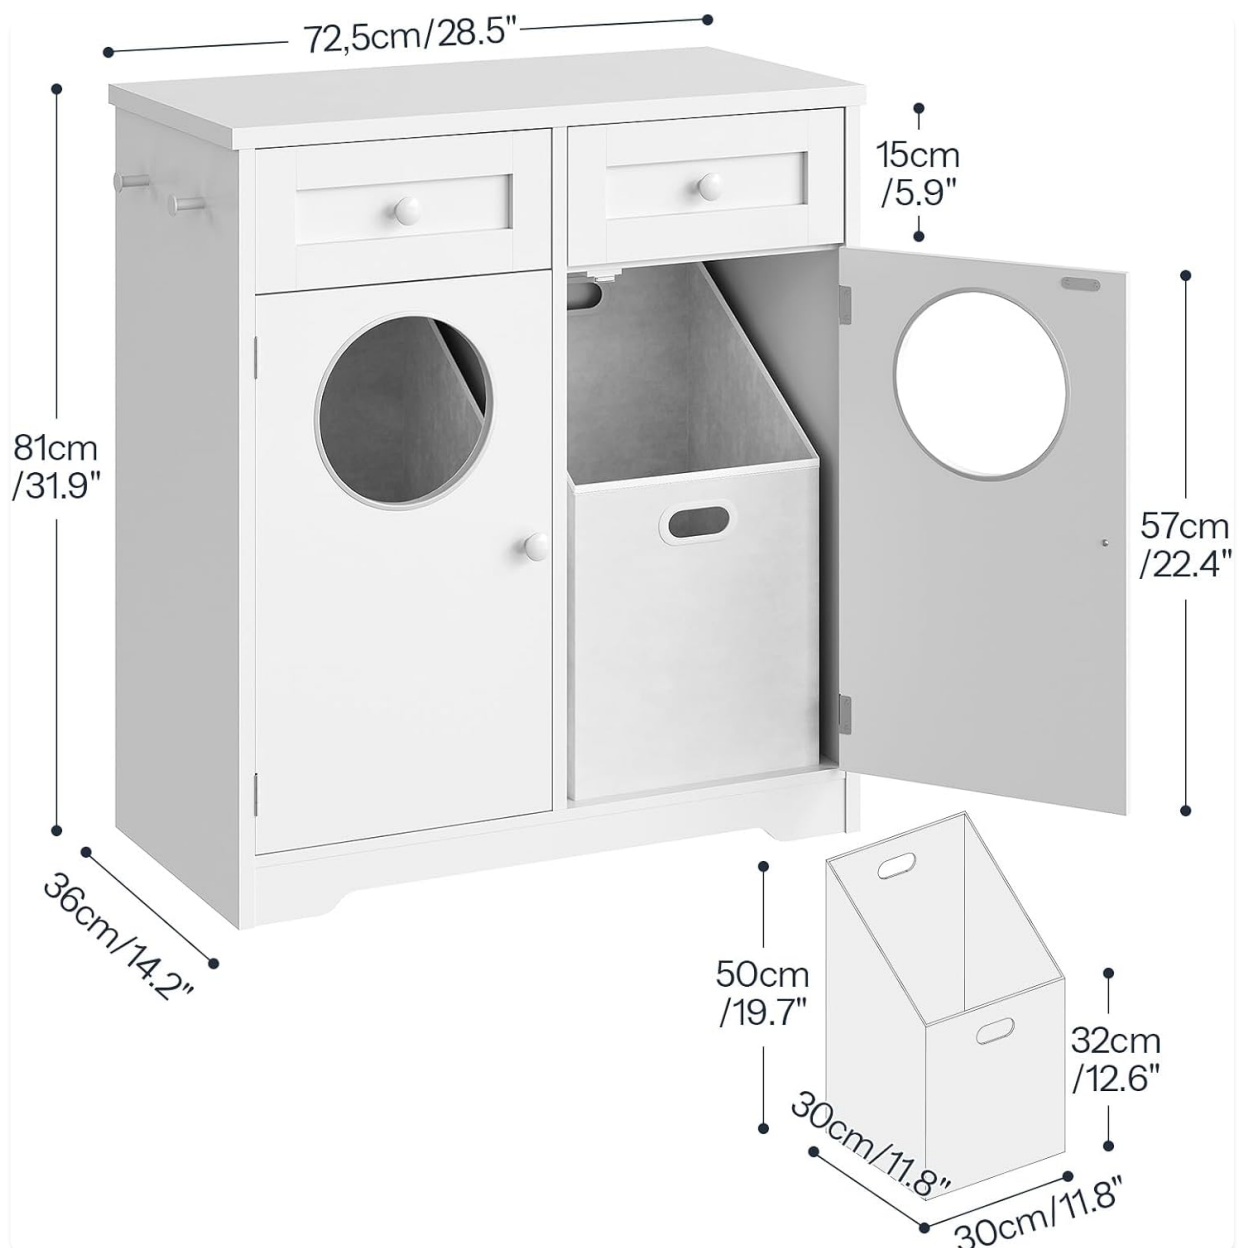


Image: Detailed dimensions of the HOOBRO Double Laundry Hamper Cabinet (14.2\"D x 28.5\"W x 31.9\"H).

Anti-Tip Device Installation

For safety, it is crucial to install the anti-tip device. This device securely fixes the cabinet to the wall,

preventing accidental tipping, especially in households with children or pets. Follow the specific instructions in your assembly guide for correct installation.



Image: Diagram showing how to install the anti-tip kit to enhance cabinet stability.

OPERATING INSTRUCTIONS

Using the Clothes-Toss Holes

The cabinet features two circular holes on the front doors, allowing for convenient drop-off of dirty laundry directly into the removable bags inside. This design helps keep laundry out of sight and your space tidy.



Image: Demonstrating the use of the clothes-toss hole for easy laundry disposal.

Removable Laundry Baskets

Each compartment contains a large, removable laundry bag. These bags are designed with handles for easy removal and transport to your laundry room. Simply open the cabinet doors to access and retrieve the bags.



Image: The cabinet with one door open, showing a removable laundry basket for sorting.

Storage Drawers

The cabinet includes two top drawers, providing additional hidden storage for detergents, toiletries, or other household items. Pull the knobs to open the drawers smoothly.



Image: The two top drawers open, illustrating their capacity for storing various items.

Side Hooks

Two hooks are located on each side of the cabinet, offering convenient hanging space for towels, loofahs, or other small accessories.



Image: Side hooks on the cabinet, useful for hanging towels or other small items.

MAINTENANCE

To maintain the appearance and longevity of your HOOBRO Laundry Hamper Cabinet, follow these simple care instructions:

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly clean any spills to prevent staining or damage to the engineered wood.
- **Laundry Bags:** The removable laundry bags can be cleaned according to their fabric care instructions, typically spot cleaning or hand washing.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your HOOBRO Laundry Hamper Cabinet, consider the following common solutions:

- **Wobbly Cabinet:** Ensure all assembly screws are tightened. Verify the cabinet is placed on a level surface. Re-check the anti-tip device installation.
- **Drawers Not Sliding Smoothly:** Check that the drawer slides are correctly installed and free from obstructions. Ensure the drawers are not overloaded.
- **Doors Not Closing Properly:** Inspect hinges for proper alignment and tightness. Ensure no items inside the cabinet are obstructing the doors.

If problems persist, please contact HOOBRO customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	HOOBRO
Model Number	WT36XY01
Color	White
Material	Engineered Wood
Product Dimensions (D x W x H)	14.2" x 28.5" x 31.9"
Item Weight	20.2 Kilograms
Weight Capacity (Top Surface)	150 Pounds
Number of Drawers	2
Number of Compartments	2
Assembly Required	Yes
Included Components	Doors, Drawers, Installation Kit, User Manual

WARRANTY AND SUPPORT

HOOBRO products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official HOOBRO website. If you require assistance with assembly, missing parts, or have any questions regarding your product, please contact HOOBRO customer support. Contact details can typically be found on the packaging or the brand's official website.