

## SEALIGHT X2

# SEALIGHT Handheld Car Vacuum Cleaner User Manual

Model: X2

## 1. INTRODUCTION

Thank you for choosing the SEALIGHT Handheld Car Vacuum Cleaner. This versatile 4-in-1 device is designed to provide powerful and efficient cleaning for your car, home, office, and various other applications. With its strong suction, blowing, inflating, and pumping capabilities, it offers a comprehensive solution for maintaining cleanliness and convenience.

Please read this manual thoroughly before operating the device to ensure proper use, optimal performance, and safety.

## 2. SAFETY INSTRUCTIONS

- Always ensure the device is fully charged before first use.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the device without the dust cup and filter properly installed.
- Store the device in a dry place, away from direct sunlight and extreme temperatures.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the charging cable provided by the manufacturer.

## 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

## What You Get

- 1 Mini Vacuum
- 2 USB Charging Cable
- 3 Washable Filter x 2
- 4 Multi-surface Nozzle
- 5 Long Blowing Nozzle
- 6 Flat Suction Nozzle
- 7 Short Blowing Nozzle
- 8 Flat Brush
- 9 Round Brush
- 10 Air Suction Nozzle
- 11 Box
- 12 User Manual



Image: All components included in the SEALIGHT Handheld Vacuum Cleaner package, including the main unit, various nozzles, charging cable, and user manual.

- 1 x Mini Vacuum Unit
- 1 x USB Charging Cable (Type-C)
- 2 x Washable Filters
- 1 x Multi-surface Nozzle
- 1 x Long Blowing Nozzle
- 1 x Flat Suction Nozzle
- 1 x Short Blowing Nozzle
- 1 x Flat Brush
- 1 x Round Brush
- 1 x Air Suction Nozzle
- 1 x Storage Box/Bag
- 1 x User Manual

## 4. SETUP

### 4.1 Charging the Device

Before first use, fully charge the vacuum cleaner. Connect the provided USB Type-C charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., car charger, power bank, laptop, wall adapter). The charging indicator light will show the charging status and turn off or change color when fully charged.

### 4.2 Attaching Nozzles

Select the appropriate nozzle for your cleaning task. Align the nozzle with the suction or blowing port of the vacuum cleaner and push firmly until it clicks into place. Ensure a secure fit to prevent air leakage during operation.

## 5. OPERATING INSTRUCTIONS

The SEALIGHT Handheld Car Vacuum Cleaner offers four primary functions: vacuuming, blowing, inflating, and pumping.

# 4-in-1 Functions in a Snap

Meet all your needs in the car and beyond


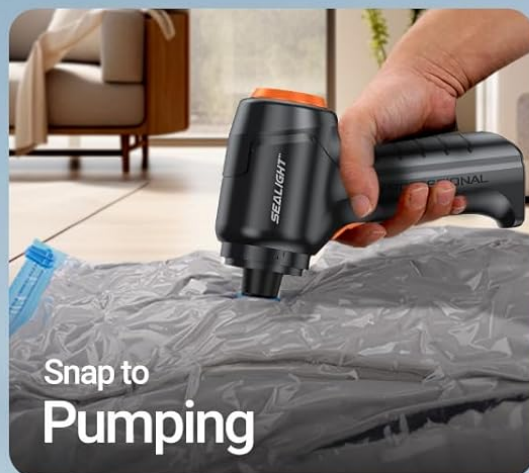


Image: Visual representation of the 4-in-1 functions: vacuuming car interior, blowing charcoal for a grill, inflating a yoga ball, and pumping air out of a storage bag.

## 5.1 Vacuuming

Attach the desired suction nozzle (e.g., Flat Suction Nozzle for crevices, Multi-surface Nozzle for general cleaning). Press the power button to turn on the vacuum. Guide the nozzle over the area to be cleaned. The powerful 120W motor provides strong suction for dust, debris, and pet hair.

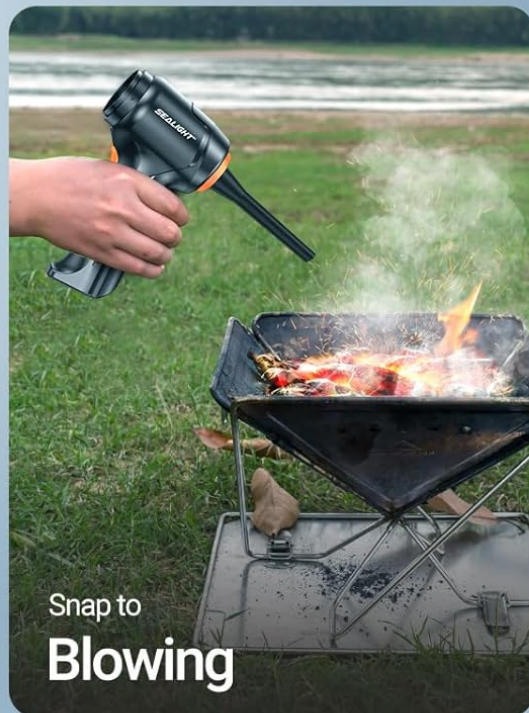

# One Charge, One Car Spotless

With SEALIGHT removable, rechargeable battery



Image: The vacuum cleaner effectively cleaning debris from a car's floor mat.

## 5.2 Blowing

Attach the Long Blowing Nozzle or Short Blowing Nozzle to the exhaust port of the vacuum. This function is useful for dusting hard-to-reach areas, blowing away light debris, or assisting with starting fires (e.g., charcoal grills).

## 5.3 Inflating

Use the appropriate inflating nozzle (e.g., Short Blowing Nozzle) to inflate small items like swimming rings, yoga balls, or air mattresses. Attach the nozzle to the exhaust port and connect it to the item's inflation valve.

## 5.4 Pumping (Vacuum Sealing)

Attach the Air Suction Nozzle to the exhaust port. This function can be used with vacuum storage bags to remove air, compressing items like clothing or bedding for space-saving storage.

## 6. MAINTENANCE

### 6.1 Emptying the Dust Cup

After each use or when the dust cup is full, detach it from the main unit. Dispose of the collected debris into a trash bin. For optimal performance, do not let the dust cup overflow.

### 6.2 Cleaning the Filter

The HEPA filter should be cleaned regularly to maintain suction efficiency. Remove the filter from the dust cup. Tap it gently to remove loose dust. For a more thorough cleaning, rinse the filter under running water. Ensure the filter is completely dry before reinserting it into the dust cup and reattaching it to the vacuum cleaner. Using a damp filter can damage the device.



Image: A person cleaning the HEPA filter under running water to remove accumulated dust and debris.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	Battery is low or depleted.	Charge the device fully.
Reduced suction power	Dust cup is full. Filter is clogged. Nozzle is blocked.	Empty the dust cup. Clean or replace the filter. Check and clear any blockages in the nozzle or suction path.
Device stops unexpectedly	Battery is depleted. Overheating protection activated.	Recharge the battery. Allow the device to cool down before resuming operation.
Nozzles do not fit securely	Incorrect nozzle used. Not pushed in firmly enough.	Ensure you are using the correct nozzle for the port (suction vs. blowing). Push the nozzle firmly until it clicks into place.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	X2
Power	120W
Suction Power	Up to 13,000 Pa
Functions	4-in-1 (Vacuum, Blow, Inflate, Pump)
Dust Cup Capacity	180 Milliliters
Filter Type	HEPA Filter
Charging Port	Type-C
Cordless	Yes
Dimensions	8"L x 3"W x 10"H
Item Weight	1.8 pounds

# Store More and Bigger

With 180ML larger capacity



Image: Visual comparison highlighting the 180ml capacity of the SEALIGHT vacuum's dust cup compared to a smaller 120ml capacity.

## 9. WARRANTY AND SUPPORT

SEALIGHT products come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or visit the official SEALIGHT website. If you encounter any issues or have questions regarding your product, please contact SEALIGHT customer support for assistance.

Contact information can typically be found on the product packaging or the official brand website.

## Related Documents

**SEALIGHT™**  
LED HEADLIGHT KIT  
User Manual

Model: 9003/H4/HB2

Lamp Body  
LED Chip  
Lensing Ring  
Heat Sink  
Power Connector

**CUSTOMER SERVICE**  
www.sealight-led.com support@sealight-led.com

**PACKAGE CONTENTS**  
• SEALIGHT LED Headlight Bulb(s) pair  
• 10A Fuse  
• User Manual x 1

**PRODUCT SPECIFICATIONS**

Operating Voltage	DC12V
Waterproof Rating	IP67
LED Chip	CSP
Heat Sink Material	Aluminum
Cooling	Fanless
Operating Temperature	-40°C ~ 85°C

**INSTALLATION-HH**

 
1. Removing the vehicle's bulb cover and original bulb. (Please refer to the vehicle's manual for the location of the bulb cover.)
2. Insert the LED bulb into the headlight.
3. Insert the lensing ring into the headlight housing and fix it in place using the provided screws.
4. Connect the LED bulb to the power connector.
5. Connect the power connector to the vehicle's power source.
6. Connect the LED bulb to the power connector.
7. Connect the LED bulb to the power connector.

**TROUBLESHOOTING**

The lights do not work properly.	1. Check if the power source (battery) is properly connected and if the fuse is not blown. 2. Make sure the LED bulb is properly installed in the headlight housing. 3. Check if the LED bulb is compatible with the vehicle's headlight housing.
One of the bulbs is not working.	1. Check if the LED bulb is properly installed in the headlight housing. 2. Check if the LED bulb is compatible with the vehicle's headlight housing.
The lights flicker or dim.	1. Check if the LED bulb is properly installed in the headlight housing. 2. Check if the LED bulb is compatible with the vehicle's headlight housing.
A warning lamp appears in the vehicle's system.	1. This is a harmless side effect of the LED technology and can be ignored. 2. If the warning lamp persists, please contact the manufacturer for further assistance.

www.sealight-led.com support@sealight-led.com





www.sealight-led.com      support@sealight-led.com



[www.sealight-led.com](http://www.sealight-led.com)

port@sealight-led.com

- **SEALIGHT LED Headlight Bulbs** pair

- SEALIGHT LED Headlight Bulb(s) pair
- Double Sided Tape x 2
- Zip-Ties x 4
- User Manual x 1

Operating Voltage	
-------------------	--

Operating Voltage	DC12V
Waterproof Rating	IP67
LED Component	COB
Heat Sink Material	6063 Aluminum
Cooling	Aluminum HeatSink
Cold Temperature	-30°C~55°C
Operating Temperature	-40°C ~ +85°C

5. Removing the original rubber cover and original bulb.

- Removing the original rubber cover and original bulb.
- Remove the rubber cover (if present).
- Push down the knob on the connector and disconnect the two parts.
- Turn the bulb over and check the valve and ensure it is not retained by the



**2. Insert the bulb into the light housing.**



3. While pressing down the LED bulb, turn it clockwise until it does not turn anymore and then lock the LED bulb in place.



4 Connect the LED bulb's connector with the original vehicle connector, then reinstall the rubber cover (if present).



**INSTALLATION VIDEO**  
Search "BEALED® Lighting" on YouTube to find and watch our installation videos.

	1. Check if the p...
--	----------------------

The lights don't work properly	<ol style="list-style-type: none"> <li>1. Check if the power connections are properly connected, and make sure that the vehicle headlight switch is in the "ON" position.</li> <li>2. Make sure the battery has enough capacity to supply power to the LED bulb.</li> <li>3. Install the LED bulbs with the resistors (CANbus).</li> </ol>
One of the bulbs is not working	<p>Make sure the connection is good. If one of the bulbs still doesn't work, install a new LED bulb on the left and test again. If the problem cannot be resolved, it may be caused by the vehicle's light assembly.</p>
The lights flicker or flash	<p>Install the LED bulb with the resistors (CANbus) to resolve the issue.</p>
A warning lamp appears on the vehicle's system dashboard	<p>This is a harmless side-effect of the low-voltage LED bulb not being recognized by the vehicle's system and can be resolved with the installation of an additional set of resistors (CANbus).</p>

[www.sealight-led.com](http://www.sealight-led.com)

support@sealight-led.com

User manual for the SEALIGHT LED Headlight Kit, including product specifications, installation instructions, and troubleshooting tips.

