

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LANCHEZ](#) /

› [LANCHEZ Electric Pressure Washer Instruction Manual](#)

## LANCHEZ BULL-135C-BLUE

# LANCHEZ Electric Pressure Washer User Manual

Model: BULL-135C-BLUE

## 1. INTRODUCTION

Thank you for choosing the LANCHEZ Electric Pressure Washer. This powerful and versatile cleaning tool is designed to tackle a wide range of outdoor cleaning tasks, from washing vehicles and driveways to cleaning patios and fences. With its robust 4500 PSI maximum pressure and 3.2 GPM maximum flow rate, combined with a comprehensive set of 7 nozzles, it provides efficient and effective stain removal. This manual provides essential information for safe operation, proper setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your pressure washer.

# Electric Pressure Washer

For Effortless Stain Removal.

**4500** PSI  
Max. Pressure

**3.2** GPM  
Max. Flow Rate

**7** Upgraded  
Nozzles Set



Image: The LANCHEZ Electric Pressure Washer in action, demonstrating its powerful cleaning capabilities with a user operating the spray gun on a paved surface.

## 2. SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the pressure washer in wet conditions or near standing water. Always use a Ground Fault Circuit Interrupter (GFCI) protected outlet.
- **Water Pressure:** The high-pressure spray can cause serious injury. Never direct the spray at people, pets, or electrical devices. Keep hands and feet clear of the nozzle.
- **Chemicals:** Use only pressure washer safe detergents. Follow detergent manufacturer's instructions for mixing and use. Wear appropriate protective gear when handling chemicals.
- **Stability:** Operate the pressure washer on a stable, level surface to prevent tipping.

- **Child Safety:** Keep children and pets away from the operating area. The unit features a child safety switch on the spray gun to prevent accidental activation.
- **Maintenance:** Disconnect the power supply before performing any maintenance or cleaning.

## THREE WAYS FOR WATER SUCKING

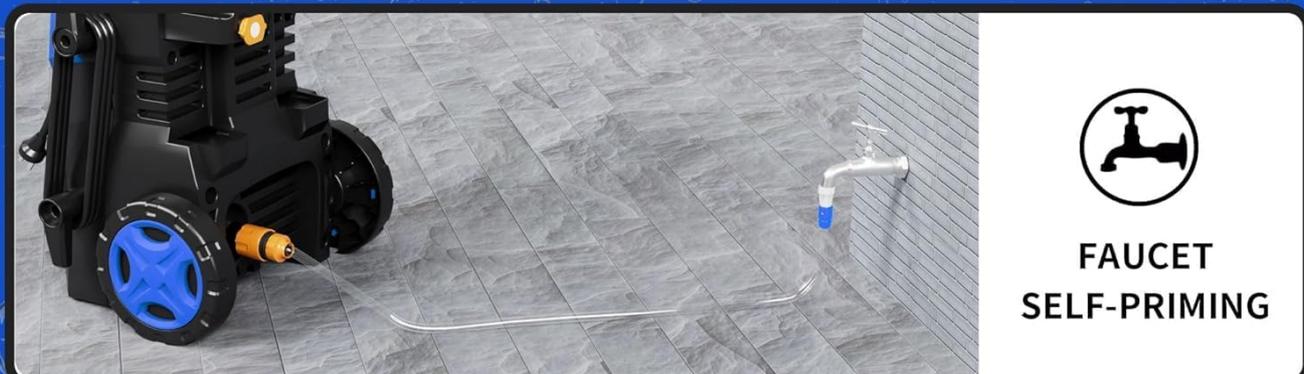


Image: Close-up view of the spray gun handle, highlighting the child safety switch mechanism. This switch can be set to 'Unlocked' or 'Latched' to prevent accidental spraying.

### 3. PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present and undamaged. If any items are missing or damaged, contact customer support immediately.



Image: A complete overview of the LANCHEZ Electric Pressure Washer and all its included accessories, such as the main unit, spray gun, various nozzles, foam cannon, and hoses.

### Included Components:

- Electric Pressure Washer Unit
- Spray Gun
- High-Pressure Hose (20 FT)
- Inlet Hose with Filter
- Foam Cannon (500ml)
- Quick-Connect Spray Nozzles (0°, 15°, 25°, 40°)
- Turbo Nozzle
- 360° Nozzle (Universal Nozzle Wand)
- Power Cord (16 FT)

## 4. PRODUCT FEATURES

- **Powerful Cleaning:** Delivers 4500 Max PSI and up to 3.2 GPM for deep cleaning, effectively blasting away stubborn dirt on driveways, cars, patios, and pool decks.
- **Versatile Nozzle Set:** Includes 4 quick-connect spray nozzles (0°, 15°, 25°, 40°) and a foam cannon. Additional turbo nozzle and 360° nozzle are suitable for various fine surfaces and stubborn dirt.
- **Double Protection Design:** Features direct foam spray, meaning cleansers do not pass through the pump, extending pump life. Combined with Total Stop System (TSS), the unit automatically shuts off when idle, extending machine lifespan and ensuring safety (10,000+ cycles).
- **Portable Design:** Integrated wheels, mesh storage compartments, and power cable hooks allow for easy movement and tidy storage.
- **Extensibility:** Equipped with a 16FT power cord and 20FT high-pressure hose, enabling easy cleaning of large areas. The quick-connect system supports various accessories.
- **Durable Construction:** Built with overload protection for safe family use.



Image: Detailed view of key features including the no-tangle hose reel, the pure copper power motor for durability, the safety lock mechanism on the spray gun, and the large wheels designed for stability and easy movement.

## 5. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your pressure washer for use.

1. **Install Handle:** Secure the handle to the main unit by tightening the screws.
2. **Attach Spray Gun:** Insert the spray gun into the high-pressure hose. Ensure a quick and secure connection without needing to rotate.
3. **Connect Nozzle:** Insert and rotate the desired nozzle or wand (e.g., Universal Nozzle Wand or Turbo Nozzle Wand) into the end of the spray gun until it clicks into place.
4. **Connect High-Pressure Hose to Outlet:** Insert the high-pressure hose into the water outlet on the pressure washer unit.
5. **Install Inlet Hose:** Connect the inlet hose with filter to the water inlet on the pressure washer unit. Connect the other

end of the inlet hose to your water source (faucet, bucket, or pool).

6. **Rotate Switch:** Ensure the main power switch is in the OFF position before connecting to power.



Image: A visual guide illustrating the six key steps for setting up the pressure washer: installing the handle, quick insertion of the spray gun, inserting and rotating the gun, inserting the hose into the outlet, installing the inlet hose, and rotating the switch.

### Water Sourcing Options:

Your LANCHEZ pressure washer supports three methods for water intake:

- **Faucet Self-Priming:** Connect directly to a standard garden faucet.
- **Bucket Self-Priming:** Use the inlet hose to draw water from a bucket.
- **Pool Self-Priming:** Utilize the inlet hose with filter to draw water from a pool or other large water reservoir.

# LANCHEZ Pressure Washer Can Use Following Accessories



Image: Visual representation of the three water intake methods: connecting to a faucet, drawing water from a bucket, and drawing water from a pool using the included inlet hose and filter.

## 6. OPERATING INSTRUCTIONS

Once assembled and connected to a water source, you can begin operating your pressure washer.

### Nozzle Selection Guide:


Choose the appropriate nozzle for your cleaning task. Each nozzle provides a different spray pattern and intensity.



**0° Nozzle (Red):** Produces a powerful, concentrated jet for tough, localized stains on durable surfaces like cracks, footpaths, and metal. Use with extreme caution.



**15° Nozzle (Yellow):** Provides a focused, fan-shaped spray for intensive cleaning of hard surfaces such as concrete, asphalt, and brick. Ideal for removing paint or rust.

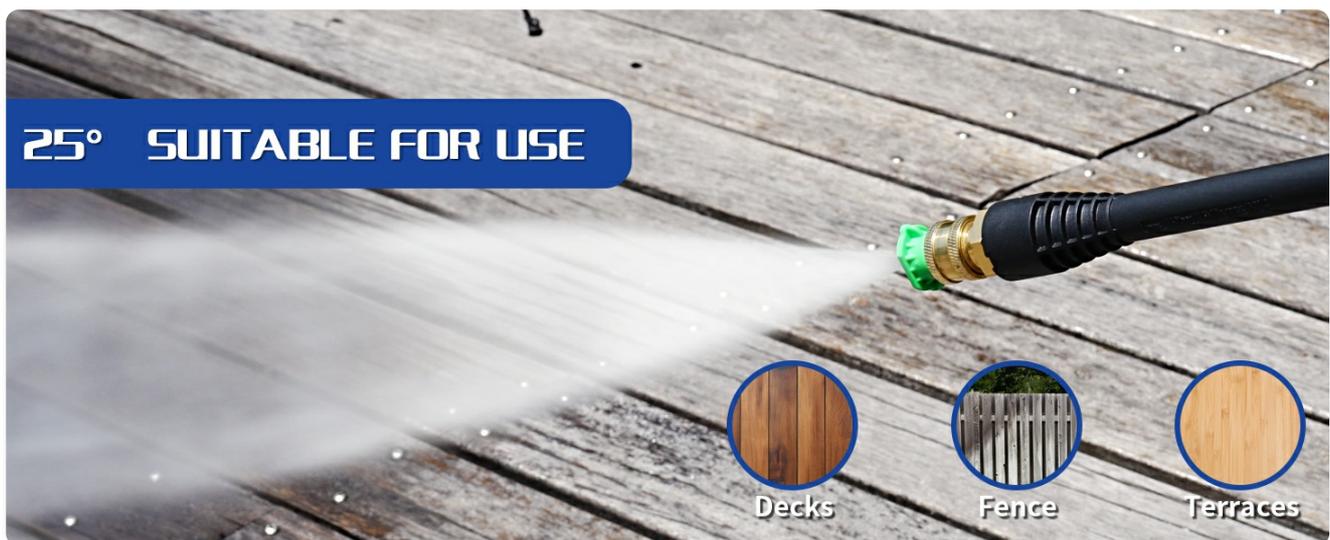

**25° Nozzle (Green):** Offers a wider fan spray, suitable for general cleaning of decks, fences, and terraces. Provides a good balance of power and coverage.



**40° Nozzle (White):** Delivers the widest fan spray, ideal for general cleaning of delicate surfaces like vehicles, windows, and outdoor furniture. Provides maximum coverage with less intensity.



**Turbo Nozzle:** Creates a rapidly rotating 0° spray pattern, combining the power of a 0° nozzle with the coverage of a wider spray. Excellent for stubborn dirt on concrete, sidewalks, and other hard surfaces.



**360° Nozzle (Universal Nozzle Wand):** Provides a rotating spray for comprehensive cleaning, particularly useful for washing cars and reaching hard-to-access corners.



**Foam Cannon:** Attach the foam cannon to the spray gun to apply detergent. The direct foam spray design ensures cleansers do not pass through the pump, preserving its lifespan. Ideal for pre-soaking vehicles or heavily soiled areas.

### General Operation Steps:

1. Ensure all connections are secure and the water supply is turned on.
2. Plug the pressure washer into a grounded electrical outlet.
3. Turn the main power switch to the ON position.
4. Squeeze the trigger on the spray gun to begin spraying. The Total Stop System (TSS) will automatically turn off the pump when the trigger is released and turn it back on when squeezed.
5. To apply detergent, fill the foam cannon with appropriate pressure washer detergent and attach it to the spray gun.
6. After use, turn off the power switch, disconnect from the power outlet, and turn off the water supply. Squeeze the trigger to release any remaining pressure in the system.



Image: A side-by-side comparison showing a dirty car before cleaning and the same car after being cleaned with the pressure washer, demonstrating its effectiveness in stain removal.

## 7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning Nozzles:** Periodically clean the nozzle tips to remove any blockages. A small wire or nozzle cleaning tool can be used.
- **Filter Cleaning:** Check and clean the inlet filter regularly to prevent debris from entering the pump.
- **Hose and Cord Inspection:** Inspect the high-pressure hose and power cord for any signs of damage, kinks, or wear before each use. Replace if damaged.
- **Winter Storage:** If storing in freezing temperatures, ensure all water is drained from the pump and hoses to prevent damage. Consider using a pump protector.
- **General Cleaning:** Wipe down the unit with a damp cloth after each use to remove dirt and grime.

## 8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Motor does not start	No power supply; GFCI tripped; Power switch OFF	Check power connection; Reset GFCI; Turn power switch ON
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump	Ensure full water flow; Clean nozzle; Purge air by running unit with trigger open until steady flow
Pulsating pressure	Air in pump; Inlet filter clogged; Kinked hose	Purge air; Clean inlet filter; Straighten hose
Water leaks	Loose connections; Damaged O-rings	Tighten all connections; Replace damaged O-rings
Unit shuts off frequently (TSS)	Normal operation (Total Stop System); Overload protection activated	This is normal when trigger is released. If continuous, check for blockages or motor overheating.

## 9. SPECIFICATIONS

Detailed technical specifications for the LANCHEZ Electric Pressure Washer.

**Model Number:** BULL-135C-BLUE

**Manufacturer:** LANCHEZ

**Power Source:** Corded Electric

**Max Pressure:** 4500 PSI

**Max Flow Rate:** 3.2 GPM

**Product Dimensions:** 29.79 x 34.97 x 71.98 cm

**Item Weight:** 8.7 kg

**High-Pressure Hose Length:** 20 Feet

**Power Cord Length:** 16 Feet

**Color:** Blue

**Country of Origin:** China

## **10. WARRANTY AND SUPPORT**

LANCHEZ provides 3-year technical support for this electric pressure washer. For any technical assistance, warranty claims, or inquiries, please contact LANCHEZ customer service through your purchase platform or the official LANCHEZ website.

Please retain your proof of purchase for warranty purposes.