

MYSTILUCK SZ-4015B

MYSTILUCK Wireless Controller Instruction Manual

Model: SZ-4015B

1. INTRODUCTION

This manual provides detailed instructions for the MYSTILUCK Wireless Controller, designed for use with multiple gaming platforms including PS4, PS3, PC, MAC, iOS, Android, and Steam Deck. Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming experience.

2. PRODUCT OVERVIEW

The MYSTILUCK Wireless Controller is a versatile gamepad featuring advanced technologies for enhanced gaming. Key features include:

- **Multi-Platform Compatibility:** Supports PS4, PS3, Windows 10 and above, MAC, iOS, Android 10 and above, and Steam Deck.
- **Dynamic RGB Lighting:** 7 customizable colors (Red, Orange, Yellow, Green, Cyan, Blue, Violet) and 4 light modes (Dazzle, Monochrome, Monochrome Breathe, Monochrome Breathe Cycle) to match your gaming atmosphere.
- **Hall Effect Technology:** Ensures zero joystick drift and high accuracy with less than 0.1ms response time and 256 levels of pressure sensitivity for triggers.
- **Dual Vibration:** Equipped with two vibration motors offering 4 adjustable levels (100%, 75%, 50%, 0%) for immersive feedback.
- **Turbo Function:** Features automatic and manual Turbo modes with three adjustable speeds (5-10-15Hz) for rapid input.
- **6-Axis Gyro Sensor:** Provides precise motion control for enhanced in-game immersion.
- **Integrated Audio & Touchpad:** Includes a 3.5mm headphone jack and a multi-functional touchpad with haptic feedback.
- **Long Battery Life:** Built-in 1500mAh battery provides approximately 6-8 hours of continuous play.
- **Programmable Back Buttons:** Two M1/M2 keys on the back can be programmed for single buttons or macros up to 16 presses.



Image 2.1: Front view of the MYSTILUCK Wireless Controller, showcasing its ergonomic design and RGB lighting.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- MYSTILUCK Wireless Controller (Model: SZ-4015B)
- USB Charging Cable
- Instruction Manual (this document)

WIRELESS CONTROLLER FOR P4



Image 3.1: Front view of the MYSTILUCK Wireless Controller packaging.





Image 3.2: Back view of the MYSTILUCK Wireless Controller packaging, detailing features and compatibility.

4. CONTROLLER LAYOUT

Familiarize yourself with the buttons and components of your MYSTILUCK Wireless Controller:

- **D-Pad:** Directional Pad for navigation.
- **Left/Right Joysticks:** Analog sticks for precise movement and camera control.
- **Action Buttons:** Triangle, Circle, Cross (X), Square buttons.
- **SHARE Button:** For sharing gameplay content.
- **OPTIONS Button:** For in-game menus and options.
- **PS Button:** Home button for console functions.
- **TURBO Button:** Activates and adjusts Turbo function.
- **M1/M2 Buttons:** Two programmable back buttons.
- **L1/R1 Buttons:** Shoulder buttons.
- **L2/R2 Triggers:** Analog triggers with pressure sensitivity.
- **Touchpad:** Multi-functional surface for gestures and navigation.
- **3.5mm Headphone Jack:** For connecting wired audio devices.
- **USB-C Port:** For charging and wired connection.

5. SETUP & CONNECTION

5.1 Initial Pairing

When connecting the controller to a host device for the first time, it is crucial to avoid touching the joysticks during the pairing process. The joysticks are automatically calibrated at this stage. Calibration will complete once pairing is successful.

5.2 Platform Compatibility

The MYSTILUCK Wireless Controller supports a wide range of platforms:

- PlayStation 4 (PS4)
- PlayStation 3 (PS3)
- PC (Windows 10 and above)
- MAC
- iOS (iOS 13.0 and above)
- Android (Android 10.0 and above)
- Steam Deck

5 CONNECTION MODES

A truly worthy multi-platform gaming controller



Compatible with PS4 /PS3, PC (Windows10 and above) Mac, Steam Deck, Android 10 and above, and iOS

Image 5.1: Visual representation of the controller's multi-platform compatibility, including iOS, PS4/PS3, Android, Steam Deck, and PC.

6. OPERATING INSTRUCTIONS

6.1 RGB Lighting Control

The controller features 7 colors of RGB lighting and 4 light modes. You can customize these settings:

- **Change Color:** Press the **Light button** and the **Left Joystick** simultaneously.

- **Change Mode:** Press the **Light button** and the **Right Joystick** simultaneously.

Available colors: Red, Orange, Yellow, Green, Cyan, Blue, Violet.

Available modes: Dazzle, Monochrome, Monochrome Breathe, Monochrome Breathe Cycle.

7 COLORS LIGHT & 4 LED MODES

With 7 color magic light and free switching of 4 modes, injects a charming atmosphere into the gaming scene and makes the controller show cool texture.



Image 6.1: The controller displaying its 7-color RGB lighting and various LED modes.

6.2 Dual Vibration Adjustment

The controller's dual vibration motors offer four intensity levels:

- 100% (Maximum)
- 75%
- 50%
- 0% (Off)

Refer to your game's settings or the controller's specific button combinations (if available, not detailed in product info) to adjust vibration intensity.

DUAL VIBRATION

With adjustable vibration speed intensities in 4 levels it brings you the most realistic gaming experience



6.3 Turbo Function

The Turbo function allows for rapid, repeated button presses, useful in certain game genres.

- **Modes:** Automatic Turbo and Manual Turbo.
- **Speeds:** Three adjustable speeds (5Hz, 10Hz, 15Hz).

To activate and adjust the Turbo function, consult the specific button combinations provided in the quick start guide or on the product packaging, as these can vary.

TURBO FUNCTION

It relieves users of the need to press buttons repeatedly and reduces the fatigue during gameplay

There are three gears (5-10-15HZ) to adjust the TURBO speed; The default is the middle gear.
TURBO + pushing the right 3D joystick upward: increase one gear of continuous firing speed
TURBO + pushing the right 3D joystick downward: decrease one gear of continuous firing speed



Image 6.3: The controller highlighting the Turbo button and its function for rapid input.

6.4 Programming Keys (M1/M2)

The two back buttons (M1 and M2) are programmable, offering customization for individual button presses or complex macros.

- **Single Button Remapping:** Assign any standard controller button to M1 or M2.
- **Macro Functionality:** Create sequences of up to 16 button presses for a single M1 or M2 input.

Specific instructions for programming M1/M2 buttons are typically found in the quick start guide included with the product.



Image 6.4: Rear view of the controller, indicating the M1 and M2 programmable keys.

6.5 6-Axis Gyro Sensor

The built-in 6-Axis Gyro Sensor provides precise motion control, allowing for intuitive in-game actions based on the controller's physical orientation and movement. This enhances immersion, particularly in games that utilize motion sensing.

6 AXIS GYRO SENSOR

Control the character with your hands and truly feel every one of your movements. It's comfortable to hold even during long gaming sessions.



Image 6.5: Visual representation of the 6-Axis Gyro Sensor's function for motion control.

6.6 Headphone Jack and Touchpad

- **3.5mm Headphone Jack:** Connect a wired headset or headphones directly to the controller for in-game audio and communication.
- **Touchpad:** The multi-functional touchpad supports precise swipes, taps, and presses for in-game gestures, menu navigation, and context-specific actions. Its haptic feedback provides tactile responsiveness synchronized with on-screen events.

7. CHARGING & BATTERY LIFE

The controller is equipped with a 1500mAh high-capacity battery.

- **Play Time:** Approximately 6-8 hours of continuous play on a full charge.
- **Charging Time:** Approximately 2-3 hours for a full charge.
- **Charging Recommendation:** Always use the USB cable provided with the controller for charging. Avoid using the controller while it is charging.
- **Automatic Sleep Mode:** The controller will automatically enter sleep mode if the console screen is turned off, or if no button is pressed for more than 1 minute.

LONG WORKING HOURS BUILT

Tip: Fully charged before first use!



Image 7.1: Illustration of the controller's 1500mAh battery, indicating play and charge times.

8. MAINTENANCE

To ensure the longevity and optimal performance of your MYSTILUCK Wireless Controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.

- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts.
- **Charging:** Always use the provided USB cable for charging and ensure the charging port is free of debris.

9. TROUBLESHOOTING

If you encounter any issues with your MYSTILUCK Wireless Controller, please refer to the following common solutions:

- **Controller Not Connecting/Pairing:**
 - Ensure the controller is sufficiently charged.
 - During initial pairing, do not touch the joysticks.
 - Try resetting the controller (refer to specific reset instructions if available, usually a small pinhole button).
 - Ensure your device's Bluetooth is enabled and discoverable.
- **Joystick Drift:**
 - The controller uses Hall Effect sensors designed to prevent drift. If you experience drift, ensure the controller was not touched during initial pairing.
 - If the issue persists, contact customer support for assistance.
- **Charging Issues:**
 - Use only the USB cable provided with the controller.
 - Avoid using the controller while it is charging, as this can sometimes lead to misinterpretations of charging status.
 - Ensure the charging port and cable are free from damage or debris.
- **RGB Lighting Not Changing Color/Mode:**
 - To change color: Press the **Light button** and the **Left Joystick** simultaneously.
 - To change mode: Press the **Light button** and the **Right Joystick** simultaneously.

10. SPECIFICATIONS

Model Number	SZ-4015B
Dimensions	6.4 x 6.2 x 2.5 inches
Item Weight	6 ounces
Battery Capacity	1500mAh (1 A battery included)
Play Time	6-8 hours (approx.)
Charging Time	2-3 hours (approx.)
Manufacturer	MYSTILUCK
Release Date	July 2, 2025

11. WARRANTY & SUPPORT

MYSTILUCK is committed to providing quality products. If you encounter any quality problems with your controller, please contact our store directly. We will offer a replacement to address any manufacturing defects or performance issues

covered under our quality assurance policy.

For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official MYSTILUCK support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question