

ECONTROLLY MAG524

ECONTROLLY MAG524 Replacement Remote Control User Manual

Model: MAG524

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY MAG524 Replacement Remote Control. This remote is designed to function as a direct replacement for original remote controls of various INFOMIR Linux MAG set-top box models without requiring any programming or pairing.

Compatible Models:

- INFOMIR Linux MAG 250
- INFOMIR Linux MAG 254
- INFOMIR Linux MAG 256
- INFOMIR Linux MAG 322
- INFOMIR Linux MAG 324
- INFOMIR Linux MAG 424
- INFOMIR Linux MAG 524
- INFOMIR Linux MAG 524W3
- INFOMIR Linux MAG 544



Figure 1: Front view of the ECONTROLLY MAG524 Replacement Remote Control.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 2: Battery compartment with cover removed, showing where to insert AAA batteries.

2.2 Initial Use

This remote control requires **no programming or pairing**. Once batteries are installed, it is ready for

immediate use with compatible INFOMIR Linux MAG set-top boxes. Simply point the remote at your device and begin operation.

3. OPERATING INSTRUCTIONS

The ECONTROLLY MAG524 remote control provides full functionality for your compatible INFOMIR Linux MAG set-top box. Familiarize yourself with the button layout for optimal use.



Figure 3: Angled view highlighting the ergonomic design and button arrangement.

3.1 Key Functions

- **Power Button** (⏻): Turns the set-top box on or off.
- **Mute Button** (🔇): Mutes or unmutes the audio.
- **Volume Up/Down** (V+/V-): Adjusts the audio volume.
- **Channel Up/Down** (P+/P-): Changes channels.
- **Navigation Pad** (Up, Down, Left, Right): Navigates through menus and options.
- **OK Button**: Confirms selections.

- **Home Button** (🏠): Returns to the main menu or home screen.
- **Back Button** (↶): Returns to the previous screen or menu.
- **APP Button**: Accesses applications menu.
- **PIP Button**: Picture-in-Picture function (if supported by device).
- **EPG Button**: Electronic Program Guide.
- **Numeric Keypad (0-9)**: Direct channel entry and text input.

Ensure a clear line of sight between the remote control and the INFOMIR Linux MAG set-top box for proper operation.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and markings.

4.3 Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	• Batteries are depleted or incorrectly inserted. • Obstruction between remote and device. • Remote control is too far from the device.	• Replace batteries with new ones, ensuring correct polarity. • Remove any objects blocking the signal path. • Move closer to the set-top box.
Buttons are unresponsive or sticky.	• Dirt or debris under buttons. • Internal malfunction.	• Clean the remote control as described in Section 4.2. • If the issue persists after cleaning and battery replacement, contact support.

6. SPECIFICATIONS

Model Number	MAG524
Brand	ECONTROLLY

Compatible Devices	INFOMIR Linux MAG Set-Top Boxes (MAG 250, 254, 256, 322, 324, 424, 524, 524W3, 544)
Special Feature	No Programming Required
Color	Black
Product Dimensions	5 x 1 x 0.5 inches (approximately 12.7 x 2.54 x 1.27 cm)
Item Weight	1 ounce (approximately 28 grams)
Power Source	2 x AAA Batteries (not included)



7. SUPPORT

For any questions regarding the compatibility or functionality of your ECONTROLLY MAG524 Replacement Remote Control, please contact the seller or manufacturer. Providing your product details and the model of your set-top box will assist in resolving any inquiries efficiently.

Note: There is no explicit warranty information provided for this product. Please refer to your purchase documentation or contact the seller for details regarding returns or guarantees.