

[manuals.plus](#) /

› [CREATE](#) /

› [CREATE WIND CLEAR STUDIO S Ceiling Fan with Light User Manual](#)

CREATE WIND CLEAR STUDIO S

CREATE WIND CLEAR STUDIO S Ceiling Fan with Light User Manual

Model: WIND CLEAR STUDIO S

1. INTRODUCTION

Thank you for choosing the CREATE WIND CLEAR STUDIO S Ceiling Fan with Light. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read it thoroughly before use and retain it for future reference.

The WIND CLEAR STUDIO S is a silent ceiling fan featuring a 40W DC motor, a summer/winter function, and 6 speed settings. It includes retractable blades and an integrated LED light with 3 adjustable color temperatures. A programmable timer allows for automatic shut-off.



Image 1.1: The CREATE WIND CLEAR STUDIO S Ceiling Fan with Light, featuring a white body and light wood trim, with its remote control.

2. SAFETY INSTRUCTIONS

- Ensure the power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with local wiring regulations.
- The mounting structure must be capable of supporting the weight of the fan (minimum 15 kg).
- Maintain a minimum clearance of 2.3 meters (7.5 feet) from the floor to the fan blades.
- Do not insert objects into the path of the rotating blades.
- This appliance is for indoor use only.
- Keep the remote control out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation. If any parts are missing or damaged, contact customer support.

- Ceiling Fan Motor Unit with Integrated LED Light

- Retractable Fan Blades (3 units)
- Remote Control
- Mounting Bracket
- Downrods (2 lengths for adjustable height)
- Hardware Kit (screws, washers, wire nuts)
- User Manual and Assembly Guide

4. SETUP AND INSTALLATION

Detailed installation instructions are provided in the separate assembly guide included with your product. Please follow those instructions carefully. This fan includes two suspension rods, allowing for flexible installation height to suit your space.

Ensure the fan is securely mounted to a ceiling joist or a suitable support structure. All electrical connections must be made correctly and safely.



Image 4.1: The ceiling fan installed in a room, demonstrating its aesthetic integration.



Image 4.2: Another view of the ceiling fan installed, highlighting its design and lighting capabilities.

5. OPERATING INSTRUCTIONS

Your CREATE WIND CLEAR STUDIO S fan is controlled via the included remote control. Ensure batteries are correctly inserted into the remote.

5.1 Remote Control Functions



Image 5.1: The remote control for the ceiling fan, illustrating buttons for light control, fan speed adjustment (1-6), timer settings (1H, 2H, 4H), and a mute function.

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Use the speed buttons (1-6) to adjust the fan's rotation speed. There are 6 available speeds.
- **Light Control:** Press the light button to turn the LED light on or off.
- **Light Color Temperature:** Cycle through the 3 available light color temperatures (Warm White 2700K, Natural White 3300K, Cool White 4000K) by pressing the light temperature button.

- **Timer Function:** Set the fan to automatically turn off after 1, 2, or 4 hours using the respective timer buttons.
- **Mute Function:** Press the mute button to silence operational beeps.

5.2 Summer/Winter Function

The fan features a reversible motor for year-round use. This function helps optimize air circulation for both cooling and heating.

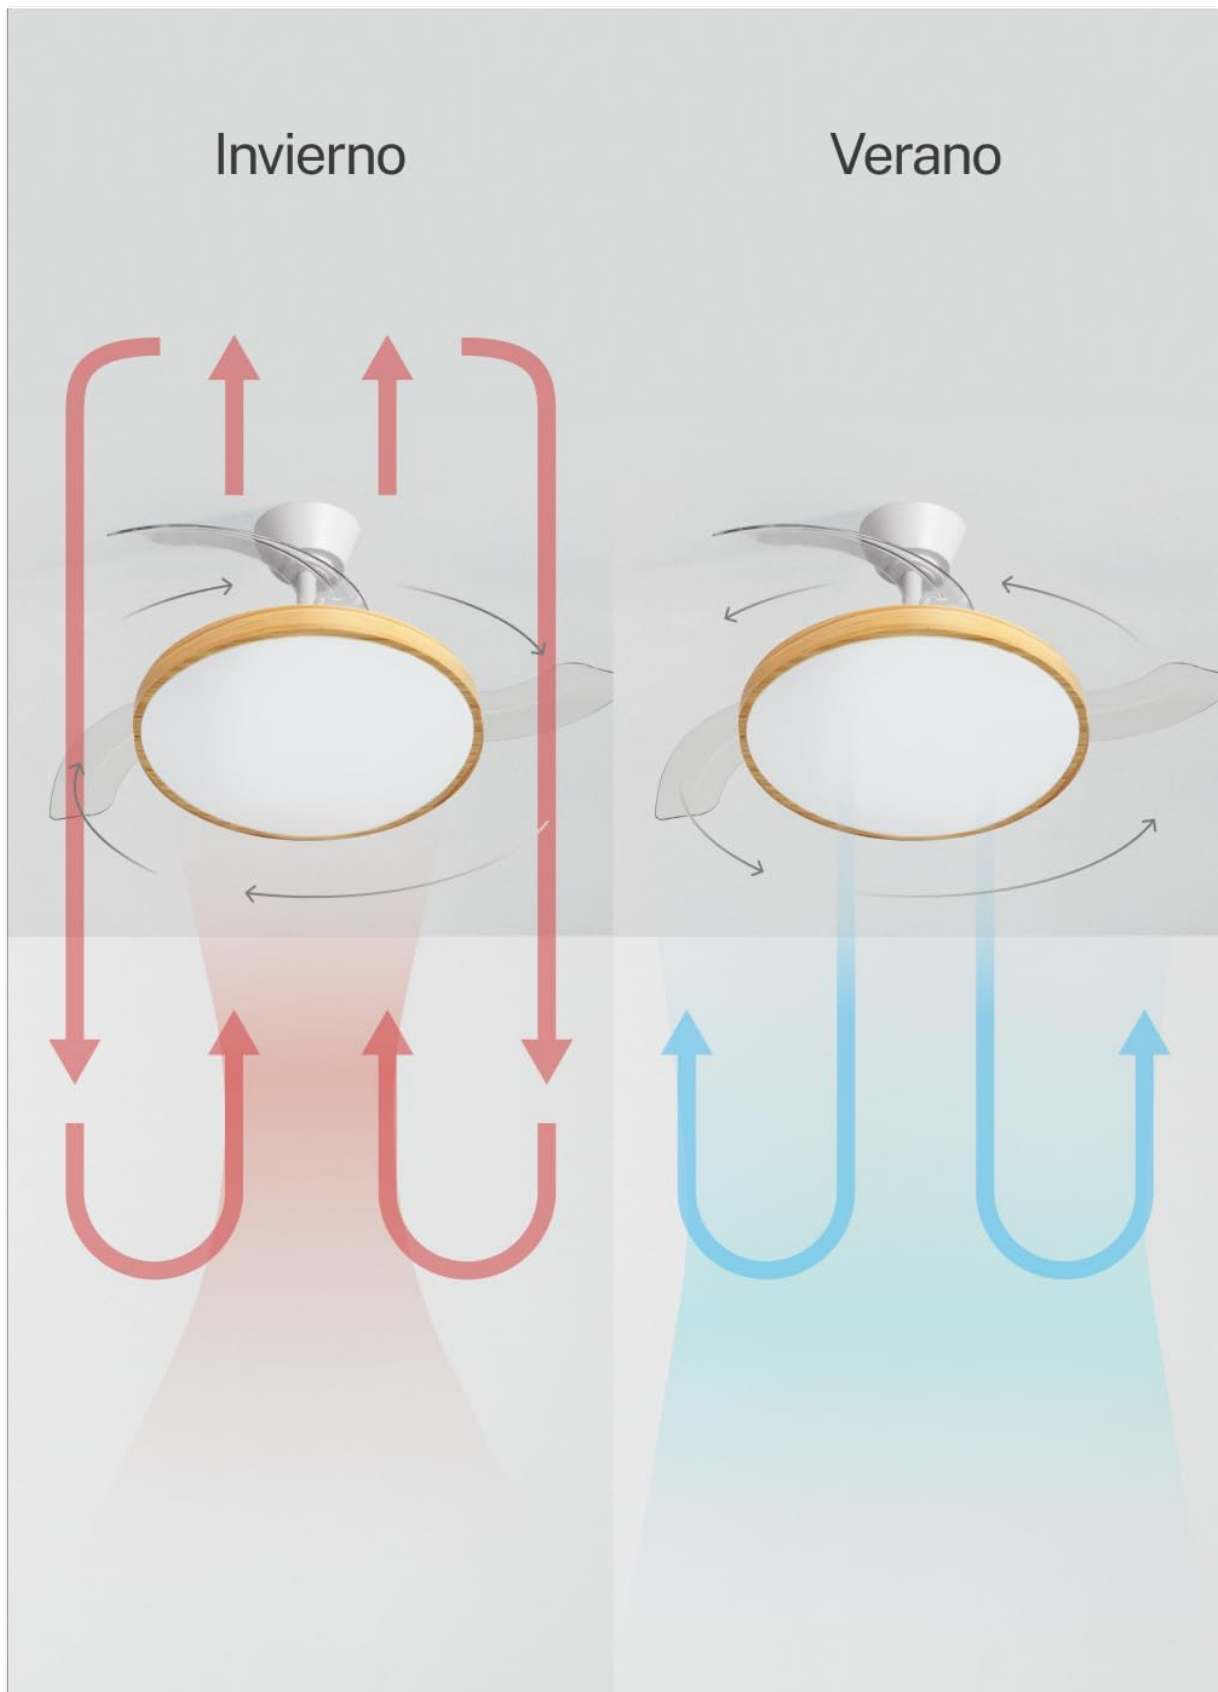


Image 5.2: Diagram showing air circulation for summer mode (downward airflow for cooling) and winter mode (upward airflow to redistribute warm air).

- **Summer Mode (Counter-clockwise rotation):** Creates a downward airflow, generating a cooling breeze.
- **Winter Mode (Clockwise rotation):** Creates an upward airflow, circulating warm air trapped near the ceiling throughout the room.

Refer to your assembly guide for instructions on how to switch between summer and winter modes, typically via a switch on the fan body or remote control.

5.3 Light Color Temperature Adjustment

The integrated LED light offers three distinct color temperatures to suit different moods and activities.

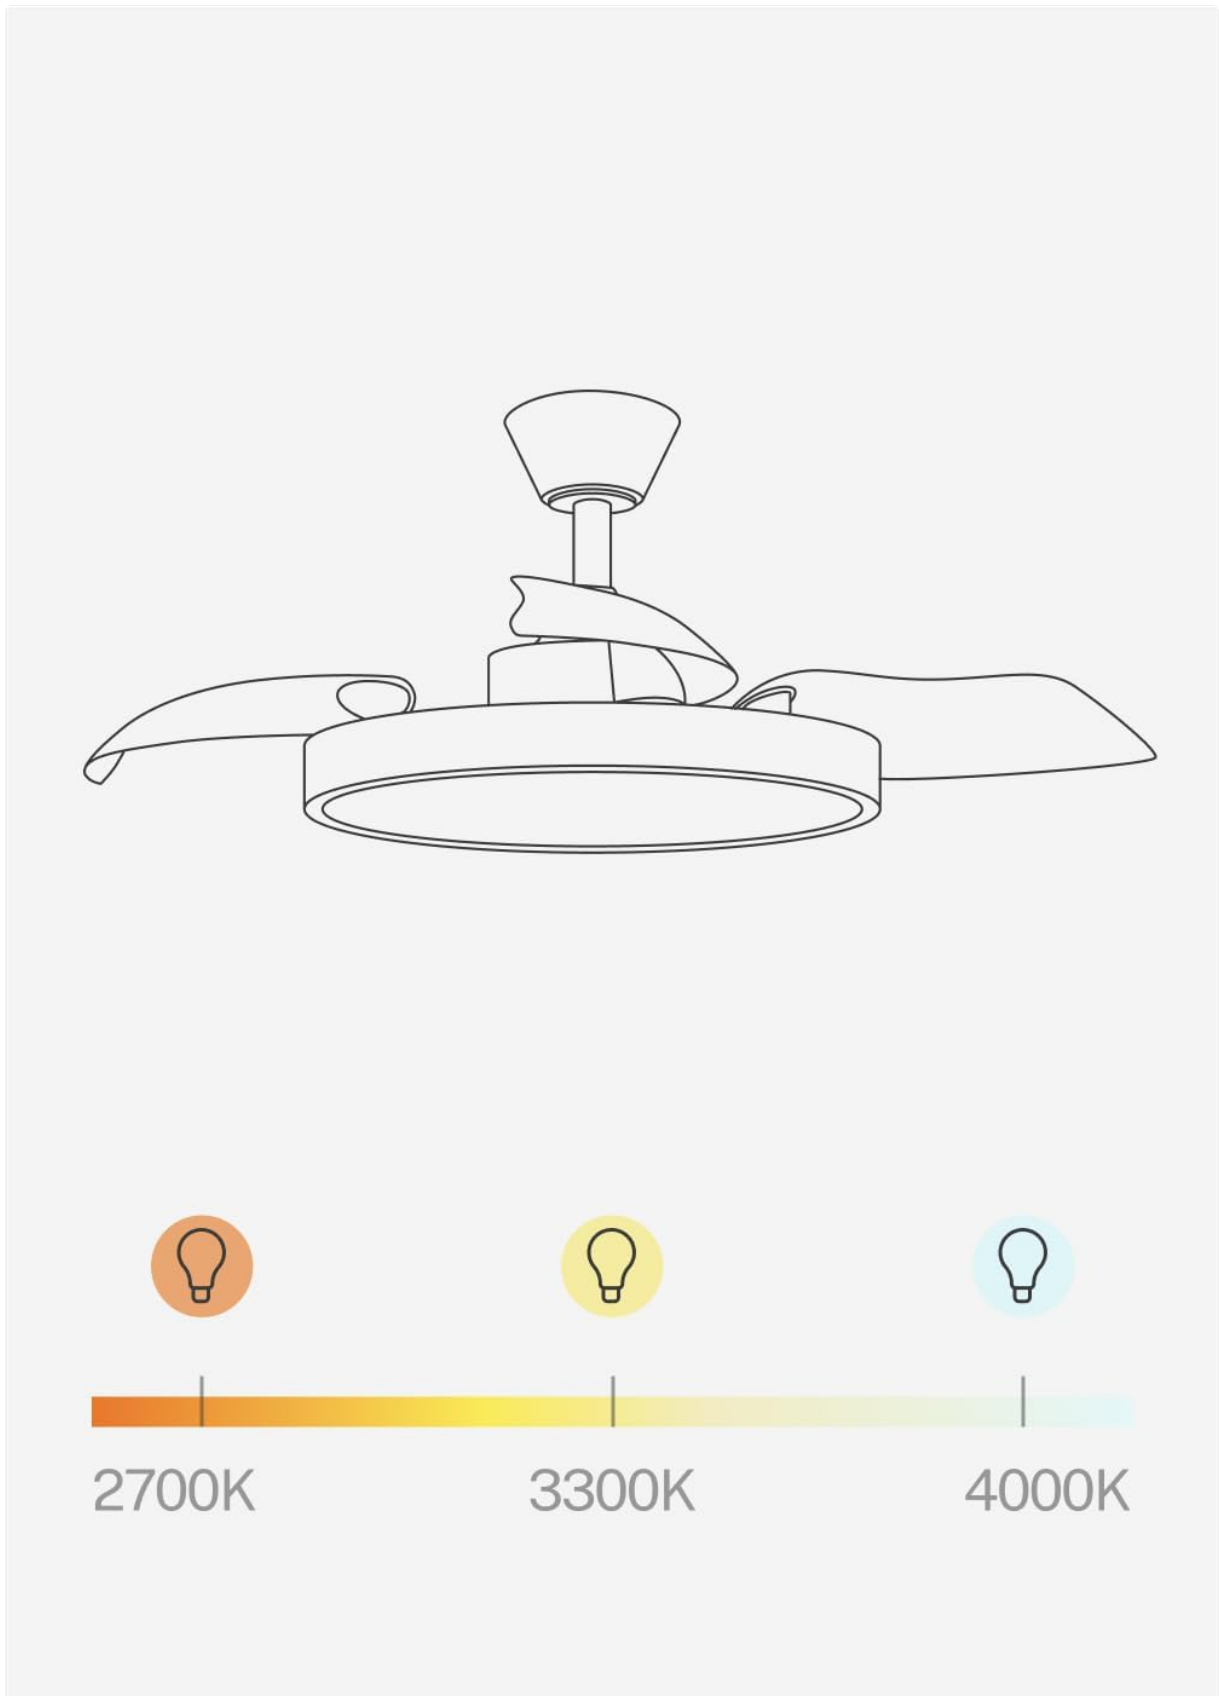


Image 5.3: Illustration of the three adjustable light color temperatures: 2700K for warm light, 3300K for natural light, and 4000K for cool light.

- **2700K (Warm White):** Ideal for relaxation and creating a cozy atmosphere.
- **3300K (Natural White):** Suitable for general illumination and daily activities.
- **4000K (Cool White):** Best for tasks requiring clear visibility and concentration.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing regularly with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Blade Inspection:** Periodically check the fan blades for any signs of damage or imbalance.
- **Tightness of Screws:** Over time, screws may loosen. Check and tighten all screws on the mounting bracket and blade attachments annually.
- **Light Source:** The integrated LED light source is designed for long life and is generally not user-replaceable. If the light fails, contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Fan does not start	No power supply; loose wiring; remote control battery low.	Check circuit breaker; ensure all connections are secure; replace remote control batteries.
Light does not work	No power supply; loose wiring; LED failure.	Check power; ensure connections are secure; contact support if LED is faulty.
Fan wobbles excessively	Loose mounting screws; unbalanced blades; incorrect installation.	Tighten all mounting screws; ensure blades are securely attached and balanced; re-check installation steps.
Remote control not working	Low or dead batteries; remote not paired (if applicable); obstruction.	Replace batteries; ensure clear line of sight to receiver; refer to assembly guide for pairing instructions.

8. SPECIFICATIONS

Feature	Detail
Brand	CREATE
Model	WIND CLEAR STUDIO S
Color	Blanco Y Madera Clara (White and Light Wood)
Diameter	91 Centimeters
Power	40 Watts (DC Motor)
Voltage	240 Volts
Number of Speeds	6
Energy Efficiency	A to G
Noise Level	40 Decibels
Light Source Type	LED (3 Color Temperatures)

Feature	Detail
Control Method	Remote Control
Installation Type	Semi-flush mount
Indoor/Outdoor Use	Indoor
Timer	1H, 2H, 4H
Special Features	Retractable Blades, Summer/Winter Function



Image 8.1: The fan is suitable for rooms up to approximately 13 square meters.

9. WARRANTY AND SUPPORT

Your CREATE WIND CLEAR STUDIO S Ceiling Fan with Light comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.






 

 


For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact CREATE customer support. You can find more information and contact details on the official

CREATE brand store:

[Visit the CREATE Brand Store](#)

© 2025 CREATE. All rights reserved.

Related Documents - WIND CLEAR STUDIO S

  <small>CEILING FAN WITH RETRACTABLE BLADES VENTILADOR DE TECHO CON ASPAS RETRÁCTILES</small> USER MANUAL	<p>CREATE WIND CLEAR Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND CLEAR ceiling fan with retractable blades. Includes safety instructions, parts list, remote control guide, installation requirements, and troubleshooting tips.</p>
  <small>CEILING FAN WITH RETRACTABLE BLADES VENTILADOR DE TECHO CON ASPAS RETRÁCTILES</small> USER MANUAL	<p>CREATE WIND CLEAR Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE WIND CLEAR ceiling fan with retractable blades, detailing installation, operation, safety, and troubleshooting.</p>
  <small>CEILING FAN SUMMER-WINTER FUNCTION VENTILADOR DE TECHO FUNCIÓN VERANO INVIERNO</small> USER MANUAL	<p>CREATE WIND TUBE Ceiling Fan User Manual: Installation, Safety, and Operation Guide</p> <p>Download the CREATE WIND TUBE ceiling fan user manual. Find detailed instructions for installation, safety precautions, parts list, remote control operation, and summer-winter function.</p>
  Wind Modern <small>User manual Manual de instrucciones</small>	<p>CREATE Wind Modern Ceiling Fan User Manual</p> <p>Comprehensive user manual for the CREATE Wind Modern ceiling fan, detailing installation, operation, and safety instructions in multiple languages.</p>
  Wind Clear Studio <small>User manual Manual de instrucciones</small>	<p>CREATE Wind Clear Studio User Manual</p> <p>Comprehensive user manual for the CREATE Wind Clear Studio ceiling fan, covering installation, operation, safety instructions, parts list, remote control, and app connectivity for optimal and safe use.</p>

CREATE



Wind Calm Line
Handmatige montage

[CREATE Wind Calm Line Ceiling Fan Installation Manual](#)

Comprehensive installation guide for the CREATE Wind Calm Line ceiling fan, detailing steps from mounting to final assembly and troubleshooting.