

[Manuals.plus](#) /

› [Snrigw](#) /

› Snrigw RC833-G Voice Remote Control User Manual for TCL Smart TVs

Snrigw RC833-G

Snrigw RC833-G Voice Remote Control User Manual

For TCL Smart TVs Compatible with RC833 Series

1. INTRODUCTION

This manual provides instructions for the Snrigw RC833-G Replacement Voice Remote Control. This remote is designed to be compatible with various TCL Smart TV models, offering seamless control and voice command functionality. Please read this manual thoroughly before using the remote control.

2. PACKAGE CONTENTS

- Snrigw RC833-G Voice Remote Control (1 unit)
- User Manual (this document)

Note: AAA batteries are not included and must be purchased separately.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Requires Two AAA batteries

Not included by default. Additional purchase required.



Durable ABS Plastic



Recycled Material Option



Figure 3.1: Battery compartment and AAA battery requirement. Batteries are not supplied with the remote control.

3.2 Initial Pairing with Your TCL Smart TV

The Snrigw RC833-G remote control is designed for immediate use with compatible TCL Smart TVs without complex programming. However, for voice control functionality, initial pairing with your TV is required. The exact pairing process may vary slightly depending on your specific TCL TV model. Generally, follow these steps:

1. Ensure your TCL Smart TV is powered on.
2. Insert fresh AAA batteries into the remote control as described in Section 3.1.
3. Point the remote control towards your TV.
4. On your TCL TV, navigate to the **Settings** menu.
5. Look for options such as **Remotes & Accessories**, **Bluetooth Settings**, or **Remote Control Pairing**.
6. Select the option to **Add Device** or **Pair New Remote**.
7. Follow the on-screen instructions. You may need to press and hold specific buttons on the new remote (e.g., the "OK" button and "Home" button simultaneously, or the "Back" button and "Home" button) for a few seconds until a pairing indicator appears on the TV screen or the remote's LED flashes.

8. Once paired, a confirmation message will appear on your TV screen.

If you encounter difficulties, refer to your TCL TV's user manual for specific remote pairing instructions.



Figure 3.2: The remote control is ready for use after battery installation and pairing for voice functions.

4. OPERATING THE REMOTE CONTROL

4.1 Button Functions Overview

The Snrigw RC833-G remote control features a standard layout for intuitive navigation and control of your TCL Smart TV. Below is a general overview of key button functions:

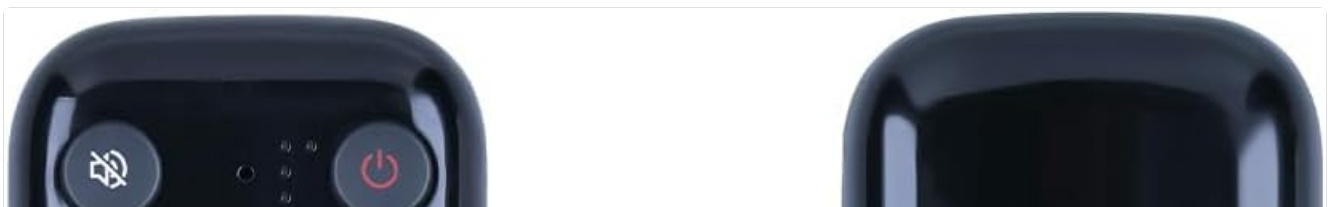






Figure 4.1: Front and back view of the Snrigw RC833-G Voice Remote Control.

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button (↶):** Returns to the previous screen or menu.
- **Home Button (△):** Accesses the TV's home screen or smart hub.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button ():** Mutes or unmutes the TV's audio.
- **Voice Command Button ():** Activates the voice assistant for hands-free control.
- **App Shortcut Buttons:** Dedicated buttons for popular streaming services (e.g., Netflix, YouTube, Prime Video, Web).

4.2 Using Voice Commands

After successful pairing, you can utilize the voice command feature for enhanced control:

1. Press and hold the **Voice Command Button ()** on the remote control.
2. Speak clearly into the microphone located on the remote.
3. Release the button when you have finished speaking.

Examples of voice commands include: "Open Netflix," "Search for action movies," "Increase volume," "Switch to HDMI 1," or "What's the weather?"

4.3 Signal Stability and Range

The remote control is designed to provide stable signal transmission over a significant range and at various angles, ensuring reliable operation from different positions within your viewing area.



Figure 4.2: The remote offers a 120-degree multi-angle control and an effective range of up to 26 feet.

5. MAINTENANCE

5.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or it stops functioning. Refer to Section 3.1 for battery installation instructions. Always replace both batteries at the same time with new AAA batteries.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- **Distance:** Make sure you are within the effective operating range (approximately 26 feet).
- **TV Power:** Confirm that the TV is powered on.

6.2 Voice Commands Not Working

- **Pairing:** Ensure the remote control is properly paired with your TCL Smart TV for voice functionality. Refer to Section 3.2.
- **Microphone:** Speak clearly and directly into the microphone on the remote control.
- **Button Press:** Ensure you are pressing and holding the Voice Command button while speaking.
- **TV Settings:** Check your TV's settings to ensure voice control is enabled.

6.3 Intermittent Functionality

- **Low Batteries:** Weak batteries can cause intermittent performance. Replace them.
- **Interference:** Other electronic devices or strong light sources might interfere with the signal. Try moving closer to the TV or removing potential sources of interference.

7. SPECIFICATIONS

Brand	Snrigw
Model	RC833-G
Compatible Devices	TCL Smart Televisions (Models: 65C845, 50C845, 55C845, 75C845, 65C745, 43LC645, and other RC833 Series)
Power Source	2 x AAA Batteries (not included)
Special Feature	Voice Control, No Programming Required (for basic functions)
Product Dimensions	8.15 x 1.69 x 0.83 inches (20.7 x 4.3 x 2.1 cm)
Item Weight	2.4 ounces (68 grams)
Material	Durable ABS Plastic

8. SUPPORT

For any queries or assistance regarding your Snrigw RC833-G Voice Remote Control, please contact our customer support. We are committed to providing reliable quality and dedicated support to ensure your satisfaction. Please refer to the retailer's website or your purchase documentation for specific contact information.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F6K4Q4PT>

More documents and user manuals: <https://manuals.plus/>