

huslog HUS1026

Huslog Portable Wireless Blender TO GO 315W Instruction Manual

Model: HUS1026

INTRODUCTION

Thank you for choosing the Huslog Portable Wireless Blender TO GO 315W. This manual provides essential information for the safe and efficient use of your new blender. Please read these instructions carefully before first use and keep them for future reference.

PRODUCT COMPONENTS

The Huslog TO GO 315W blender comes with the following components:

- Blender Base with Motor and Blades
- 580 ml Blending Cup
- Lid with Integrated Handle
- Magnetic Charging Cable
- Cleaning Brush
- Bottom Cap (for converting blending cup to a portable bottle)



Figure 1: All components of the Huslog Portable Wireless Blender TO GO 315W. This includes the main blender unit, the transparent blending cup, the lid with a carrying handle, a magnetic charging cable, a small cleaning brush, and a separate bottom cap.

SETUP

1. Initial Charging

Before first use, fully charge the blender. Connect the magnetic charging cable to the charging port on the blender base and plug the other end into a USB power source (e.g., laptop, power bank, car charger). The multi-LED display will indicate the charging status. A full charge allows for up to 20 blending cycles.



Figure 2: The magnetic charging cable connecting to the blender base, illustrating convenient charging in various locations.

2. Assembly

1. Ensure the blender base is clean and dry.
2. Place the blending cup onto the blender base. Align the cup with the base and twist clockwise until it is securely locked. The blender features a safety lock system that prevents operation if the parts are not properly attached.
3. Add your ingredients to the blending cup.
4. Securely attach the lid to the blending cup by twisting it clockwise.

OPERATING INSTRUCTIONS

1. Preparing Ingredients

Cut fruits and vegetables into small pieces (approximately 1-2 cm) to ensure optimal blending. Do not overfill the cup; the maximum capacity is 580 ml. For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice.



Figure 3: The blending cup filled with ingredients, indicating the 580 ml capacity for preparing smoothies.

2. Blending

Once the cup is securely attached and filled with ingredients, press the power button on the blender base to start blending. The 6 stainless steel blades and 315W motor will blend ingredients quickly, typically within 20 seconds for a smooth consistency. The multi-LED display shows the battery level and operational status.



315W



Figure 4: The blender in operation, demonstrating its 315W power for efficient blending.



Figure 5: Detailed view of the blender's control panel, LED display, and the robust six-blade system.

3. Safety Features

The blender is equipped with a child safety lock. It will not operate if the blending cup is not correctly assembled and locked onto the base. This prevents accidental activation and ensures safe use.



Figure 6: Visual representation of the safety lock mechanism, ensuring the blender only operates when correctly assembled.

4. Portability

The blender features a comfortable handle integrated into the lid, making it easy to carry to the gym, work, or on outings. After blending, you can replace the blender base with the provided bottom cap to convert the blending cup into a portable drinking bottle.



Figure 7: The integrated handle on the lid, designed for easy portability of the blender.

MAINTENANCE AND CLEANING

1. Cleaning After Use

For easy cleaning, detach the blending cup from the motor base. Rinse the cup and lid under running water. Use the provided cleaning brush to clean around the blades and inside the cup. The blender base should be wiped clean with a damp cloth; do not immerse the motor base in water.

2. Storage

Store the blender in a clean, dry place when not in use. Ensure all parts are dry before storing to prevent mold or odors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Blender does not turn on.	Low battery. Cup not securely attached.	Charge the blender using the magnetic cable. Ensure the blending cup is twisted and locked firmly onto the base.
Ingredients are not blending smoothly.	Too many ingredients. Ingredients are too large or hard. Insufficient liquid.	Reduce the amount of ingredients. Cut ingredients into smaller pieces. Add more liquid (water, milk, juice).
Blender stops during operation.	Overload protection activated. Low battery.	Remove some ingredients, add more liquid, or cut ingredients smaller. Restart after a few minutes. Charge the blender.

SPECIFICATIONS



Figure 8: Dimensions of the Huslog Portable Wireless Blender, showing a height of 30 cm and a width of 8.2 cm.

Feature	Detail
Model Number	HUS1026
Power	315 Watts

Feature	Detail
Voltage	11.1 Volts
Capacity	580 Milliliters
Blades	6 Stainless Steel Blades
Dimensions (L x W x H)	8.2 x 8.2 x 30 cm
Weight	720 g
Material	Acrylic
Power Source	Battery Powered (Lithium-ion)
Special Features	Wireless, Compact, Lightweight, Durable, Portable, Safety Lock, Multi-LED Display

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, replacement parts, or any inquiries, please contact Huslog customer service through the retailer where the product was purchased.