

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WORKPRO](#) /

› [WORKPRO Steam Portable Carpet and Upholstery Cleaner \(Model W125369AE\) - Instruction Manual](#)

WORKPRO W125369AE

WORKPRO Steam Portable Carpet and Upholstery Cleaner

Model: W125369AE

Brand: WORKPRO

INTRODUCTION

This manual provides detailed instructions for the safe and effective operation and maintenance of your WORKPRO Steam Portable Carpet and Upholstery Cleaner. Please read all instructions carefully before use and retain this manual for future reference.

PRODUCT COMPONENTS

The WORKPRO Steam Portable Carpet and Upholstery Cleaner (Model W125369AE) includes the following components:

- Steam Carpet and Upholstery Cleaner Unit (x1)
- Multi-functional Tool (x1)
- Ironing Brush (x1)
- Window Cleaning Brush (x1)
- Steam Nozzle (x1)
- Hose Bracket (x2)
- Handle Holder (x1)
- Cleaning Cloth (x1)
- Hose (x1)
- Multi-fabric Cleaner (x1)
- Measuring Cup (x1)



Multi-Functional Tool



Ironing Brush



Window Cleaning Brush



Steam Nozzle

Image: All included accessories for the WORKPRO Steam Portable Carpet and Upholstery Cleaner.

SETUP

1. **Attach the Hose:** Connect the hose securely to the designated port on the main unit. Ensure it clicks into place.
2. **Install Hose Brackets and Handle Holder:** Attach the hose brackets and handle holder to the main unit as shown in the diagram for convenient storage and organization.
3. **Select and Attach Cleaning Tool:** Choose the appropriate cleaning tool (Multi-functional Tool, Ironing Brush, Window Cleaning Brush, or Steam Nozzle) for your task and attach it firmly to the end of the hose.
4. **Fill the Clean Water Tank:** Remove the clean water tank. Fill it with water (cold or hot, depending on desired mode). If using the provided Multi-fabric Cleaner, add one capful to the water tank using the measuring cup. Do not exceed the MAX fill line. Reinsert the tank securely.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet.

DUAL TANK DESIGN

Refuse Secondary Pollution

Clean Water Tank
44 OZ

Dirty Water Tank
34 OZ

Cleaner is included

Note: When dirty water reaches the MAX line,
the steam cleaner shuts off automatically

Image: Dual tank design with clean and dirty water tanks, and included multi-fabric cleaner.

EXTENDED & MOBILE DESIGN

Easy to reach and convenient to use



Image: Extended hose and power cord for enhanced mobility during cleaning.

OPERATING INSTRUCTIONS

The unit features a touch panel for selecting various cleaning modes:

- **Cold Water Mode:** For general cleaning tasks.
- **Hot Water Mode:** For more stubborn stains, reaching 140.5°F (60.3°C).
- **Steam Only Mode:** For deep sanitization and refreshing surfaces, reaching 216.5°F (102.5°C).
- **Steam & Vacuum Mode:** Combines deep steam cleaning with dirty water extraction.

To Operate:

1. **Select Mode:** On the touch panel, select your desired cleaning mode (Cold Water, Hot Water, Steam Only, or Steam & Vacuum).
2. **Power On:** Press the Power button.
3. **Preheating:** If using Hot Water or Steam modes, allow approximately 30 seconds for the unit to preheat. The indicator light will change when ready.

4. **Activate Water/Steam:** Press the 'Water/Steam' button on the control panel to begin dispensing water or steam through the attached tool.
5. **Clean Surface:** Move the cleaning tool slowly over the surface to be cleaned. For best results, apply gentle pressure.
6. **Turn Off:** Press the Power button to turn off the unit when finished.

DEEP CLEAN WITH 4 MODES



Image: Four versatile cleaning modes for different cleaning needs.

30S FAST STEAM HEATING

Steam Starts Quickly for Efficient Cleaning



Image: Fast steam heating for efficient cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your cleaner.

- **Empty and Clean Dirty Water Tank:** After each use, remove the dirty water tank and empty its contents. Rinse the tank thoroughly with clean water.
- **Clean Attachments:** Detach all cleaning tools and rinse them under running water. Ensure no debris is left in the nozzles or brushes.
- **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth.
- **Cord Storage:** Wrap the power cord neatly around the designated storage hooks.
- **Product Care:** Hand wash all removable components as needed.

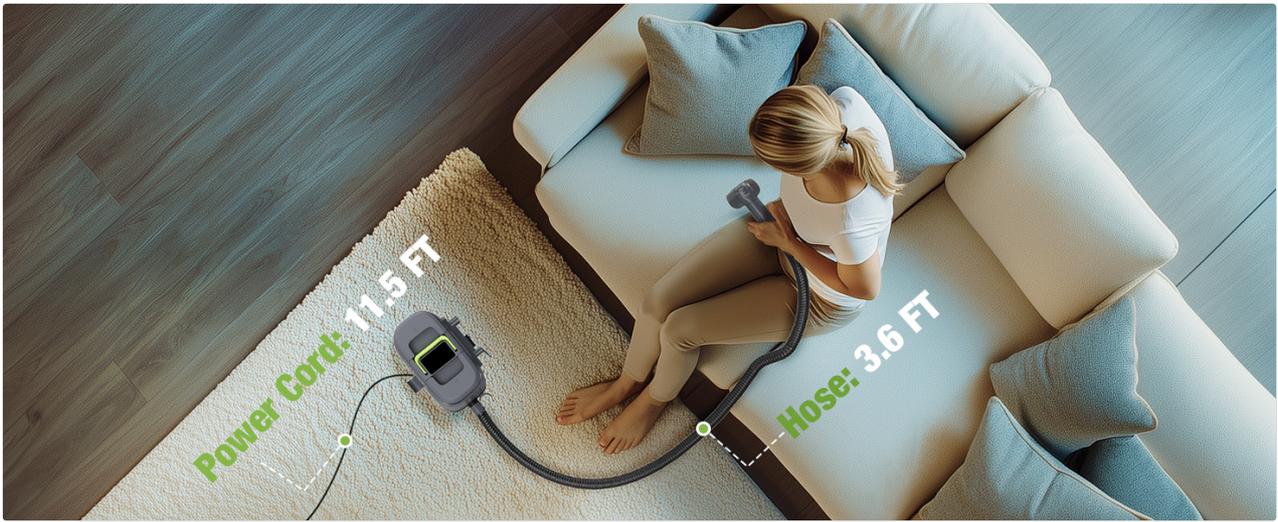


Image: Emptying the dirty water tank after use.

TROUBLESHOOTING

If you encounter issues with your WORKPRO Steam Portable Carpet and Upholstery Cleaner, refer to the following common solutions:

- **Warning Light On / Machine Stops Working:** This often indicates an issue with the water tanks.
 - a. **No water in the clean water tank:** Ensure the clean water tank is filled to the appropriate level.
 - b. **Dirty water tank exceeds MAX line:** Empty and clean the dirty water tank. The machine will automatically stop if the dirty water reaches the maximum level.
 - c. **Dirty water tank electrodes covered with dirt or debris:** Remove the dirty water tank, clean the electrodes, and wipe them dry.
- **No Steam/Water Dispensing:** Ensure the unit is properly plugged in, the correct mode is selected, and the 'Water/Steam' button is pressed. Allow sufficient preheating time for hot water/steam modes.
- **Reduced Suction:** Check if the dirty water tank is full or if there are any blockages in the hose or cleaning tool.

Video: Official WORKPRO Steam Carpet Cleaner Troubleshooting guide for common issues.

SPECIFICATIONS

Brand	WORKPRO
Model Name	W125369AE
Item Weight	12 Pounds (5.44 kg)
Product Dimensions	12.91"D x 8.86"W x 11.22"H (32.8cm D x 22.5cm W x 28.5cm H)
Power Source	Corded Electric
Clean Water Tank Capacity	44 Fluid Ounces (1.3 L)
Dirty Water Tank Capacity	34 Fluid Ounces (1 L)

Maximum Steam Temperature	216.5°F (102.5°C)
Maximum Hot Water Temperature	140.5°F (60.3°C)
Special Features	Touch Screen, Steam & Heating System, Swivel Wheels
Surface Recommendation	Carpet, Upholstery, Hard Floors, Windows, Kitchen Surfaces

SAFETY INFORMATION

- Empty the dirty water tank before exceeding the MAX line to ensure normal use. The spot cleaner will automatically stop when the water reaches the Max level.
- Do not point the steam nozzle at people or animals.
- Keep the brush head facing downward during use to prevent burns.
- Avoid directing steam or liquids at devices with electrical components.